

# Room thermostat with display VARIA 826 S KNX



VARIA 826 S KNX

8269210 /8269211

# Contents

<b>1</b>	<b><i>Functional characteristics</i></b> .....	<b>6</b>
1.1	<b>Integrated functions</b> .....	<b>6</b>
1.2	<b>Special features</b> .....	<b>6</b>
1.3	<b>Operation</b> .....	<b>7</b>
<b>2</b>	<b><i>Technical data</i></b> .....	<b>8</b>
2.1	<b>Technical data</b> .....	<b>8</b>
<b>3</b>	<b><i>"Varia 824 / 826 S KNX EIB V1.2" application programme</i></b> .....	<b>9</b>
3.1	<b>Selection in the product database</b> .....	<b>9</b>
3.2	<b>Communication Objects</b> .....	<b>10</b>
3.2.1	Description of objects.....	16
3.3	<b>Parameter</b> .....	<b>31</b>
3.3.1	Parameter pages.....	31
3.3.2	Parameter description .....	32
3.3.2.1	The General parameter page .....	32
3.3.2.2	The RTR setting parameter page.....	36
3.3.2.3	Heating setpoint values parameter page.....	40
3.3.2.4	Cooling setpoint values parameter page: .....	43
3.3.2.5	Heating control parameter page .....	44
3.3.2.6	Cooling control parameter page .....	47
3.3.2.7	Additional heating stage parameter page .....	51
3.3.2.8	Actual value parameter page .....	53
3.3.2.9	Fan stages parameter page.....	55
3.3.2.10	Setpoint value adjustment parameter page.....	56
3.3.2.11	Select display pages parameter page .....	58
3.3.2.12	Weather data parameter page .....	60
3.3.2.1	Weather forecast parameter page 1 .....	61
3.3.2.1	Parameter page page 1, forecast day. ....	62
3.3.2.1	Parameter pages page_1, time interval.....	63
3.3.2.1	Parameter pages page_1, weather. ....	64
3.3.2.1	Parameter pages page_1, temperature.....	65
3.3.2.1	Parameter pages page_1, precipitation.....	66
3.3.2.1	Parameter pages page_1, precipitation amount.....	67
3.3.2.1	Parameter pages page 1, wind force .....	68
3.3.2.2	Display objects parameter pages, page 1..5 .....	69
3.3.2.3	Page 1, line 1 to page 5, line 8 parameter pages .....	70
3.3.2.4	Text list parameter page .....	82
3.3.2.5	Time program channel 1 (for RTR) parameter page.....	83
3.3.2.6	Time program channel 2..8 parameter pages .....	85
<b>4</b>	<b><i>Start-up</i></b> .....	<b>88</b>
4.1	<b>Activate program mode</b> .....	<b>88</b>

<b>4.2</b>	<b>Settings menu.....</b>	<b>89</b>
4.2.1	PIN code.....	89
4.2.2	Date and time.....	90
4.2.3	Temperature.....	90
4.2.4	Time program.....	91
4.2.4.1	Time program overview page.....	92
4.2.4.2	Display, enter or change programs.....	94
4.2.5	Language.....	97
4.2.6	Display.....	98
4.2.7	System.....	98
<b>4.3</b>	<b>Freely programmable display pages.....</b>	<b>99</b>
4.3.1	Operation.....	101
4.3.2	Hints on setting up pages.....	103
4.3.3	Favourite page.....	105
4.3.3.1	Favourite page as standard display page.....	105
4.3.3.2	Favourite page as alarm page.....	105
<b>4.4</b>	<b>Troubleshooting.....</b>	<b>106</b>
<b>5</b>	<b>Typical applications.....</b>	<b>107</b>
<b>5.1</b>	<b>Show weather predictions on the weather forecast page.....</b>	<b>107</b>
5.1.1	Devices:.....	107
5.1.2	Overview.....	108
5.1.3	Objects and links.....	108
5.1.4	Important parameter settings.....	109
<b>5.2</b>	<b>Display weather data and air quality.....</b>	<b>110</b>
5.2.1	Devices:.....	110
5.2.2	Overview.....	110
5.2.3	Objects and links.....	110
5.2.4	Important parameter settings.....	111
<b>5.3</b>	<b>Blinds or shutter / awning control.....</b>	<b>113</b>
5.3.1	Devices:.....	113
5.3.2	Overview.....	113
5.3.3	Important parameter settings.....	113
5.3.3.1	Varia.....	113
5.3.3.2	JMG 4S.....	114
5.3.4	Objects and links.....	114
<b>5.4</b>	<b>Conservatory control.....</b>	<b>115</b>
5.4.1	Devices:.....	115
5.4.2	Overview.....	115
5.4.3	Objects and links.....	116
5.4.4	Important parameter settings.....	117
<b>5.5</b>	<b>Heating control, basic configuration.....</b>	<b>119</b>
5.5.1	Devices:.....	119
5.5.2	Overview.....	119
5.5.3	Objects and links.....	120
5.5.4	Important parameter settings.....	121
5.5.4.1	Varia.....	121
5.5.4.2	TA 2.....	121
5.5.4.3	Cheops drive.....	121

<b>5.6</b>	<b>Fan coil actuator control.....</b>	<b>122</b>
5.6.1	Devices:.....	122
5.6.2	Overview .....	122
5.6.3	Important parameter settings .....	123
5.6.3.1	Varia .....	123
5.6.3.2	FCA 1 .....	123
5.6.3.3	Presence detector.....	124
5.6.3.4	TA 2.....	124
5.6.4	Objects and links .....	125
<b>5.7</b>	<b>Heating control with 6 heating circuits and window monitoring for caretakers. 126</b>	
5.7.1	Devices:.....	126
5.7.2	Overview .....	127
5.7.3	Important parameter settings .....	128
5.7.3.1	Varia .....	128
5.7.3.2	TA 2.....	129
5.7.3.3	RAM 712.....	130
5.7.3.4	HMT 6.....	130
5.7.4	Objects and links .....	131
<b>6</b>	<b>Appendix.....</b>	<b>134</b>
<b>6.1</b>	<b>Weather forecasts with Meteodata 139 EFR KNX .....</b>	<b>134</b>
<b>6.2</b>	<b>Fan forced mode .....</b>	<b>135</b>
<b>6.3</b>	<b>PWM cycle .....</b>	<b>137</b>
6.3.1	Basic principle.....	137
6.3.2	Response to changes in the control variable .....	138
<b>6.4</b>	<b>Operating mode scene.....</b>	<b>139</b>
6.4.1	Principle .....	139
6.4.2	Saving scenes: .....	139
6.4.3	Calling scenes:.....	140
<b>6.5</b>	<b>Create and display scene telegrams.....</b>	<b>141</b>
6.5.1	Allot scene numbers text.....	142
6.5.1.1	Examples:.....	142
<b>6.6</b>	<b>Setpoint value adjustment .....</b>	<b>144</b>
6.6.1	Format of setpoint adjustment: Relative .....	145
6.6.2	Format of setpoint adjustment: Absolute .....	147
<b>6.7</b>	<b>Temperature control .....</b>	<b>149</b>
6.7.1	Introduction .....	149
6.7.2	Response of the P-control .....	150
6.7.3	Response of the PI controller .....	151
<b>6.8</b>	<b>Continuous and switching control .....</b>	<b>152</b>
<b>6.9</b>	<b>Hysteresis .....</b>	<b>152</b>
6.9.1	Negative hysteresis:.....	152
6.9.2	Positive hysteresis .....	153
<b>6.10</b>	<b>Dead zone .....</b>	<b>153</b>
6.10.1	Case 1: Heating and cooling with continuous control.....	153
6.10.2	Case 2: Heating with 2-point control and cooling with continuous control..	154

---

6.10.3	Case 3: Heating with 2-point control and cooling with continuous control...	154
6.10.4	Case 4: Heating and cooling with 2-point control.....	154
<b>6.11</b>	<b>Operating mode selection .....</b>	<b>155</b>
6.11.1	Priorities for operating mode selection .....	155
6.11.2	Determining the current operation mode .....	156
6.11.2.1	New operating modes .....	156
6.11.2.2	Old operating modes .....	158
6.11.2.3	Determining the setpoint value .....	159
<b>6.12</b>	<b>Setpoint offset .....</b>	<b>161</b>
6.12.1	Setpoint temperature offset via the + and - buttons .....	161
6.12.2	Setpoint temperature offset via object 1 .....	162
<b>6.13</b>	<b>Base setpoint value and current setpoint value .....</b>	<b>163</b>
6.13.1	Setpoint value calculation .....	164
<b>6.14</b>	<b>Maximum text length according to line format.....</b>	<b>165</b>
<b>6.15</b>	<b>Template for documentation of use of freely programmable pages.....</b>	<b>166</b>
<b>7</b>	<b><i>Operating instructions.....</i></b>	<b><i>167</i></b>

# 1 Functional characteristics

## 1.1 Integrated functions

- Room thermostat for heating and cooling operation with additional heating stage.
- 8 channel time switch: 1 channel for controlling HVAC mode of a room thermostat and 7 free channels.
- User-friendly switching on of lights via hotkey function
- Up to 5 freely configurable screens
- Each screen can display a heading and up to 8 lines of text or functions, → equivalent to 40 channels.
- User-specific function with free choice of text for each line for sending or displaying received values or status telegrams
- Multi-lingual user interface

## 1.2 Special features

- Weather forecast display combined with the weather data receiver Meteodata 139 EFR (Display page 1).
- Integrated time switch with the option of sending 3 rather than just 2 different statuses.
- Receipt and display of 14 byte text strings via the bus
- 1 display page for current weather data
- Own physical address can be displayed
- Can also be operated without mains supply
- Display of 4 Byte floating-point telegrams (DPT 14.xxx / EIS 9)
- RTR page can be permanently blanked out (via a parameter)
- Display/sending of 1 or 2 byte numerical values in negative numerical range (format DPT 6.001 and DPT 8.001)

### 1.3 Operation



Key		
A	▲	UP cursor
B	Menu	Menu key
C	▼	DOWN cursor
D	+	Increase value / reverse status
E	OK	Confirm entry
F	-	Reduce value / reverse status

## 2 Technical data

### 2.1 Technical data

Operating voltage KNX	Bus voltage 21..32V DC
Current consumption KNX bus	<= 10mA (without key light) <= 24mA (with 100% key light)
Installation type	Flush-mounted wall installation
Connection type	KNX bus terminal
Power reserve	1.5 years
Display	Display with 132 x 72 points (8 lines with various functions) e.g. title, switching, dimming, % value, blinds/shutters, heating/air conditioning/ventilation, temperature, 2 byte counter value, etc.
Display lighting	LCD with white backlighting, dimmable
Ambient temperature	0 °C .. +45 C°
Protection rating	IP 20
Protection class	III according to DIN 60 730-1

### 3 "Varia 824 / 826 S KNX EIB V1.2" application programme

#### 3.1 Selection in the product database

<b>Manufacturer</b>	<a href="#">Theben AG</a>
<b>Product family</b>	Heating, ventilation, air conditioning
<b>Product type</b>	Controller with display and operating function
<b>Program name</b>	Varia 82x: RTR with display and operating function. V1.2

This application program was produced for **ETS from version 3.0e**.

The ETS database can be found on our downloads page: [www.theben.de/en/downloads\\_en](http://www.theben.de/en/downloads_en)

**Table 1**

Number of communication objects:	129
Number of group addresses:	154
Number of associations:	154

### 3.2 Communication Objects

Table 2: Overview

No.	Object name	Function	Type & DPT	Flags			
				C	R	W	T
0	<i>Base setpoint value</i>	<i>Defining the setpoint temperature</i>	2 byte 9.001	✓	✓	✓	
1	<i>Manual setpoint offset</i>	<i>Send/receive manual offset</i>	2 byte 9.002	✓	✓	✓	✓
2	<i>Outdoor temperature compensation</i>	<i>Adjust setpoint value</i>	2 byte 9.002	✓	✓	✓	
		<i>Adjust setpoint value</i>	9.002	✓	✓	✓	✓
3	<i>Current setpoint value</i>	<i>Report current setpoint value</i>	2 byte 9.001	✓	✓		✓
4	<i>Actual value</i>	<i>Send actual value</i>	2 byte 9.001	✓	✓		✓
5	<i>External actual value</i>	<i>Receive ext. actual value</i>	2 byte 9.001	✓	✓	✓	
6	<i>Sensor failure</i>	<i>Report sensor failure</i>	1 bit 1.001	✓	✓		✓
7	<i>Operating mode preset</i>	<i>Operating mode preset</i>	1 byte 20.102	✓	✓	✓	
	<i>Night &lt;-&gt; standby</i>	<i>1 = night, 0 = standby</i>	1 bit 1.001				
8	<i>Presence</i>	<i>Input for presence signal</i>	1 bit 1.001	✓	✓	✓	
	<i>Comfort</i>	<i>1 = comfort</i>	1.001				
9	<i>Window position</i>	<i>Input for window contact</i>	1 bit 1.001	✓	✓	✓	
	<i>Frost protection</i>	<i>1 = Frost protection</i>	1.001				
10	<i>Operating mode of time program</i>	<i>Report internal operating mode</i>	1 byte 20.102	✓	✓		✓
11	<i>Lock time program</i>	<i>Lock switching program = 1</i>	1 bit 1.001	✓	✓	✓	
12	<i>Current operating mode</i>	<i>Report current operating mode</i>	1 byte 20.102	✓	✓		✓
13	<i>Heating actuating value (%)</i>	<i>Send actuating value</i>	1 byte 5.001	✓	✓		✓
	<i>ON/OFF actuating value heating</i>	<i>Send actuating value</i>	1 bit 1.001				
14	<i>Heating PWM actuating value</i>	<i>Send actuating value</i>	1 bit 1.001	✓	✓		✓
15	<i>Additional heating stage actuating value (%)</i>	<i>Send actuating value</i>	1 byte 5.001	✓	✓		✓
	<i>ON/OFF actuating value additional heating stage</i>	<i>Send actuating value</i>	1 bit 1.001				

Continuation:

No.	Object name	Function	Type & DPT	Flags			
				C	R	W	T
16	<i>Cooling actuating value (%)</i>	<i>Send actuating value</i>	1 byte 5.001	✓	✓		✓
	<i>ON/OFF actuating value cooling</i>	<i>Send actuating value</i>	1 bit 1.001	✓	✓		✓
17	<i>Cooling PWM actuating value</i>	<i>Send cooling actuating value</i>	1 bit 1.001	✓	✓		✓
18	<i>Report heating mode/cooling mode</i>	<i>Heating = 0, Cooling = 1</i>	1 bit 1.001	✓	✓	✓	✓
	<i>switchover between heating and cooling</i>	<i>Heating = 0, Cooling = 1</i>					
19	<i>No energy medium</i>	<i>1 = No energy medium</i>	1 bit 1.001	✓	✓		✓
20	<i>Operating mode scene</i>	<i>Scenes 1-16 = 0 ..15</i>	1 byte 18.001	✓	✓	✓	
21	<i>Hotkey function</i>	<i>switch</i>	1 bit 1.001	✓	✓	✓	✓
22	<i>Forced fan stage</i>	<i>send/receive</i>	1 byte 5.001	✓	✓	✓	✓
23	<i>Fan forced/auto mode</i>	<i>1 = Forced/ 0 = Auto</i>	1 bit	✓	✓	✓	✓
	<i>Fan auto/forced mode</i>	<i>1 = Auto / 0 = Forced</i>	1.001				
24	<i>Time</i>	<i>Receive time</i>	1 byte	✓	✓	✓	
		<i>Send / receive time</i>	10.001	✓	✓	✓	✓
25	<i>Date</i>	<i>Receive date</i>	1 byte	✓	✓	✓	
		<i>Send / receive date</i>	11.001	✓	✓	✓	✓
26	<i>Time query</i>	<i>Send time and date</i>	1 bit 1.001	✓		✓	
27	<i>Outside temperature</i>	<i>Receive outdoor temperature</i>	2 byte 9.001	✓	✓	✓	
28	<i>Wind speed</i>	<i>Receive wind speed</i>	2 byte 9.005	✓	✓	✓	
29	<i>Brightness</i>	<i>Receive brightness value</i>	2 byte 9.004	✓	✓	✓	
30	<i>Rain</i>	<i>Receive rain status</i>	1 bit 1.001	✓	✓	✓	
31	<i>Recording weather data</i>	<i>Restart recording</i>	1 bit 1.001	✓	✓	✓	✓

Continuation:

No.	Object name	Function	Type & DPT	Flags			
				C	R	W	T
32	Switching program channel 2	Send temperature in K	2 byte 9.002	✓	✓		✓
		Send temperature in °C	2 byte 9.001	✓	✓		✓
		Send percentage value	1 byte 5.001	✓	✓		✓
		Send On/Off	1 bit 1.001	✓	✓		✓
		Send value 0..255	1 byte 5.010	✓	✓		✓
		Send HVAC operating mode	1 byte 20.102	✓	✓		✓
33	Switching program channel 3	See object 32	-	✓	✓		✓
34	Switching program channel 4	See object 32	-	✓	✓		✓
35	Switching program channel 5	See Object 32	-	✓	✓		✓
36	Switching program channel 6	See object 32	-	✓	✓		✓
37	Switching program channel 7	See object 32	-	✓	✓		✓
38	Switching program channel 8	See object 32	-	✓	✓		✓
39	Display page 1, line 1	Text string	14 byte 16.001	✓	✓	✓	
	Operation page 1, line 1	Switching ON/OFF	1 bit 1.001	✓	✓	✓	✓
	Display page 1, line 1	percentage value	1 byte 5.001	✓	✓	✓	
	Operation page 1, line 1	HVAC operating mode	1 byte 20.102	✓	✓	✓	✓
	Display page 1, line 1	Value 0..255	1 byte 5.010	✓	✓	✓	
	Operation page 1, line 1	Dim brighter / darker	4 bit 3.007	✓	✓	✓	✓
	Display page 1, line 1	Temperature	2 byte 9.001	✓	✓	✓	✓
	Operation page 1, line 1	EIS 5 value	2 byte 9.*	✓	✓	✓	✓
	Display page 1, line 1	Counter value 0 ..65535	2 byte 7.001	✓	✓	✓	
	Operation page 1, line 1	Scene	1 byte 18.001	✓	✓	✓	✓
	Display page 1, line 1	Blinds up/down	1 bit 1.008	✓	✓	✓	
	Operation page 1, line 1	Valuator	1 byte 5.010	✓	✓	✓	✓
	Display page 1, line 1	DPT 14.xxx (floating-point number)	4 byte 14.xxx	✓	✓		✓
	Weather forecast (6hr)	Text in relation to index to day	14 byte 16.001	✓	✓	✓	

Continuation:

No.	Object name	Function	Type & DPT	Flags			
				C	R	W	T
40	<i>Operation page 1, line 1</i>	<i>Dimming On/Off</i>	1 bit 1.001	✓	✓	✓	✓
		<i>Blinds Step/Stop</i>	1 bit 1.001	✓	✓	✓	✓
41	<i>Display page 1, line 2</i>	<i>See Object 39</i>	-	✓	✓	✓	
	<i>Operation page 1, line 2</i>		-	✓	✓	✓	✓
	<i>Weather forecast (6hr)</i>	<i>Text in relation to index to time</i>	14 byte 16.001	✓	✓	✓	
42	<i>Operation page 1, line 2</i>	<i>See Object 40</i>	-	✓	✓	✓	✓
43	<i>Display page 1, line 3</i>	<i>See Object 39</i>	-	✓	✓	✓	
	<i>Operation page 1, line 3</i>		-	✓	✓	✓	✓
	<i>Weather forecast (6hr)</i>	<i>Weather scenario as text</i>	14 byte 16.001	✓	✓	✓	
44	<i>Operation page 1, line 3</i>	<i>See Object 40</i>	-	✓	✓	✓	✓
45	<i>Display page 1, line 4</i>	<i>See Object 39</i>	-	✓	✓	✓	
	<i>Operation page 1, line 4</i>		-	✓	✓	✓	✓
	<i>Weather forecast (6hr)</i>	<i>Air temperature</i>					
46	<i>Operation page 1, line 4</i>	<i>See Object 40</i>	-	✓	✓	✓	✓
47	<i>Display page 1, line 5</i>	<i>See Object 39</i>	-	✓	✓	✓	
	<i>Operation page 1, line 5</i>		-	✓	✓	✓	✓
	<i>Weather forecast (6hr)</i>	<i>Precipitation probability</i>	1 byte 5.001				
48	<i>Operation page 1, line 5</i>	<i>See Object 40</i>	-	✓	✓	✓	✓
49	<i>Display page 1, line 6</i>	<i>See Object 39</i>	-	✓	✓	✓	
	<i>Operation page 1, line 6</i>		-	✓	✓	✓	✓
	<i>Weather forecast (6hr)</i>	<i>Precipitation amount</i>	2 byte 9.026	✓	✓	✓	
50	<i>Operation page 1, line 6</i>	<i>See Object 40</i>	-	✓	✓	✓	✓
51	<i>Display page 1, line 7</i>	<i>See Object 39</i>	-	✓	✓	✓	
	<i>Operation page 1, line 7</i>		-	✓	✓	✓	✓
	<i>Weather forecast (6hr)</i>	<i>Wind force</i>	2 byte 9.005	✓	✓	✓	
52	<i>Operation page 1, line 7</i>	<i>See Object 40</i>	-	✓	✓	✓	✓
53	<i>Display page 1, line 8</i>	<i>See Object 39</i>	-	✓	✓	✓	
	<i>Operation page 1, line 8</i>		-	✓	✓	✓	✓
	<i>Weather forecast (6hr)</i>	<i>Index to time</i>	1 Byte 5.010	✓	✓	✓	
54	<i>Operation page 1, line 8</i>	<i>See Object 40</i>	-	✓	✓	✓	✓
55	<i>Page 2 line 1</i>	<i>See Object 39</i>	-	✓	✓	✓	✓
56		<i>See Object 40</i>	-	✓	✓	✓	✓
57		<i>See Object 39</i>	-	✓	✓	✓	✓
58	<i>Page 2 line 2</i>	<i>See Object 40</i>	-	✓	✓	✓	✓
59	<i>Page 2 line 3</i>	<i>See Object 39</i>	-	✓	✓	✓	✓
60		<i>See Object 40</i>	-	✓	✓	✓	✓

Continuation:

No.	Object name	Function	Type & DPT	Flags			
				C	R	W	T
61	Page 2 line 4	See Object 39	-	✓	✓	✓	✓
62		See Object 40	-	✓	✓	✓	✓
63	Page 2 line 5	See Object 39	-	✓	✓	✓	✓
64		See Object 40	-	✓	✓	✓	✓
65	Page 2 line 6	See Object 39	-	✓	✓	✓	✓
66		See Object 40	-	✓	✓	✓	✓
67	Page 2 line 7	See Object 39	-	✓	✓	✓	✓
68		See Object 40	-	✓	✓	✓	✓
69	Page 2 line 8	See Object 39	-	✓	✓	✓	✓
70		See Object 40	-	✓	✓	✓	✓
71	Page 3 line 1	See Object 39	-	✓	✓	✓	✓
72		See Object 40	-	✓	✓	✓	✓
73	Page 3 line 2	See Object 39	-	✓	✓	✓	✓
74		See Object 40	-	✓	✓	✓	✓
75	Page 3 line 3	See Object 39	-	✓	✓	✓	✓
76		See Object 40	-	✓	✓	✓	✓
77	Page 3 line 4	See Object 39	-	✓	✓	✓	✓
78		See Object 40	-	✓	✓	✓	✓
79	Page 3 line 5	See Object 39	-	✓	✓	✓	✓
80		See Object 40	-	✓	✓	✓	✓
81	Page 3 line 6	See Object 39	-	✓	✓	✓	✓
82		See Object 40	-	✓	✓	✓	✓
83	Page 3 line 7	See Object 39	-	✓	✓	✓	✓
84		See Object 40	-	✓	✓	✓	✓
85	Page 3 line 8	See Object 39	-	✓	✓	✓	✓
86		See Object 40	-	✓	✓	✓	✓
87	Page 4 line 1	See Object 39	-	✓	✓	✓	✓
88		See Object 40	-	✓	✓	✓	✓
89	Page 4 line 2	See Object 39	-	✓	✓	✓	✓
90		See Object 40	-	✓	✓	✓	✓
91	Page 4 line 3	See Object 39	-	✓	✓	✓	✓
92		See Object 40	-	✓	✓	✓	✓
93	Page 4 line 4	See Object 39	-	✓	✓	✓	✓
94		See Object 40	-	✓	✓	✓	✓
95	Page 4 line 5	See Object 39	-	✓	✓	✓	✓
96		See Object 40	-	✓	✓	✓	✓
97	Page 4 line 6	See Object 39	-	✓	✓	✓	✓
98		See Object 40	-	✓	✓	✓	✓
99	Page 4 line 7	See Object 39	-	✓	✓	✓	✓
100		See Object 40	-	✓	✓	✓	✓
101	Page 4 line 8	See Object 39	-	✓	✓	✓	✓
102		See Object 40	-	✓	✓	✓	✓
103	Page 5 line 1	See Object 39	-	✓	✓	✓	✓
104		See Object 40	-	✓	✓	✓	✓

Continuation:

No.	Object name	Function	Type & DPT	Flags			
				C	R	W	T
105	Page 5 line 2	See Object 39	-	✓	✓	✓	✓
106		See Object 40	-	✓	✓	✓	✓
107	Page 5 line 3	See Object 39	-	✓	✓	✓	✓
108		See Object 40	-	✓	✓	✓	✓
109	Page 5 line 4	See Object 39	-	✓	✓	✓	✓
110		See Object 40	-	✓	✓	✓	✓
111	Page 5 line 5	See Object 39	-	✓	✓	✓	✓
112		See Object 40	-	✓	✓	✓	✓
113	Page 5 line 6	See Object 39	-	✓	✓	✓	✓
114		See Object 40	-	✓	✓	✓	✓
115	Page 5 line 7	See Object 39	-	✓	✓	✓	✓
116		See Object 40	-	✓	✓	✓	✓
117	Page 5 line 8	See Object 39	-	✓	✓	✓	✓
118		See Object 40	-	✓	✓	✓	✓
119	LCD backlight	Switching On/Off	1 bit 1.001	✓	✓	✓	
120	acoustic signal	On/Off	1 bit 1.001	✓	✓	✓	
121	Select favourites page	Only with Varia 826 S KNX	1 bit 1.001	✓	✓	✓	
122	Lock switching program channel 2	Lock switching program = 1	1 bit 1.001	✓	✓	✓	
123	Lock switching program channel 3	Lock switching program = 1	1 bit 1.001	✓	✓	✓	
124	Lock switching program channel 4	Lock switching program = 1	1 bit 1.001	✓	✓	✓	
125	Lock switching program channel 5	Lock switching program = 1	1 bit 1.001	✓	✓	✓	
126	Lock switching program channel 6	Lock switching program = 1	1 bit 1.001	✓	✓	✓	
127	Lock switching program channel 7	Lock switching program = 1	1 bit 1.001	✓	✓	✓	
128	Lock switching program channel 8	Lock switching program = 1	1 bit 1.001	✓	✓	✓	

**Table 3: Communication flags**

Flag	Name	Meaning
C	Communication	Object can communicate
R	Read	Object status can be viewed (ETS / display etc.)
W	Write	Object can receive
T	Transmit	Object can send

### 3.2.1 Description of objects

- **Object 0 "Base setpoint value"**

The base setpoint value is first specified at start-up.

It can be reset at any time using object 0 (limited by minimum or maximum valid setpoint value).

If the bus supply fails, this object is backed up and the last value is restored when the bus supply returns. The object can be described as required.

- **Object 1 "Manual setpoint value adjustment"**

The object receives a temperature differential in EIS 5 format. The desired room temperature (current setpoint value) can be adjusted from the base setpoint value by this differential.

The following applies in comfort mode (heating):

current setpoint value (obj. 3) = base setpoint value (obj. 0) + manual setpoint value offset (obj.1)

Values outside the configured range are limited to the highest or lowest value.

Remarks:

The offset always refers to the set basic setpoint value and not to the [current setpoint value](#) value.

If a 0 is received, a previously entered setpoint value offset is reset to 0 K.

- **Object 2 "Outdoor temperature compensation"**

The function of the object is determined by the *setpoint adjustment with high outside temperatures* parameter on the *RTR setting* parameter page.

**Receive only:**

Receives the correction value for setpoint adjustment.

**Calculate internally and send:**

Reports the current setpoint adjustment as an amount or as a differential.

The *format of the correction value* is set on the *setpoint adjustment* parameter page.

Table 4

<i>Format of adjustment value</i>	Object function	Example
<i>Absolute</i>	Transmits the amount: <i>Unadjusted base setpoint value</i> + <i>setpoint correction</i> as setpoint value for additional temperature controls.	<i>Unadjusted base setpoint value</i> = 20°C. <i>Set point adjustment</i> = +2 K  The object transmits: 22 °C
<i>Relative</i>	Calculated setpoint adjustment (in Kelvin) based on outside temperature.	<i>Unadjusted base setpoint value</i> = 20°C. <i>Set point adjustment</i> = +2 K The object transmits: 2 K*

- **Object 3 "Current setpoint value"**

This object sends the current setpoint temperature as a EIS 5 telegram (2 bytes) to the bus. The send response can be set on the *setpoint values* parameter page.

- **Object 4 "Actual value"**

This object sends the temperature currently being measured by the sensor (if sending via configuration is permitted).

- **Object 5 "External actual value"**

Receives the room temperature from another measurement point via the bus. This object can be activated on the actual value parameter page.

- **Object 6 "Sensor failure"**

Reports error if the internal or external temperature sensors malfunction.  
Error = 1

- Object 7 "Operating mode preset", "Night <-> standby"

The function of this object depends on the *objects for setting operating mode* parameter on the *RTR setting* parameter page.

Table 5

Objects for determining the operating mode	Object function
<a href="#">New: Operating mode, presence, window status</a>	<p>Here is a 1-byte object. One of 4 operating modes can be directly activated.</p> <p>0 = Auto i.e. the operating mode depends on the time program (channel 1)</p> <p>1 = Comfort</p> <p>2 = Standby</p> <p>3 = Night,</p> <p>4 = Frost protection (heat protection)</p> <p>Values over 4 are ignored.</p> <p>If the time program is locked or not used, the configured <i>operating mode after reset</i> is accepted until a new and valid operating mode is received or the operating mode on the device is changed by the user.</p>
<a href="#">old: comfort, night, frost</a>	<p>With this setting, the object is a 1 bit object. Night or standby operating mode can be activated.</p> <p>0=Standby 1=Night</p>

- Object 8 "Presence" / "comfort"

The function of this object depends on the *objects for setting operating mode* parameter on the *RTR setting* parameter page.

**Table 6**

Objects for determining the operating mode	Object function
<a href="#">New: Operating mode, presence, window status</a>	<p><b>Presence:</b> The status of a presence detector (e.g. push button, motion detector) can be received via this object. 1 on this object activates the comfort operating mode.</p>
<a href="#">old: comfort, night, frost</a>	<p><b>Comfort:</b> 1 on this object activates the comfort operating mode. This operating mode takes priority over night and standby modes. Comfort mode is deactivated by sending a 0 to the object. <b>Important:</b> This object should not be sent events cyclically as a comfort extension is deleted (via the push button from the device) if a 0 is received.</p>

- **Object 9 "Window position" / "frost/heat protection"**

The function of this object depends on the *objects for setting operating mode* parameter on the *RTR setting* parameter page.

**Table 7**

Objects for determining the operating mode	Object function
<a href="#">New: Operating mode, presence, window status</a>	<p><b>Window position:</b> The status of a window contact can be received via this object. 1 on this object activates the frost / heat protection operating mode.</p>
<a href="#">old: comfort, night, frost</a>	<p><b>Frost/heat protection:</b> 1 on this object activates the frost protection operating mode. The heat protection operating mode is activated during cooling. The frost/heat protection operating mode takes top priority. The frost/heat protection mode remains until it is cleared again by entering 0.</p>

- **Object 10 "Time program operation mode"**

Always sends the operating mode defined by the time program on channel 1.  
This also applies if the room thermostat has been changed to another operating mode by a presence sensor, push of a button etc.

- **Object 11 "Time program lock"**

Receive object: Lock = 1.  
Makes the time program on channel 1 inoperative.  
Example:  
Manually set RTR to frost and lock time program before holiday period.  
The frost protection operating mode remains on until the lock is lifted after the holiday period or when frost protection is ended manually.

- **Object 12 "Current operating mode"**

Transmits the current operating mode as a 1 byte value (see below: Coding of operating modes).

The send response can be set on the *RTR setting* parameter page.

**Table 8:** Coding of HVAC operating modes:

Value	Operating mode
1	Comfort
2	Standby
3	Night
4	Frost protection/heat protection

- **Object 13 "Heating actuating value %", "Heating and cooling actuating value %", "2-point heating actuating value", "2-point cooling actuating value"**

Sends the current heating actuating value (0...100%) or heating or cooling if the *output of cooling actuating value* parameter has been set to *together with heating actuating value Heating (Obj. 13 & 14)* (Parameter page *Cooling control*).

- **Object 14 "Heating and cooling PWM actuating value"**

The actuating value is emitted as a PWM signal (ON/OFF).

See appendix: [PWM cycle](#)

- **Object 15 "Additional heating stage actuating value (%)", "2-point additional stage actuating value"**

This object is only available if the additional heating stage is used.

The *number of heating stages* parameter must also be set to *main stage and additional stage*.

See heating control parameter page.

The send format, EIS6 or EIS1, depends on the selected *type of control* on the *heating control* parameter page.

- **Object 16 "Cooling actuating value (%)", "2-point cooling actuating value"**

Sends the current actuating value or cooling switching command depending on the *type of control* selected on the *cooling control* parameter page.

The object is only available if the cooling function has been selected on the *general* parameter page (*control= heating and cooling*).

- **Object 17 "PWM cooling actuating value"**

Sends a PWM signal (ON/OFF) that corresponds to the current actuating value.  
See appendix: [PWM cycle](#).

- **Object 18 "Report heating/cooling operation", "switch between heating and cooling"**

The object is available if the cooling function has been selected on the General parameter page (control= heating and cooling).  
The function of the object depends on the *switching between heating and cooling* parameter on the *cooling control* parameter page.

**Table 9**

<i>Switchover between heating and cooling</i>	Function
<i>automatic</i>	Reports whether the room thermostat is currently operating in heating or cooling mode. Heating = 0, Cooling = 1
<i>via object</i>	Receives the switching command for switching between heating and cooling mode. Heating = 0, Cooling = 1

- **Object 19 "No energy medium"**

Error reporting object:  
An error is reported in the following cases (object status = 1):

**Case 1:** Heating mode was forced *switching between heating and cooling* object, however the room temperature is so far above the setpoint temperature that cooling would be required.

**Case 2:** Cooling mode was forced via the *switching between heating and cooling* object, however the room temperature is so far below the setpoint temperature that heating would be required.

- **Object 20 "Operating mode scene"**

Scenes can be saved or retrieved via this object.  
The current operating mode is allocated to the selected scene number when saving.  
Up to 16 different scenes are supported.  
See appendix: [The scenes](#).

- **Object 21 "Hotkey function"**

The hotkey function is available on the RTR and on the weather page. Pressing one of the buttons on the right (+, OK or -) triggers the sending of a switching telegram.

Pushing the button again reverses the switching status.

This function makes it possible to switch room lighting on/off quickly when entering a room without having to first select a specific page.

**Note:**

The hotkey function must be activated in the ETS on the *RTR* parameter page

While a setpoint value or operating mode can be set, i.e. by pressing one of the cursor buttons on the left, only the buttons on the right fulfil the setting task.

The hotkey function only becomes available again if the setpoint value and operating mode are no longer blacked out.

- **Object 22 "Fan stage in forced mode"**

The object is available if the *fan stage control* parameter has been set to *yes* (*RTR setting* parameter page).

If a manual fan stage is selected on the device, this object sends a percentage value that corresponds to the configured threshold value.

See appendix: [Fan forced mode](#)

The forced fan step has no effect on the actuating value.

- **Object 23 "Fan forced/auto", "fan auto/forced"**

The object is available if the *fan stage control* parameter has been set to *yes* (*RTR setting* parameter page).

Sends a forced command to the fan coil actuator or to fan control if a fan stage on the device is set manually on the RTR display page.

The desired fan step for forced operation is sent by object 22 .

See appendix: [Fan forced mode](#)

- **Object 24 "send time", "receive time"**

The function of the object depends on the *objects time and date function* parameter on the *general* parameter page.

**Table 10**

<i>Function of time and date objects</i>	Function
<i>Receive time and date</i>	Receives time from bus for setting the internal real time clock.
<i>Send and receive time and date</i>	Can both receive the time as well as send it to the bus. See object 26.

Format: KNX DPT 10.001 / EIS 3

**It is recommended to set the KNX time transmitter so that it transmits time/date telegrams at 00:02 every day.**

- **Object 25 "send date", "receive date"**

The function of the object depends on the *objects time and date function* parameter on the *general* parameter page.

**Table 11**

<i>Function of time and date objects</i>	Function
<i>Receive time and date</i>	Receives date from bus for setting the internal real time clock.
<i>Send and receive time and date</i>	Can both receive the date as well as send it to the bus. See object 26.

**Note:** If neither date nor time are received (e.g. after reset without battery), the date display will be Mon 00.00.00 and the time display 00:00.

The date only sets itself to 1.1.2008 when the time has been received until a valid date telegram is received.

Format: KNX DPT 11.001 / EIS 4

**It is recommended to set the KNX time transmitter so that it transmits time/date telegrams at 00:02 every day.**

- **Object 26 "Time query"**

If this object is described with a 1 or a 0, VARIA immediately sends a time and date telegram. This object only appears if the *send and receive time and date* function has been selected.

- **Object 27 "Outside temperature"**

Receives the current outside temperature, e.g. from a weather station (order no. 132 9 201). The received value can appear on the *weather* display page and is needed as a reference for calculation of the set point value adjustment at high outside temperatures.

- **Object 28 "Wind speed"**

Receives the current wind speed, e.g. from a weather station (order no. 132 9 201) for display on the *weather* page.

- **Object 29 "Brightness"**

Receives the current brightness value, e.g. from a weather station (order no. 132 9 201) for display on the *weather* page.

- **Object 30 "Rain"**

Receives the current rain status, e.g. from a weather station (order no. 132 9 201) for display on the *weather* page.

- **Object 31 "Reset recording weather data"**

When the object receives a 1, the stored min./max. values of objects 27..30 on the weather page are deleted and a new recording is started.

- **Objects 32..38 "Time program channel 2..8"**

Sends the status of the individual time program from channel 2..channel 8. The telegram format is set on the relevant *time program channel 2..8* parameter page via the *type of time program*.

- **Object 39 "Text in relation to index to day"**

Parameter: <i>Show weather forecast on page 1</i>	Function
yes	Receives the relevant forecast day in text form, e.g. <i>Today, tomorrow, the day after tomorrow, day 3.</i> See appendix: <a href="#">Weather forecasts with Meteodata 139.</a>
no	Standard display or operating function (see below: <a href="#">Objects 39, 41...117", "Operate page 1.. 5, line 1.. 8"</a> )

- **Object 41 "Text in relation to index to time"**

Parameter: <i>Show weather forecast on page 1</i>	Function
yes	Receives the relevant 6 hr forecast period in text form, e.g. "6:00-12:00". See appendix: <a href="#">Weather forecasts with Meteodata 139.</a>
no	Standard display or operating function (see below: <a href="#">Objects 39, 41...117", "Operate page 1.. 5, line 1.. 8"</a> )

- **Object 43 "Weather scenario as text"**

Parameter: <i>Show weather forecast on page 1</i>	Function
yes	Receives the relevant weather forecast for the time period shown as text, e.g. " <i>sunny, overcast etc.</i> ". See appendix: <a href="#">Weather forecasts with Meteodata 139.</a>
no	Standard display or operating function (see below: <a href="#">Objects 39, 41...117", "Operate page 1.. 5, line 1.. 8"</a> )

- **Object 45 "Air temperature"**

Parameter: <i>Show weather forecast on page 1</i>	Function
yes	Receives the relevant air temperature forecast for the displayed time period in °C. See appendix: <a href="#">Weather forecasts with Meteodata 139.</a>
no	Standard display or operating function (see below: <a href="#">Objects 39, 41...117</a> ", "Operate page 1.. 5, line 1.. 8")

- **Object 47 "Precipitation probability"**

Parameter: <i>Show weather forecast on page 1</i>	Function
yes	Receives the relevant precipitation probability forecast for the displayed time period in %. See appendix: <a href="#">Weather forecasts with Meteodata 139.</a>
no	Standard display or operating function (see below: <a href="#">Objects 39, 41...117</a> ", "Operate page 1.. 5, line 1.. 8")

- **Object 49 "Precipitation amount"**

Parameter: <i>Show weather forecast on page 1</i>	Function
yes	Receives the relevant precipitation amount forecast for the displayed time period in l/m <sup>2</sup> . See appendix: <a href="#">Weather forecasts with Meteodata 139.</a>
no	Standard display or operating function (see below: <a href="#">Objects 39, 41...117</a> ", "Operate page 1.. 5, line 1.. 8")

- **Object 51 "Wind force"**

Parameter: <i>Show weather forecast on page 1</i>	Function
yes	Receives the relevant wind speed forecast for the displayed time period in km/h. See appendix: <a href="#">Weather forecasts with Meteodata 139</a> .
no	Standard display or operating function (see below: <a href="#">Objects 39, 41...117</a> ", "Operate page 1.. 5, line 1.. 8")

- **Object 53 "Index to time"**

Parameter: <i>Show weather forecast on page 1</i>	Function																																							
yes	<p>Sends the index to time to the weather forecast receiver Meteodata 139 EFR KNX by pushing the right-hand +/- arrow key. The value sent will be increased or decreased by 1 with each pressing of the key (infinite loop).</p> <p>Format:</p> <table border="1"> <thead> <tr> <th>Index</th> <th colspan="2">Forecast for:</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>00:00-06:00</td> <td rowspan="4">Today</td> </tr> <tr> <td>1</td> <td>06:00-12:00</td> </tr> <tr> <td>2</td> <td>12:00-18:00</td> </tr> <tr> <td>3</td> <td>18:00-24:00</td> </tr> <tr> <td>4</td> <td>00:00-06:00</td> <td rowspan="4">Tomorrow</td> </tr> <tr> <td>5</td> <td>06:00-12:00</td> </tr> <tr> <td>6</td> <td>12:00-18:00</td> </tr> <tr> <td>7</td> <td>18:00-24:00</td> </tr> <tr> <td>8</td> <td>00:00-06:00</td> <td rowspan="4">The day after tomorrow</td> </tr> <tr> <td>9</td> <td>06:00-12:00</td> </tr> <tr> <td>10</td> <td>12:00-18:00</td> </tr> <tr> <td>11</td> <td>18:00-24:00</td> </tr> <tr> <td>12</td> <td>00:00-06:00</td> <td rowspan="4">Day 3</td> </tr> <tr> <td>13</td> <td>06:00-12:00</td> </tr> <tr> <td>14</td> <td>12:00-18:00</td> </tr> <tr> <td>15</td> <td>18:00-24:00</td> </tr> </tbody> </table> <p>See appendix: <a href="#">Weather forecasts with Meteodata 139</a>.</p>	Index	Forecast for:		0	00:00-06:00	Today	1	06:00-12:00	2	12:00-18:00	3	18:00-24:00	4	00:00-06:00	Tomorrow	5	06:00-12:00	6	12:00-18:00	7	18:00-24:00	8	00:00-06:00	The day after tomorrow	9	06:00-12:00	10	12:00-18:00	11	18:00-24:00	12	00:00-06:00	Day 3	13	06:00-12:00	14	12:00-18:00	15	18:00-24:00
Index	Forecast for:																																							
0	00:00-06:00	Today																																						
1	06:00-12:00																																							
2	12:00-18:00																																							
3	18:00-24:00																																							
4	00:00-06:00	Tomorrow																																						
5	06:00-12:00																																							
6	12:00-18:00																																							
7	18:00-24:00																																							
8	00:00-06:00	The day after tomorrow																																						
9	06:00-12:00																																							
10	12:00-18:00																																							
11	18:00-24:00																																							
12	00:00-06:00	Day 3																																						
13	06:00-12:00																																							
14	12:00-18:00																																							
15	18:00-24:00																																							
no	Standard display or operating function (see below: <a href="#">Objects 39, 41...117</a> ", "Operate page 1.. 5, line 1.. 8")																																							

- Objects 39, 41, 43, 45, 47, 49, 51, 53, 55, 57, 59, 61, 63, 65, 67, 69, 71, 73, 75, 77, 79, 81, 83, 85, 87, 89, 91, 93, 95, 97, 99, 101, 103, 105, 107, 109, 111, 113, 115, 117  
"Display page 1.. 5, line 1.. 8," "Operate page 1.. 5, line 1.. 8"

These objects are for controlling text lines 1 to 8 on the [customer specific display pages](#) 1 to 5.

Data orientation depends on the *allow change to object value?* parameter (see table 12)  
Exception: 4 byte floating-point numbers (DPT 14.xxx) and text strings are only received.

The type of data is set via the *line format* parameter on the relevant display page (e.g. *page 1, line 1*).

**Table 12: Data orientation**

<i>Authorise amendment of object value?</i>	Function
<i>yes</i>	<i>Operation page 1..5, line 1..8</i> The value/status on the display line can be changed by the user on the device. The changed value is sent to the bus and can be overwritten with received values.
<i>no</i>	<i>Display page 1..5, line 1..8</i> Values are received from the bus and only displayed in the display line.

- Objects 40, 42, 44, 46, 48, 50, 52, 54, 56, 58, 60, 62, 64, 66, 68, 70, 72, 74, 76, 78, 80, 82, 84, 86, 88, 90, 92, 94, 96, 98, 100, 102, 104, 106, 108, 110, 112, 114, 116, 118  
"to operate page 1.. 5, line 1.. 8"

This object is only available if *dim* or *blinds/shutters* object types are set as *line format*.

**Table 13**

<i>Line format</i>	Function
<i>Dimming</i>	Sends On/Off telegram to the dimmer
<i>Blinds/shutters</i>	Sends the Step/Stop telegrams to the blinds actuator

- **Object 119 "LCD backlighting"**

Enables switching on and off of LCD backlighting via the bus.

This means, for example, that all displays can be turned off simultaneously.

- **Object 120 "Acoustic signal"**

Controls the installed buzzer.

1 = On every 2 secs for 100 ms.

0 = Off

- **Object 121 "Select favourite pages"**

If a 1 is received, the display changes from VARIA 826 S KNX to the set favourite page. The favourite page is set on the *select display pages* parameter page.

**Important:** This function is only available with the VARIA 826. S KNX.

- **Objects 122..128 "Lock time program channel 2..8"**

Locks the relevant channel.

1 = Locked, i.e. object does not send.

0 = Enable.

### 3.3 Parameter

#### 3.3.1 Parameter pages

Table 14

Name	Description
<i>General</i>	Heating/cooling, language, releases, summer time rule etc.
<i>RTR setting</i>	Operating modes, presence detector, fan control etc.
<i>Heating setpoint values</i>	Base setpoint value, reductions, offset.
<i>Cooling setpoint values</i>	Dead zone, increases, heating protection.
<i>Heating control</i>	Type of control, heating stages, control parameters, PWM time.
<i>Cooling control</i>	Type of control, control parameters, PWM time.
<i>Additional stage heating</i>	Type of control, control parameters, send response.
<i>Actual value</i>	Source for actual value measurement, actual value monitoring.
<i>Fan stages</i>	Number, threshold values, compulsory control.
<i>Setpoint shift</i>	Setting maximum adjustment.
<i>Time program Channel 1</i>	Settings for the internal HVAC time program.
<i>Time program Channel 2..8</i>	Settings for the freely selectable programs.
<i>Select screens</i>	Activation of weather page and freely programmable display pages
<i>Weather data</i>	Display outside measurements: Temperature, wind, rain and Min./max. values.
<i>Weather forecast page 1</i>	Language of weather forecast reports and heading on the weather forecast page.
<i>Page 1, Forecast day</i>	Format of the display line "Forecast day".
<i>Page 1, Time interval</i>	Format of the display line "Time interval".
<i>Page 1, Weather</i>	Format of the display line "Weather scenario".
<i>Page 1, Temperature</i>	Format of the display line "Air temperature".
<i>Page 1, Precipitation</i>	Format of the display line "Precipitation probability"
<i>Page 1, Precipitation amount</i>	Format of the display line "Precipitation amount"
<i>Page 1, Wind force</i>	Format of the display line "Wind speed".
<i>Display objects page 1..5</i>	Heading and favourite line
<i>Page 1, line 1 to page 5, line 8</i>	Unrestricted text entry and choice of function for each text line of display pages 1..5.
<i>Text list</i>	Customer-specific designation for scene numbers and valuator stages.

### 3.3.2 Parameter description

#### 3.3.2.1 The General parameter page

Table 15

Designation	Values	Description
<i>Settings menu on device</i>	<p><i>disabled</i></p> <p><i>enabled</i></p> <p><i>Released via PIN</i></p>	<p>Selection of settings menu on device: Operation not possible.</p> <p>Possible at any time</p> <p>Only possible if correct PIN has been entered</p>
<i>Selection of temperature menu</i>	<p><b><i>Adjustable on device</i></b></p> <p><i>Not possible on device</i></p>	<p>Determines whether the setpoint values on the device can be set in the → Temperature settings menu.</p>
<i>Setpoint value settings on device</i>	<p><i>unchanged after download</i></p> <p><b><i>Overwrite via download</i></b></p>	<p>The setpoint values set on the device are stored after download if, for example, only customer-specific texts or control-independent parameters have been changed. Important: The ETS has to overwrite the setpoint values if the following basic controller parameters are changed:</p> <ul style="list-style-type: none"> <li>- Type of control (continuous/2-point) both during heating and cooling operation</li> <li>- Hysteresis of 2-point control</li> <li>- Control (only heating control / heating and cooling)</li> </ul> <p>When downloading all the setpoint values entered on the device are replaced by the ETS values</p>

Continuation:

Designation	Values	Description
<i>Language after download</i>	<p><i>unchanged</i></p> <p><b>German</b>  <i>English</i>  <i>French</i>  <i>Italian</i>  <i>Spanish</i>  <i>Dutch</i>  <i>Swedish</i>  <i>Reserved for additional language 2</i>                      ...  <i>Reserved for additional language 9</i></p>	<p>The language set by the user remains unchanged after download.</p> <p>Desired menu language after download.</p> <p>The language of the weather forecasts is set separately on the Weather forecast parameter page, page 1.</p> <p>Reserved for future upgrades: Do not select.</p>
<i>Function of time and date objects</i>	<p><b>Receive time and date</b></p> <p><i>Send and receive time and date</i></p>	<p>Varia can be set via the bus.</p> <p>Varia can both be set via the bus and time can be sent precisely to the bus.</p> <p>To achieve the highest accuracy, we recommend sending the time with a ZS 600 DCF time signal transmitter and only use VARIA as time-transmitter (<i>receive time and date</i>).</p>
<i>Send time and date</i>	<p><i>Only on request</i></p> <p><i>every minute</i></p> <p><i>every hour</i></p> <p><i>Every day at 00:00 midnight and at summer/winter changeover</i></p> <p><i>every day at 00:02 and at summer/winter changeover</i></p>	<p>Only when the <i>send time and date</i> parameter is set to <i>send and receive time and date</i>. Setting, when for example how often time and date should be sent.</p> <p>Note:                      Via the <i>time query</i> object (Obj. 26) sending can be initiated at any time.</p>

Continuation:

Designation	Values	Description
<i>Summer time rules</i>	<i>adjustable on device</i>	The desired summer time rule can be set directly on the device. (Settings menu → Date and time).
	<i>none</i>	No summer time changeover required.
	<i>EU</i> <i>GB/IRL/P</i> <i>USA</i> <i>FIN/GR/TR</i>	Adjustment to location.
<i>Activate hotkey function?</i> (Buttons +/- OK page RTR and weather)	<i>yes</i>	Pressing one of the buttons on the right (+, OK or -) on the RTR or weather display page triggers the sending of a switching telegram (Obj. 21). Pushing the button again reverses the switching status. This function makes it possible to switch room lighting on/off quickly when entering a room without having to quit the RTR or weather page.  Change setpoint value/operating mode: If one of the left cursor buttons is pressed first to change the setpoint value or operating mode then the buttons on the right are used for adjustments. The hotkey function only becomes available again if the setpoint value and operating mode are no longer blacked out.
	<i>no</i>	No hotkey function. Pressing the + or – button changes Varia in the input mode for manual setpoint value adjustment or change of operation mode.  Selection using the left cursor buttons ▲▼ is not required.

Continuation:

Designation	Values	Description
<i>Is mains supply connected?</i>	<i>no, only bus supply</i>  <i>yes</i>	obsolete

### 3.3.2.2 The RTR setting parameter page

Table 16

Designation	Values	Meaning
<i>CONTROL</i>	<i>Heating control only</i>  <i>Heating and cooling</i>	Heating operation only  an additional cooling system can be controlled  <b>Important:</b> If this parameter is changed, then all the setpoint values entered on the device will be deleted during download and overwritten with the current ETS values.
<i>Objects for determining the operating mode</i>	<i>new: operating mode, presence, window status</i>  <i>old: comfort, night, frost (not recommended)</i>	Varia can switch the operating mode depending on the window and presence contacts.  Traditional setting without window and presence status. <b>Important:</b> If the frost protection object is = 1 (Obj. 9), then no other operating mode can be selected.
<i>Operating mode after reset (if no time program is active)</i>	<i>Frost protection</i> <i>Night-time temperature reduction</i> <i>Standby</i> <i>Comfort</i>	Operating mode after start-up or reprogramming. <b>Important:</b> Time programs have priority
<i>Cyclical transmission of current operating mode</i>	<b><i>not cyclical, only in the event of change</i></b> <i>every 2 min.</i> <i>every 3 min.</i> <i>every 5 min.</i> <i>every 10 min.</i> <i>every 15 min.</i> <i>every 20 min.</i> <i>Every 30 min.</i> <i>every 45 min.</i> <i>every 60 min.</i>	How often should the current operating mode be sent?

Continuation:

Designation	Values	Description
<p><i>Type of presence sensor (to Obj. 8)</i></p>	<p><i>Presence detector</i></p> <p><i>Presence buttons</i></p>	<p>The presence sensor activates comfort operating mode.</p> <p>Comfort operating mode as long as the presence object is set*.</p> <ol style="list-style-type: none"> <li>1. If a new operating mode is received on object 7 with the presence object set (<i>operating mode preset</i>), then it is accepted and the presence object is reset.</li> <li>2. Reception of the same operating mode prior to the presence status (e.g. via cyclical sending) is ignored.</li> <li>3. If the presence object is set during night / frost operation, it is reset after the configured comfort extension finishes*</li> <li>4. If the presence object is set during standby mode, the comfort operating mode is accepted without time restriction.</li> </ol>

**\*Exception:** If a window is opened (window object = 1), the room thermostat changes to frost protection mode.

Continuation:

Designation	Values	Description
<i>Time for comfort extension</i>	<i>30 min.</i> <i>1 hour</i> <i>1.5 hours</i> <i>2 hours</i> <i>2.5 hours</i> <i>3 hours</i> <i>3.5 hours</i>	This determines how long VARIA should remain in comfort mode after the presence button is pressed.
<i>Operating mode selection on device</i>	<i>disabled</i> <b><i>Launch all operating modes</i></b>	Release of operating mode selection via the user.
<i>Maximum valid setpoint value offset</i>	<i>+/- 1 K</i> <b><i>+/- 2 K</i></b> <i>+/- 3 K</i> <i>+/- 4 K</i> <i>+/- 5 K</i>	Limits the available setting range for setpoint values on the RTR page and the values received via Object 1 ( <i>manual setpoint adjustment</i> ).
<i>Activate fan stage control</i>	<i>yes</i>  <b><i>no</i></b>	Brings up <i>fan stages</i> parameter page and Objects 22, 23.  No fan control.
<u><a href="#">Setpoint value adjustment at high outside temperature</a></u>	<b><i>none</i></b>  <i>Receive only</i>  <i>Calculate internally and send</i>	Function is deactivated  The adjustment value is received by the bus and own setpoint value is adjusted to increase in outside temperature.  Varia calculates the adjustment value, sends it to other controllers (Obj. 2) and adjusts own setpoint value to increase in outside temperature.
<i>Display time program on RTR page</i>	<b><i>yes</i></b> <i>no</i>	Is time program 1 (operating modes for the current day) to be shown on the room thermostat display page?  If <i>no program</i> is selected for channel 1 (either on device or via parameter) then no program bar will appear.

Continuation:

<b>Designation</b>	<b>Values</b>	<b>Meaning</b>
<i>Temperature display on RTR page</i>	<i>Actual value, setpoint value only when operated</i>	The current room temperature is displayed on the RTR page. The setpoint value is revealed by pressing a button.
	<i>Always setpoint value</i>	Only displays the setpoint value on the RTR page.

### 3.3.2.3 Heating setpoint values parameter page

Table 17

Designation	Values	Meaning
<i>Base setpoint value after loading the application</i>	16 °C, 17 °C, 18 °C, 19 °C 20 °C, <b>21 °C</b> , 22 °C, 23 °C 24 °C, 25 °C, 26 °C, 27 °C 28 °C	Output setpoint value for temperature control.
<i>minimum valid base setpoint value</i>	<b>10 °C</b> , 11 °C, 12 °C, 13 °C 14 °C, 15 °C, 16 °C, 17 °C 18 °C, 19 °C, 20 °C	Minimum setpoint value (heating).  If a base setpoint value received by object 0 is lower than the set value, it will be limited to this value.
<i>maximum valid base setpoint value</i>	20 °C, 21 °C, 22 °C, 23 °C 24 °C, 25 °C, 27 °C, 30 °C <b>32 °C</b>	Maximum setpoint value (heating).  If a base setpoint value received by Object 0 is higher than the set value, it will be limited to this value.
<i>Reduction in standby mode (during heating)</i>	0.5 K, 1 K, 1.5 K, <b>2 K</b> 2.5 K, 3 K, 3.5 K, 4 K	Example: With a base setpoint value of 21°C in heating operation and a 2K reduction, VARIA controls at a setpoint value of $21 - 2 = 19^{\circ}\text{C}$ .
<i>Reduction in night mode (during heating)</i>	3 K, 4 K, <b>5 K</b> 6 K, 7 K, 8 K	By what value should the temperature be reduced in night mode?
<i>Setpoint value for frost protection mode (during heating)</i>	3 °C, 4 °C, 5 °C <b>6 °C</b> , 7 °C, 8 °C 9 °C, 10 °C	Preset temperature for frost protection operation in heating mode (Heat protection operation applies in cooling mode).



Continuation:

Designation	Values	Meaning
<p><i>Send current setpoint value in cycles</i></p>	<p><i>not cyclical, only in the event of change</i></p> <p><i>every 2 min.</i>  <i>every 3 min.</i>  <i>every 5 min.</i>  <i>every 10 min.</i>  <i>every 15 min.</i>  <i>every 20 min.</i>  <i>Every 30 min.</i>  <i>every 45 min.</i>  <i>every 60 min.</i></p>	<p>How often should the currently valid setpoint value be sent?</p> <p>Only send in the event of a change.</p> <p>send cyclically</p>

### 3.3.2.4 Cooling setpoint values parameter page:

Table 18

Designation	Values	Meaning
<i>Dead zone between heating and cooling</i>	<i>1 K, 2 K, 3 K 4 K, 5 K, 6 K</i>	Specifies the buffer zone between setpoint values in heating and cooling modes. The dead zone is expanded through hysteresis in switching (2 point) control. See glossary: <a href="#">Dead zone</a>
<i>Increasing in standby mode (during cooling)</i>	<i>0.5 K, 1 K, 1.5 K 2 K, 2.5 K, 3 K 3.5 K, 4 K</i>	The temperature is increased in standby mode during cooling operation
<i>Increase during night operation (during cooling)</i>	<i>3 K, 4 K, 5 K 6 K, 7 K, 8 K</i>	see above.
<i>Setpoint value for heat protection mode (during cooling)</i>	<b>42 °C i.e. no real heat protection)</b> <i>29 °C, 30 °C, 31 °C, 32 °C, 33 °C, 34 °C, 35 °C</i>	Heat protection represents the maximum permitted temperature for the controlled room. It performs the same function during cooling as the frost protection mode during heating, e.g. saves energy while avoiding non-permitted temperatures.

### 3.3.2.5 Heating control parameter page

Table 19

Designation	Values	Meaning
<i>Number of heating stages</i>	<b>Only one heating stage</b> <i>Main stage and additional stage</i>	Choice of 1- or 2-stage heating
<i>Type of control</i>	<b>Continuous control</b> <i>2 point control</i>	<b>Important:</b> If this parameter is changed, then all the setpoint values entered on the device will be deleted during download and overwritten with the current ETS values.
<i>Setting the control parameters</i>	<b>Via system type</b>  <i>user-defined</i>	Standard application  Professional use: <a href="#">P/PI control self-configure</a>
<i>System type</i>	<b>Radiator heating system</b>  <i>Underfloor heating</i>	PI control with: Integrated time = 90 minutes Bandwidth = 2.5 k  Integrated time = 180 minutes Bandwidth = 4 k
<i>Send heating actuating value in cycles</i>	<i>With change of 1 %</i> <i>With change of 2 %</i> <i>With change of 3 %</i> <b>With change of 5 %</b> <i>With change of 7 %</i> <i>With change of 10 %</i> <i>With change of 15 %</i>	After how much % change* in the control variable is the new value to be sent. Small values increase control accuracy but also the bus load.
<i>Send heating actuating value in cycles</i>	<i>not cyclical, only in the event of change</i> <i>every 2 min.</i> <i>every 3 min.</i> <i>every 5 min.</i> <i>every 10 min.</i> <i>every 15 min.</i> <i>every 20 min.</i> <i>Every 30 min.</i> <i>every 45 min.</i> <b>Every 60 min.</b>	How often is the current heating actuating value to be sent (regardless of changes)?

\* Change since last transmission

Continuation:

<b>Designation</b>	<b>Values</b>	<b>Meaning</b>
<i>PWM time for cooling ON/OFF Heating</i>	2 min. 3 min. <b>5 min.</b> 10 min. 15 min. 20 min. 30 min.	An actuation cycle consists of a switch-on and a switch-off process and forms a PWM period.  Example: Actuating value= 20%, PWM time = 10 min: In an actuating cycle of 10 min, 2 min switched on and 8 min switched off (i.e. 20% on/ 80% off).
<b>2-point control</b>		
<i>Hysteresis of 2 point control</i>	0.3 K 0.5 K 0.7 K <b>1 K</b> 1.5 K	Interval between the switch-off point (setpoint value) and the turn back on point (setpoint value – hysteresis). The hysteresis prevents constant switching on/off.  <b>Important:</b> If this parameter is changed, then all the setpoint values entered on the device will be deleted during download and overwritten with the current ETS values.
<i>Recirculation of hysteresis after switching point</i>	<b>none</b> 0.1 K/min 0.2 K/min 0.3 K/min	The recirculation causes a gradual decrease in the Hysteresis over time, and the control accuracy is increased.  The hysteresis is equivalent to the programmed value for each switch-off and is gradually reduced by the recirculation process. The hysteresis can reduce to 0 K over prolonged periods of switch-off. At the next switch-on, it is reset to the configured value.

Continuation:

User-defined parameters		
<i>Integrated time of heating control</i>	<p><i>pure P control</i>                      15 min., 30 min., 45 min.                      60 min., 75 min., 90 min.                      105 min., 120 min., 135 min.  <b>150 min.</b>, 165 min., 180 min.                      195 min., 210 min., 225 min.</p>	<p>Professional setting:                      See appendix: Response of the PI controller                      This time can be adapted to suit particular circumstances. If the heating system is over-dimensioned and therefore too fast, shorter values should be used. Conversely, under-dimensioned heating (slow) benefits from longer integrated times.</p>
<i>Proportional band of heating control</i>	<p>1 K, 1.5 K, <b>2 K</b>, 2.5 K                      3 K, 3.5 K, 4 K, 4.5 K                      5 K, 5.5 K, 6 K, 6.5 K                      7 K, 7.5 K, 8 K, 8.5 K</p>	<p>Professional setting for adapting control response to the room.                      Small values cause large changes in control variables, larger values cause finer control variable adjustment.                      See appendix: temperature control</p>

### 3.3.2.6 Cooling control parameter page

Table 20

Designation	Values	Meaning
<i>Type of control</i>	<p><i>Continuous control</i></p> <p><i>2 point control</i></p>	<p>Infinite control (0 .. 100%).</p> <p>Switching control (On/Off). See appendix: <a href="#">Continuous and switching control</a></p> <p><b>Important:</b> If this parameter is changed, then all the setpoint values entered on the device will be deleted during download and overwritten with the current ETS values.</p>
<i>Setting the control parameters</i>	<p><i>Via system type</i></p> <p><i>user-defined</i></p>	<p>Standard application</p> <p>Professional use: <a href="#">P/PI control self-configure</a></p>
<i>System type</i>	<p><i>Cooling surface</i></p> <p><i>Fan coil unit</i></p>	<p>PI control with: Integrated time = 90 minutes Bandwidth = 2 k</p> <p>Integrated time = 180 minutes Bandwidth = 4 k</p>
<i>PWM time for cooling ON/OFF Cooling</i>	<p><i>2 min.</i></p> <p><i>3 min.</i></p> <p><b><i>5 min.</i></b></p> <p><i>10 min.</i></p> <p><i>15 min.</i></p> <p><i>20 min.</i></p> <p><i>30 min.</i></p>	<p>An actuation cycle consists of a switch-on and a switch-off process and forms a PWM period.</p> <p>Example: Actuating value= 20%, PWM time = 10 min: In an actuating cycle of 10 min, 2 min switched on and 8 min switched off (i.e. 20% on/ 80% off).</p>



Continuation:

Designation	Values	Meaning
2-point control		
<i>Hysteresis of 2 wire control for cooling</i>	0.3 K 0.5 K 0.7 K <b>1 K</b> 1.5 K	Interval between the switch-off point (setpoint value) and the turn back on point (setpoint value – hysteresis). The hysteresis prevents constant switching on/off.  <b>Important:</b> If this parameter is changed, then all the setpoint values entered on the device will be deleted during download and overwritten with the current ETS values.
<i>Recirculation of hysteresis after switching point</i>	<b>none</b> 0.1 K/min 0.2 K/min 0.3 K/min	The recirculation causes a gradual decrease in the Hysteresis over time, and the control accuracy is increased.  The hysteresis is equivalent to the programmed value for each switch-off and is gradually reduced by the recirculation process. The hysteresis can reduce to 0 K over prolonged periods of switch-off. At the next switch-on, it is reset to the configured value.

Continuation:

Designation	Values	Meaning
User-defined parameters		
<i>Proportional band of the cooling control</i>	1 K, 1.5 K, 2 K, 2.5 K 3 K, 3.5 K, <b>4 K</b> , 4.5 K 5 K, 5.5 K, 6 K, 6.5 K 7 K, 7.5 K, 8 K, 8.5 K	Professional setting for adapting control response to the room. Small values cause large changes in control variables, larger values cause finer control variable adjustment. See appendix: temperature control
<i>Integrated time of the cooling control</i>	<i>pure P control</i> 15 min., 30 min., 45 min. 60 min., 75 min., <b>90 min.</b> 105 min., 120 min., 135 min. 150 min., 165 min., 180 min. 195 min., 210 min., 225 min.	Professional setting: See appendix: <a href="#">Response of the PI controller</a> This time can be adapted to suit particular circumstances. If the cooling system is over-dimensioned and therefore too fast, shorter values should be used. Conversely, under-dimensioned cooling (slow) benefits from longer integrated times.

### 3.3.2.7 Additional heating stage parameter page

Table 21

Designation	Values	Meaning
<i>Type of control</i>	<i>Continuous control</i>  <i>2 point control</i>	Infinite control (0 .. 100%).  Switching control (On/Off). See appendix: <a href="#">Continuous and switching control</a>
<i>Differential between main stage and additional stage</i>	<i>1 K, 1.5 K, 2 K</i> <i>2.5 K, 3 K, 3.5 K</i> <i>4 K</i>	Specifies the negative interval between the current setpoint value and the setpoint value of the additional stage. Example with base setpoint value of 21°C and difference of 1K: The main stage controls with the base setpoint value and the addition stage controls with Base setpoint value – 1K = 20°C
<i>Proportional band of additional stage</i>	<i>1 K, 1.5 K, 2 K, 2.5 K</i> <i>3 K, 3.5 K, 4 K, 4.5 K</i> <i>5 K, 5.5 K, 6 K, 6.5 K</i> <i>7 K, 7.5 K, 8 K, 8.5 K</i>	With a continuous additional stage, Professional setting for adapting control response to the room.  Large values cause finer changes to the control variables with the same control deviation and more precise control than smaller values.
<i>Transmission of actuating value</i> <i>2nd heating stage</i>	<i>With change of 1 %</i> <i>With change of 2 %</i> <i>With change of 3 %</i> <b><i>With change of 5 %</i></b> <i>With change of 7 %</i> <i>With change of 10 %</i> <i>With change of 15 %</i>	After how much % change* in the control variable is the new value to be sent. Small values increase control accuracy but also the bus load.

Continuation:

Designation	Values	Meaning
2 point control		
<i>Hysteresis of 2 point control</i>	0.3 K 0.5 K 0.7 K <b>1 K</b> 1.5 K	Interval between the switch-off point (setpoint value) and the turn back on point (setpoint value – hysteresis). The hysteresis prevents constant switching on/off.  <b>Important:</b> If this parameter is changed, then all the setpoint values entered on the device will be deleted during download and overwritten with the current ETS values.
<i>Recirculation of hysteresis after switching point</i>	<b>none</b> 0.1 K/min 0.2 K/min 0.3 K/min	The recirculation causes a gradual decrease in the Hysteresis over time, and the control accuracy is increased.  The hysteresis is equivalent to the programmed value for each switch-off and is gradually reduced by the recirculation process. The hysteresis can reduce to 0 K over prolonged periods of switch-off. At the next switch-on, it is reset to the configured value.
<i>Sends the additional heating stage in cycles</i>	<b>not cyclical,</b> <b>only in the event of change</b> <b>every 2 min., every 3 min., every 5 min., every 10 min., every 15 min. every 20 min., every 30 min. every 45 min., every 60 min.</b>	How often is the current heating actuating value of the additional heating stage to be sent (regardless of changes)?

### 3.3.2.8 Actual value parameter page

Table 22

Designation	Values	Meaning
<i>Object function external actual value</i>	<i>not used</i>	VARIA measures and controls room temperature via the internal sensor.
	<i>take average with internal actual value</i>	VARIA takes an average of the room temperature received from the bus and its own measurements.
	<i>Control actual value</i>	VARIA solely acquires room temperature via the bus.
<i>Calibration value for internal sensor in 1/10 K (-64..63)</i>	<i>manual input -64 ... 63 Default value = 0</i>	Positive or negative adjustment of measured temperature in 1/10 K increments. Examples: a) VARIA sends 20.3°C. A room temperature of 21.0°C is measured using a calibrated thermometer. In order to increase the temperature of VARIA to 21 °C, "7" (i.e. 7 x 0.1K) must be entered. b) VARIA sends 21.3°C. 20.5°C is measured. In order to reduce the temperature of VARIA to 20.5 °C, "8" (i.e. -8 x 0.1K) must be entered.
<i>Transmission of actual value</i>	<i>not in the event of change with change of 0.2 K with change of 0.3 K with change of 0.5 K with change of 0.7 K with change of 1 K with change of 1.5 K with change of 2 K</i>	Is the current room temperature to be transmitted? If yes, from which minimum change should this be resent? This setting keeps the bus load as low as possible.

Continuation:

<b>Designation</b>	<b>Values</b>	<b>Meaning</b>
<i>"Actual value malfunction" telegram</i>	<i>always cyclically</i>	Error status is always sent: 1 = Actual value error 0 = No error
	<b><i>Only report cyclically in the event of malfunction</i></b>	Error status is only sent if no actual value has been received during the monitoring period.
<i>Send "actual value error"</i>	<i>every 2 min. every 3 min. every 5 min. every 10 min. every 15 min. every 20 min. <b>every 30 min.</b> every 45 min. every 60 min.</i>	How often should the error status be sent?
<b>Parameter for object ext. actual value</b>		
<i>Monitoring time for ext. actual value</i>	<i>do not monitor 5 min. <b>10 min.</b> 15 min. 20 min. 30 min. 45 min. 60 min.</i>	If no actual value is received within the configured period, the <i>response to loss of external actual value</i> parameter setting applies See below.
<i>Reaction to failure of external actual value or response prior to reception of first actual value (if monitoring is deactivated)</i>	<b><i>Control with internal sensor</i></b>  with PI control: 0 %, with 2-point control: Off with PI control: 10 %, with 2-point control: On with PI control: 20 %, with 2-point control: On with PI control: 30 %, with 2-point control: On with PI control: 50 %, with 2-point control: On	If the external actual value is no longer available or no valid value has been received: Use the internally measured room temperature for control (recommended).  Control heating with set actuating value without taking room temperature into account.





Continuation:

Designation	Values	Meaning
<i>Unadjusted base setpoint value</i>	15 °C, 16 °C, 17 °C 18 °C, 19 °C, 20 °C 21 °C, 22 °C, 23 °C 24 °C, 25 °C, 26 °C, 27 °C, 28 °C, 29 °C, 30 °C	(Only with format = <i>absolute</i> ). This is the base setpoint value for the remote controller. If correction is required, then it is added to this and the result is sent as a newer, adjusted setpoint value (See <a href="#">Obj. 2</a> ).
maximum adjustment	unlimited  +3 K <b>+5 K</b> +7 K	The setpoint value continues to increase in step with the outside temperature.  The setpoint value increase ends as soon as the adjustment has achieved the set value.
Send all setpoint adjustment	<i>not cyclical, only in the event of change</i> <i>every 2 min.</i> <i>every 3 min.</i> <i>every 5 min.</i> <i>every 10 min.</i> <i>every 15 min.</i> <i>every 20 min.</i> <b><i>every 30 min.</i></b> <i>every 45 min.</i> <i>every 60 min.</i>	When should the setpoint value adjustment be sent?

**Table 25: Only receive setpoint value adjustment**

Designation	Values	Meaning
<i>maximum adjustment</i>	<b><i>until heating temperature is achieved</i></b>  +3 K +5 K +7 K	The setpoint value must not exceed the heat protection temperature despite adjustment. The setpoint value adjustment must not exceed the set value.



Continuation

<b>Designation</b>	<b>Values</b>	<b>Meaning</b>
<i>Select favourites page</i>	<i>via object only</i>	The favourite page can be selected via object 121. It can, for example, be used as an "alarm page" and selected as required.
	<i>Via object and after 3 minutes without use</i>	The favourite page can be selected via object 121 and is also automatically displayed if the device is not used for more than three minutes.
<i>Blank out RTR page</i>	<i>yes</i>	This parameter is <b>not</b> available if the RTR page has been selected as a favourite.  Choose this setting if the RTR page is no longer designed to be called up (e.g. for hotel rooms etc.)
	<i>no</i>	Standard setting: The RTR page is always available

### 3.3.2.12 Weather data parameter page

For displaying the current measured values, e.g. from a Theben weather station.

Table 27

Designation	Values	Meaning
<i>Temperature unit</i>	°C	The temperature is displayed in °C.
<i>Min/max temperature recording</i>	<i>yes</i> <i>no</i>	Should the maximum and minimum temperature values be stored in the device?
<i>Wind unit</i>	<i>km/h</i> <i>m/s</i> <i>mph, calculated from m/s</i> <i>km/h, calculated from m/s</i>	Units for wind speed
<i>Min/max wind recording</i>	<i>yes</i> <i>no</i>	Should the maximum and minimum wind speed values be stored in the device?
<i>Record rain</i>	<i>yes</i> <i>no</i>	Should rainfall during the measuring period be recorded?
<i>Resetting min/max values</i>	<i>on device</i>  <i>via object</i>  <b><i>on device and via object</i></b>  <i>on device, via object and daily at 08:00</i> <i>on device, via object and daily at 12:00</i> <i>on device, via object and daily at 18:00</i> <i>on device, via object and daily at 22:00</i> <i>on device, via object and daily at 00:00</i>	How are the stored measurements deleted? By the user on the weather page.  By telegram on object 31  See above.  If the memory is not deleted by telegram or on the device, it is automatically deleted at the set time.

Continuation:

<b>Designation</b>	<b>Values</b>	<b>Meaning</b>
<i>Display before receipt of value</i>		What is displayed if no telegrams have been received and the object, therefore, does not have a defined status?
	<i>Space</i>	The display remains empty.
	---	Display 3 dashes.
	<i>according to object value after Reset</i>	Displays the value which is allocated the 0 value. Examples: 0 m/s 0.0 °C No rain
	<i>Read from object via bus</i>	Varia sends a read command to the allocated object as soon as the line is selected. The display remains empty if no answer is received.

### 3.3.2.1 Weather forecast parameter page 1

For displaying the weather forecasts in conjunction with Meteodata 139 EFR KNX.  
Only visible if the *Show weather forecast on page 1* parameter is set to *yes*.

**Table 28**

<b>Designation</b>	<b>Values</b>	<b>Meaning</b>
<i>Language</i>	German English French	Desired language for the weather forecast reports.
	additional language	Here, the user is able to enter the report text in their own language.
<i>Page heading. Weather forecast (6hr)</i>	Standard text: <i>Weather forecast (6hr)</i>	Customer-specific heading for the relevant page. Maximum text length: 22 characters

### 3.3.2.1 Parameter page page 1, forecast day.

Format of the 1st line: Selected forecast day, today, tomorrow, the day after tomorrow, day 3).  
 Only visible if the *Show weather forecast on page 1* parameter is set to *yes*.

Table 29

Designation	Values	Meaning
<i>Text adjustment</i>	<i>Flush left</i> <i>1 character entered flush left</i> <i>2 characters entered flush left</i> <i>3 characters entered flush left</i> <i>4 characters entered flush left</i> <b><i>5 characters entered flush left</i></b> <i>6 characters entered flush left</i> <i>7 characters entered flush left</i> <i>8 characters entered flush left</i> <i>Flush right</i> <i>1 character entered flush right</i> <i>2 characters entered flush right</i> ... <i>7 characters entered flush right</i> <i>8 characters entered flush right</i>	Positioning of the text lines received from the bus on the display.
<i>Display before receipt of value</i>	Space --- according to object value after Reset Read from object via bus	What is displayed if no telegrams have been received and the object, therefore, does not have a defined status?  The display remains empty.  Display 3 dashes.  The display remains empty.  Varia sends a read command to the allocated object as soon as the line is selected. The display remains empty if no answer is received.

### 3.3.2.1 Parameter pages page\_1, time interval.

Format of the 2nd line: Selected 6 hr time interval, 00:00-06:00, 06:00-12:00 etc.  
 Only visible if the *Show weather forecast on page 1* parameter is set to *yes*.

Table 30

Designation	Values	Meaning
<i>Text adjustment</i>	<i>Flush left</i> <i>1 character entered flush left</i> <i>2 characters entered flush left</i> <i>3 characters entered flush left</i> <i>4 characters entered flush left</i> <b>5 characters entered flush left</b> <i>6 characters entered flush left</i> <i>7 characters entered flush left</i> <i>8 characters entered flush left</i> <i>Flush right</i> <i>1 character entered flush right</i> <i>2 characters entered flush right</i> ... <i>7 characters entered flush right</i> <i>8 characters entered flush right</i>	Positioning of the text lines received from the bus on the display.
<i>Display before receipt of value</i>	Space --- <b>according to object value after Reset</b> Read from object via bus	What is displayed if no telegrams have been received and the object, therefore, does not have a defined status?  The display remains empty.  Display 3 dashes.  The display remains empty.  Varia sends a read command to the allocated object as soon as the line is selected. The display remains empty if no answer is received.

### 3.3.2.1 Parameter pages page\_1, weather.

Format of the 3rd line: anticipated weather scenario for the selected time interval, sunny, cloudy, etc.

Only visible if the *Show weather forecast on page 1* parameter is set to *yes*.

Table 31

Designation	Values	Meaning
<i>Text adjustment</i>	<i>Flush left</i> <i>1 character entered flush left</i> <i>2 characters entered flush left</i> <i>3 characters entered flush left</i> <i>4 characters entered flush left</i> <b><i>5 characters entered flush left</i></b> <i>6 characters entered flush left</i> <i>7 characters entered flush left</i> <i>8 characters entered flush left</i> <i>Flush right</i> <i>1 character entered flush right</i> <i>2 characters entered flush right</i> ... <i>7 characters entered flush right</i> <i>8 characters entered flush right</i>	Positioning of the text lines received from the bus on the display.
<i>Display before receipt of value</i>	Space --- <b>according to object value after Reset</b> Read from object via bus	What is displayed if no telegrams have been received and the object, therefore, does not have a defined status?  The display remains empty.  Display 3 dashes.  The display remains empty.  Varia sends a read command to the allocated object as soon as the line is selected. The display remains empty if no answer is received.

### 3.3.2.1 Parameter pages page\_1, temperature.

Format of the 4th line: Anticipated air temperature for the selected time interval.  
 Only visible if the *Show weather forecast on page 1* parameter is set to *yes*.

Table 32

Designation	Values	Meaning
<i>Display before receipt of value</i>		What is displayed if no telegrams have been received and the object, therefore, does not have a defined status?
	Space	The display remains empty.
	---	Display 3 dashes.
	according to object value after Reset <b>Read from object via bus</b>	0.0 °C Varia sends a read command to the allocated object as soon as the line is selected. The display remains empty if no answer is received.

### 3.3.2.1 Parameter pages page\_1, precipitation.

Format of the 5th line: Precipitation probability for the selected time interval.  
 Only visible if the *Show weather forecast on page 1* parameter is set to *yes*.

Table 33

Designation	Values	Meaning
<i>Text at object value 0</i>	Text entry: Maximum 7 characters	Text to be displayed at 0% value
<i>Display before receipt of value</i>	Space  ---  according to object value after Reset <b>Read from object via bus</b>	What is displayed if no telegrams have been received and the object, therefore, does not have a defined status?  The display remains empty.  Display 3 dashes.  0.0 °C  Varia sends a read command to the allocated object as soon as the line is selected. The display remains empty if no answer is received.

### 3.3.2.1 Parameter pages page\_1, precipitation amount.

Format of the 6th line: Anticipated precipitation amount for the selected time interval.  
 Only visible if the *Show weather forecast on page 1* parameter is set to *yes*.

Table 34

Designation	Values	Meaning
<i>Display before receipt of value</i>		What is displayed if no telegrams have been received and the object, therefore, does not have a defined status?
	Space	The display remains empty.
	---	Display 3 dashes.
	according to object value after Reset <b>Read from object via bus</b>	0.0 l/m <sup>2</sup> Varia sends a read command to the allocated object as soon as the line is selected. The display remains empty if no answer is received.

### 3.3.2.1 Parameter pages page 1, wind force .

Format of the 7th line: Anticipated wind speed for the selected time interval.  
 Only visible if the *Show weather forecast on page 1* parameter is set to *yes*.

Table 35

Designation	Values	Meaning
<i>Unit for display object</i>	Text entry: Maximum 3 characters	Abbreviation for the wind speed unit: m/s or. km/h
<i>Display before receipt of value</i>	Space  ---  according to object value after Reset <b>Read from object via bus</b>	What is displayed if no telegrams have been received and the object, therefore, does not have a defined status?  The display remains empty.  Display 3 dashes.  0.0 km/h  Varia sends a read command to the allocated object as soon as the line is selected. The display remains empty if no answer is received.

### 3.3.2.2 Display objects parameter pages, page 1..5

Table 36

Designation	Values	Meaning
<i>Page heading</i> (22)	Manual input	Customer-specific heading for the relevant page. Maximum text length: 22 characters
<i>Favourite line on page</i>	<i>no favourite</i> <i>Line 1</i> <i>Line 2</i> <i>Line 3</i> <i>Line 4</i> <i>Line 5</i> <i>Line 6</i> <i>Line 7</i> <i>Line 8</i>	Determines which line automatically appears as soon as the page is displayed.  If another line is selected, the favourite line can immediately be accessed by pressing the + or OK buttons.

### 3.3.2.3 Page 1, line 1 to page 5, line 8 parameter pages

VARIA has 5 display pages for individual applications. See appendix: [Freely programmable display pages](#).

#### 3.3.2.3.1 Common parameters

Table 37

Designation	Values	Meaning									
<i>Line format</i>	<i>entered text</i>	The line should only display one text. (max. 22 characters) and has no other function.  <b>Tip:</b> <b>This option can be used as required to supplement the text in an adjacent line or to represent an empty line.</b>									
	<i>Object type: switch</i>	No switching command can be received or sent.									
	<i>Object type: percentage value</i>	A percentage value can be received or sent.									
	<i>Object type: HVAC operating mode</i>	An HVAC operating mode can be received or sent.  <table border="1"> <thead> <tr> <th>Value</th> <th>Operating mode</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>Comfort</td> </tr> <tr> <td>2</td> <td>Standby</td> </tr> <tr> <td>3</td> <td>Night</td> </tr> <tr> <td>4</td> <td>Frost protection/heat protection</td> </tr> </tbody> </table>	Value	Operating mode	1	Comfort	2	Standby	3	Night	4
Value	Operating mode										
1	Comfort										
2	Standby										
3	Night										
4	Frost protection/heat protection										
	<i>Object type: 8-bit numeric value</i>	A 1 byte number (e.g. counter reading) can be received or sent. Value range: 0..255 or -128.. 127									

Continuation:

Designation	Values	Meaning								
<i>Line format</i>	<i>Object type: dimming</i>	Dimmer control with 2 objects: <i>Brighter/darker (4 bit)</i> and <i>On/Off</i>								
	<i>Object type: temperature</i>	A temperature value can, for example, be sent as a setpoint value for another temperature controller or just the temperature received or displayed via the bus.								
	<i>Object type: EIS 5</i>	A value with commas can be sent or received. Unit used (e.g. °C or m/s etc.) can be selected as required.								
	<i>Object type: 16-bit numeric value</i>	A 2 byte number (e.g. counter reading) can be received or sent. Value range: -32768.. 32767 or 0..65535								
	<i>Object type: scene</i>	Up to 64 scenes can both be displayed and learned								
	<i>Object type: Blinds/shutters</i>	Blinds control with 2 1-bit objects: <i>Up/down</i> and <i>step/stop</i>								
<i>Object type: priority</i>	3 priority statuses can be received or sent.									
		<table border="1"> <thead> <tr> <th>Function</th> <th>Value</th> </tr> </thead> <tbody> <tr> <td>Priority inactive (no control)</td> <td>0 (00<sub>bin</sub>)</td> </tr> <tr> <td>Priority ON Priority ON (control: enable, on)</td> <td>3 (11<sub>bin</sub>)</td> </tr> <tr> <td>Priority OFF (control: disable, off)</td> <td>2 (10<sub>bin</sub>)</td> </tr> </tbody> </table>	Function	Value	Priority inactive (no control)	0 (00 <sub>bin</sub> )	Priority ON Priority ON (control: enable, on)	3 (11 <sub>bin</sub> )	Priority OFF (control: disable, off)	2 (10 <sub>bin</sub> )
Function	Value									
Priority inactive (no control)	0 (00 <sub>bin</sub> )									
Priority ON Priority ON (control: enable, on)	3 (11 <sub>bin</sub> )									
Priority OFF (control: disable, off)	2 (10 <sub>bin</sub> )									
		Each status can be individually renamed.								

Continuation:

Designation	Values	Meaning
<i>Line format</i>	<i>Object type: show text string</i>	A freely chosen 14-character text (14 byte) can be received and displayed from the bus.
	<i>Object type: valuator</i>	Here, the user can choose from 8 separate predefined values (0..255). Use: e.g. volume control.
	<i>Object type: floating-point number (DPT 14.xxx)</i>	A 4-byte floating-point number from the bus can be received and displayed here. Value range: -3,4.10 <sup>38</sup> ... 3,4.10 <sup>38</sup>
<i>Text for line 1..8</i>	Manual input	Enter line description.
<i>Authorise amendment of object value?</i>	<i>yes</i>	This parameter determines the <b>data orientation</b> for the object allocated to the individual line (See <a href="#">Objects 39, 41...</a> ).  The value/status on the display line can be changed by the user on the device. The changed value is sent to the bus and can be overwritten with received values.
	<i>no</i>	The line only displays the received values.
<i>Display before receipt of value</i>	<i>Space</i>	What is displayed if no telegrams have been received and the object, therefore, does not have a defined status?  The display remains empty
	<i>---</i>	Display 3 dashes

Continuation:

Designation	Values	Meaning
<p><i>Display before receipt of value</i></p>	<p><i>Corresponding object value after reset</i></p>	<p>Displays the value which is allocated the 0 value depending on object type.                      Examples:                      0                      0.00                      off                      0%                      0.0 °C etc.</p>
	<p><i>Read from object via bus</i></p>	<p>Varia sends a read command to the allocated object.                      The display remains empty if no answer is received.</p> <p><b>Important:</b> Each time a page or line with objects with undefined status is selected these objects are requested by VARIA via a read telegram.</p>

**3.3.2.3.2 Specific parameters according to object type**

Important: Certain parameters only become visible when the *allow changes to object value?* parameter is set to *yes*.

Certain parameters can be faded out or renamed depending on the setting.

**Important:**

Text for line is displayed flush left

Unit is always displayed from the 20th position

**Table 38**

Designation	Values	Meaning
Switch on object type		
<i>Text at object value = 0</i> (7)	Text entry: Maximum 7 characters	Text to be displayed at <i>Off</i> switching status
<i>Text at object value = 1</i> (7)	Text entry: Maximum 7 characters	Text to be displayed at <i>On</i> switching status
<i>Function of +/- buttons</i>	<i>switch</i>	every time the + or – buttons are pressed, the channel sends a telegram with the opposite switching status (ON/ OFF/ ON...)
	+ = <i>ON</i> / - = <i>OFF</i>	Only switch-on telegrams are with the + key. Only switch-off telegrams are sent with the - key.
	+/- = <i>ON</i>	Only switch-on telegrams are sent using both buttons.
	+/- = <i>OFF</i>	Only switch-off telegrams are sent using both buttons.

Continuation:

Designation	Values	Meaning
Percentage value object type		
<i>Text at object value = 0</i> (7)	Text entry: Maximum 7 characters	Text to be displayed at 0% value
<i>Increment</i>	1 %, 2 %, , 5 %, <b>10</b> % 20 %, 25 %, 33 % 50 %	by what % should the value change at each push of the button (+/-) ?
<i>Lower adjustable threshold value</i>	0 %..100 %	Determines the lowest percentage value that can be set
<i>Upper adjustable threshold value</i>	0 %..100 %	Determines the highest percentage value that can be set
HVAC operating mode object type		
<i>Adjustable operating modes</i>	<i>all operating modes</i> <b>all operating modes except auto</b> <i>Night, standby and comfort</i> <i>Comfort and night only</i> <i>Comfort and standby only</i>	Which operating modes should be available?
Counter value 0..255 object type		
<i>Unit</i>	Text entry: Maximum 3 characters	Abbreviation for the unit that goes with the value, e.g. pcs
<i>Value range</i>	<i>positive numbers only</i>  <i>negative and positive numbers</i>	0..255  -128..127
<i>Increment</i>	1..255	how much should the value change at each push of the button (+/-) ?
<i>Lower adjustable threshold value</i>	0..255 or -128..127*	Determines the lowest value that can be set
<i>Upper adjustable threshold value</i>	0..255 or -128..127*	Determines the highest value that can be set
Dimming object type		
<i>Text at object value = 0</i> (7)	Text entry: Maximum 7 characters	Text to be displayed when the light is switched off
<i>Text at object value = 1</i> (7)	Text entry: Maximum 7 characters	Text to be displayed when the light is switched on

\*Depending on selected value range.

Continuation:

<b>Designation</b>	<b>Values</b>	<b>Meaning</b>
<i>Dimming process is stopped by</i>	<i>Releasing the button</i>  <i>OK button</i>	The dimming value changes as long as the + or – button is pressed or a final value is reached (0% or 100 %). The value reached is retained when the button is released.  When the (+/-) button is pressed the dimming value changes as long as the OK button is depressed or a final value is reached (0% or 100 %).
<b>Temperature object type</b>		
<i>Unit for display object (3)</i>	Text entry: Maximum 3 characters	Abbreviation for the unit that goes with the value, e.g. °C
<i>Increment</i>	<i>0.1 °C</i> <i>0.2 °C</i> <i>0.5 °C</i> <i>1 °C</i> <i>2 °C</i> <i>5 °C</i> <i>10 °C</i>	by how many °C should the value change at each push of the button (+/-) ?
<i>Lower adjustable threshold value (-20..50 °C)</i>	<i>-20 °C..50 ° C</i>	Determines the lowest value that can be set
<i>Upper adjustable threshold value (0..50 °C)</i>	<i>0 °C..50 °C</i>	Determines the highest value that can be set



Continuation:

<b>Designation</b>	<b>Values</b>	<b>Meaning</b>
<i>lower adjustable scene number</i>	<b>1..64</b>	Determines the number range of the scenes used.
<i>upper adjustable scene number</i>	<b>1..64</b>	Only visible if <i>Allow change of object value ?</i> parameter = <i>yes</i>
<i>Allocate text to scene number</i>	<b>no, only display number</b>  <i>yes, display text instead of number</i>	Varia only displays the scene numbers The scene numbers are replaced by individual scene names such as e.g. holiday, evening etc...  The required scene numbers are entered on the <i>text list</i> parameter page. See appendix: <a href="#">Allot scene numbers text</a>
<i>Name of lower adjustable scene</i>	<b>see text list: text 1</b> ... <i>see text list: text 40</i>	Only if <i>Allow change of object value ? = yes</i> . Which text should be allocated to the lower scene numbers ?
<i>Lowest scene number with text</i>	<b>1..64</b>	Only if <i>Allow change of object value ? = no</i> From which scene number should the scene number be replaced by text? <i>Text list</i> parameter page See appendix: <a href="#">Allot scene numbers text</a>
<i>Text for this scene number</i>	<b>see text list: text 1</b> ... <i>see text list: text 40</i>	Text for the <i>lowest scene number with text</i> entered above

Continuation:

<b>Designation</b>	<b>Values</b>	<b>Meaning</b>
Object type: Blinds/shutters		
<i>Movement is stopped by</i>	<b>Releasing the button</b>  <i>short use or via OK button</i>	The drive operates for as long as the button is pressed or the end position is reached. The drive starts with a long push of the button and can be stopped by briefly pressing the button or by confirming with OK button.
Object type: priority		
<i>Text at "no priority "</i> (6)	Text entry: Maximum 6 characters	Text to be displayed at <i>no priority</i> status
<i>Text at "priority Off "</i> (6)	Text entry: Maximum 6 characters	Text to be displayed at <i>priority Off</i> status
<i>Text at "priority On "</i> (6)	Text entry: Maximum 6 characters	Text to be displayed at <i>priority On</i> status
Object type: show text string		
<i>Text adjustment</i>	<b>Flush left</b> <i>1 character entered flush left</i> <i>2 characters entered flush left</i> <i>3 characters entered flush left</i> <i>4 characters entered flush left</i> <i>5 characters entered flush left</i> <i>6 characters entered flush left</i> <i>7 characters entered flush left</i> <i>8 characters entered flush left</i> <b>Flush right</b> <i>1 character entered flush right</i> <i>2 characters entered flush right</i> ... <i>7 characters entered flush right</i> <i>8 characters entered flush right</i>	Positioning of the text lines received from the bus on the display.

Continuation:

Designation	Values	Meaning
Object type: valuator		
<i>Use which of the following values?</i>	<i>Value 1 only</i> <b><i>Values 1 and 2</i></b> <i>Values 1-3</i> <i>Values 1-4</i> <i>Values 1-5</i> <i>Values 1-6</i> <i>Values 1-7</i> <i>Values 1-8</i>	This type of valuator allows individually predefined values to be directly selected and sent at the push of a button (+/-). The number of values to be made available is set here.  The enables quick and easy setting as this just leaves the necessary values to choose from.
<i>Value 1</i> <i>Value 2</i> ... <i>Value 7</i> <i>Value 8</i>	Manual input 0 ... 255	Input of required values
<i>Allocate text to values?</i>	<i>No, only display number</i>  <i>yes, display text instead of number</i>	Varia only displays the configured values.  Varia sends the configured values and displays the text allocated to each value  The required scene numbers are entered on the <i>text list</i> parameter page. See appendix: <a href="#">Allot scene numbers text</a>
<i>Text for value 1</i>	<i>See text list: text 1</i> ... <i>See text list: text 40</i>	Reference to the text that is to be displayed for the predefined value 1
<i>=&gt; NOTE: following values</i>	<i>have the subsequent texts</i>	Example: If text 11 is selected for value 1 then value 2 is allocated the following text, i.e. text 12 etc.

Continuation:

Designation	Values	Meaning
Object type: floating-point number (DPT 14.xxx)		
<p><i>Unit for display object</i></p>	<p>Text entry: Maximum 3 characters</p>	<p>Abbreviation for the unit that goes with the value, e.g. pcs</p> <p><b>Fixed display with 2 decimal points.</b> (From firmware version 064, middle of 2012): When inserting currency (\$, EUR, £, CHF, DKK, SEK, NOK, TRY, RUB) the display format is automatically set to 2 decimal places. Value range: -10000.00 .. 10000.00. Numbers with more digits are displayed without decimal point.</p> <p><b>Fixed display with 1, 2 or 3 decimal points.</b> The decimal points can also be set without currency. In addition, the desired number is set in the unit filed after a full stop. .1 for 1 decimal point .2 for 2 decimal points .3 for 3 decimal points</p> <p>This digit sequence (.1, .2, .3) is not displayed on the screen. The potential value range changes according to the number of decimal points.</p>

### 3.3.2.4 Text list parameter page

Table 39

Designation	Values	Meaning
Text 1 ... Text 40	(10)  (10)	Text entry: Maximum 10 characters
		The entered texts can replace values or scene numbers from the page 1..5, lines 1..8 parameter pages.

### 3.3.2.5 Time program channel 1 (for RTR) parameter page

Table 40

Designation	Values	Meaning
<i>Name of channel</i>	manual input (max. 8 characters)	Input of description for channel 1 (e.g. heating)
<i>Type of switching program</i>	<i>HVAC operating mode</i>	Channel 1 is exclusively designed for controlling HVAC operating modes and is internally linked to the room thermostat.
<i>Switching program after download</i>	<p><i>unchanged</i></p> <p><b>Program 1 (at home during the day)</b></p> <p><i>Program 2 (out during the day)</i></p> <p><b>Program 3 (out during the morning)</b></p> <p><i>own program</i></p> <p><i>no program</i></p>	<p>Which program is to be active after downloading in VARIA? The program that was active before the download should continue.</p> <p>Mon-Fri: 06:00 – 22:00 comfort Mon-Fri: 22:00 – 06:00 night Sat, Sun: 08:00 – 23:00 comfort Sat, Sun: 23:00 – 08:00 night Mon-Fri: 06:00 – 8:00 comfort Mon-Fri: 08:00 – 17:00 night Mon-Fri: 17:00 – 22:00 comfort Mon-Fri: 22:00 – 06:00 night Sat, Sun: 08:00 – 23:00 comfort Sat, Sun: 23:00 – 08:00 night Mon-Fri: 06:00 – 8:00 comfort Mon-Fri: 08:00 – 12:00 standby Mon-Fri: 12:00– 22:00 comfort Mon-Fri: 22:00 – 06:00 night Sat, Sun: 08:00 – 23:00 comfort Sat, Sun: 23:00 – 08:00 night The programs entered on the device by the user are valid.* Channel 1 is completely deactivated.</p>
<i>Change switching program via user</i>	<i>disabled</i> <b>enabled</b>	Can the user switch the time program to channel 1?

Continuation:

<b>Designation</b>	<b>Values</b>	<b>Meaning</b>
<i>Reaction after unlocking</i>	<p><i>Operating mode of switching program starts immediately</i></p> <p><i>Operating mode functions after next time program change</i></p>	<p>As soon as the channel is unlocked the RTR takes up the prescribed operating mode from the time program.</p> <p>No reaction when cancelling the lock. These are only taken up by the RTR if the channel switches to another operating mode based on a switching program.</p>
<i>Send time program cyclically (if used)</i>	<p><b>not cyclical, only in the event of change</b></p> <p><i>every 2 min.</i></p> <p><i>every 3 min.</i></p> <p><i>every 5 min.</i></p> <p><i>every 10 min.</i></p> <p><i>every 15 min.</i></p> <p><i>every 20 min.</i></p> <p><i>Every 30 min.</i></p> <p><i>every 45 min.</i></p> <p><i>every 60 min.</i></p>	<p>When is the status of the switching program sent from channel 1?</p>

\* If the own program is selected via the *time program after download* it is not lost but instead can be reactivated at any time.

### 3.3.2.6 Time program channel 2..8 parameter pages

Table 41

Designation	Values	Meaning
<i>Name of channel</i>	manual input (max. 8 characters)	Input of description for channel (e.g. "light 1")
<i>Type of switching program</i>	<b><i>HVAC operating mode</i></b>	The channel can send up to 3 different statuses: comfort, standby and night operation , i.e. stage 1, 2 and 3 (input on device).
	<i>On/Off</i>	The channel can only send 2 statuses; On and Off
	<i>Valuator</i>	The channel can send up to 3 different 1-byte values (0..255).
	<i>percentage value</i>	The channel can send up to 3 different percentage values (0..100%).
	<i>Temperature in °C</i>	The channel can send up to 3 different temperature values. Example: Setpoint values for a thermostat.
	<i>Temperature in K</i>	The channel can send up to 3 different temperature differential values. Example: Temperature decrease or increase for a thermostat.

Continuation:

Designation	Values	Meaning
<p><i>Switching program after download</i></p>	<p><i>unchanged</i></p> <p><i>Program 1 (at home during the day)</i></p>	<p>Which program is to be active after downloading?</p> <p>The program that was active before the download should continue.</p> <p>Mon-Fri: 06:00 – 22:00 On or stage 3                      Mon-Fri 22:00 – 06:00 Off or stage 1                      Sat, Sun: 08:00 - 23:00 On or stage 3                      Sat, Sun: 23:00 - 08:00 Off</p>
	<p><i>Program 2 (out during the day)</i></p>	<p>Mon-Fri: 06:00 - 08:00 On or stage 3                      Mon-Fri: 08:00 - 17:00 Off or stage 1                      Mon-Fri: 17:00 - 22:00 On or stage 3                      Mon-Fri 22:00 – 06:00 Off or stage 1                      Sat, Sun: 08:00 - 23:00 On or stage 3                      Sat, Sun: 23:00 - 08:00 Off or stage 1</p>
	<p><i>Program 3 (out during the morning)</i></p>	<p>Mon-Fri: 06:00 - 08:00 On or stage 3                      Mon-Fri: 08:00 - 12:00 On or stage 2                      Mon-Fri: 12:00 - 22:00 On or stage 3                      Mon-Fri 22:00 – 06:00 Off or stage 1                      Sat, Sun: 08:00 - 23:00 On or stage 3                      Sat, Sun: 23:00 - 08:00 Off or stage 1</p>
	<p><i>own program</i></p> <p><i>no program</i></p>	<p>The programs entered on the device by the user are valid.*</p> <p>Channel is completely deactivated.</p>

\* If the own program is selected via the *time program after download* it is not lost but instead can be reactivated at any time.

Continuation:

Designation	Values	Meaning
<i>Change switching program via user</i>	<i>disabled</i> <i>enabled</i>	Can the user change the time program?
<i>Reaction after unlocking</i>	<i>Only send status after next change</i>  <i>Immediately send current status</i>	Only send when the channel status changes. <b>Important:</b> If <i>send cyclically</i> is selected, cyclic sending is only active after next change.  The channel status is sent immediately as soon as the lock is cancelled.
<i>Send time program cyclically (if used)</i>	<b><i>not cyclical, only in the event of change</i></b> <i>every 2 min.</i> <i>every 3 min.</i> <i>every 5 min.</i> <i>every 10 min.</i> <i>every 15 min.</i> <i>every 20 min.</i> <i>Every 30 min.</i> <i>every 45 min.</i> <i>every 60 min.</i>	When should the status of the channel be sent?

## 4 Start-up

### 4.1 *Activate program mode*

The program mode can be motivated in 2 different ways.

- Move a magnet along the right upper side of the device
- Menu → Settings → System → Select Prog Mode  
and set to *active* using the + button.

The LED on the right upper side of the device lights up and the device can be programmed

**After the device has been programmed for the first time, the settings menu can be selected without entering the PIN.**

## 4.2 Settings menu


The *SETTINGS* menu is opened using the menu button.  
 A PIN code may be required depending on configuration.

### 4.2.1 PIN code

If PIN code protection is configured (Parameter page *General, settings menu on device = released by PIN*), after selecting Menu → Settings, the PIN entry **PIN 5555** appears in the display and the first space is blacked out.

Select the right number using the +/- buttons and confirm with OK.  
 Every time the button is pressed the next entry space is automatically selected.

The settings menu appears after the last position has been completed and confirmed.

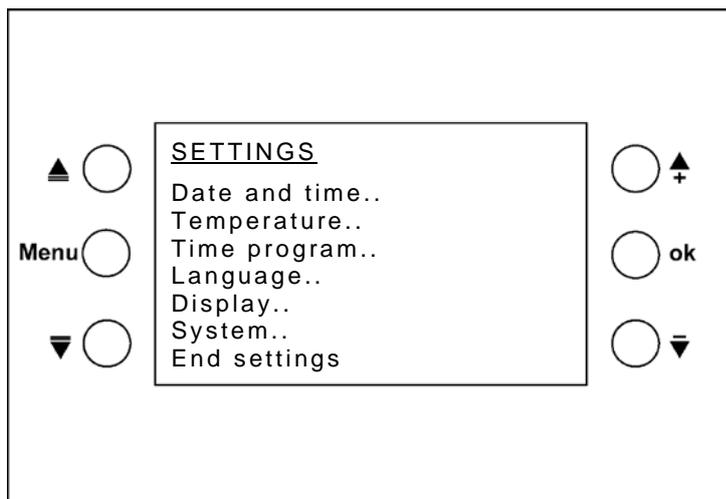

### 4.2.2 Date and time

Select the line to be changed with the ▲▼ buttons.

Press OK: The value to be changed is blacked out.

Use +/- to change the value and move to the next value by pressing OK.

### 4.2.3 Temperature

Individual setpoint values for the different operating modes can be entered here.

**Room temp** If the installation location is unsuitable for measuring room temperature this can be corrected here.



Setpoint value in comfort mode (16 °C to 28 °C)



Setpoint value in standby mode (maximum of 5 K lower than in comfort mode)



Setpoint value in night operation mode (maximum of 8 K lower than in comfort mode)

#### Advice on entering setpoint values:

The night operation setpoint value must be lower than the setpoint value for comfort mode.

**Table 42: Setting ranges**

Operating mode	Setting range
Standby	Comfort heating – 0..5 K
Night	Comfort heating – 3..8 K
Comfort in cooling mode	Comfort heating + dead zone*

\* Dead zone = 1..6 K

Non-permitted values are automatically corrected if required. Here, the ETS threshold parameter is taken into consideration, i.e. both *minimum* and *maximum valid setpoint value* as well as the *setpoint value for frost protection mode*.

#### Example:

Heating setpoint value = 20 °C, night 14 °C

If the heating setpoint value is increased to 24 °C, then the setpoint value in night mode changes automatically to 16 °C, as a maximum reduction of 8 K is permissible in night operation mode (24 °C – 8 K = 16 °C).

See table above: Setting ranges.

#### 4.2.4 Time program

There are 8 channels (time programs) available.

Both customer-specific and preset switching programs can be selected.

The programs are weekly programs with a minimum time interval of 15 minutes.

Programming is completed on the device. ETS is only used to determine whether and which programs are active.

Channel 1 is internally linked to the temperature controller and controls the operation modes.

The current channel status is reported back to object 10.

See [Time program channel 1 \(for RTR\) parameter page](#)


Channels 2 to 8 can send all types of telegrams to the bus.

2 or 3 operating modes/values can be sent depending on the configuration.

See [Time program channel 2..8 parameter pages](#)

### 4.2.4.1 Time program overview page

Set cursor using the ▲▼ buttons to **time program** and confirm by pressing OK  
 This page is used to display time programs for each channel.

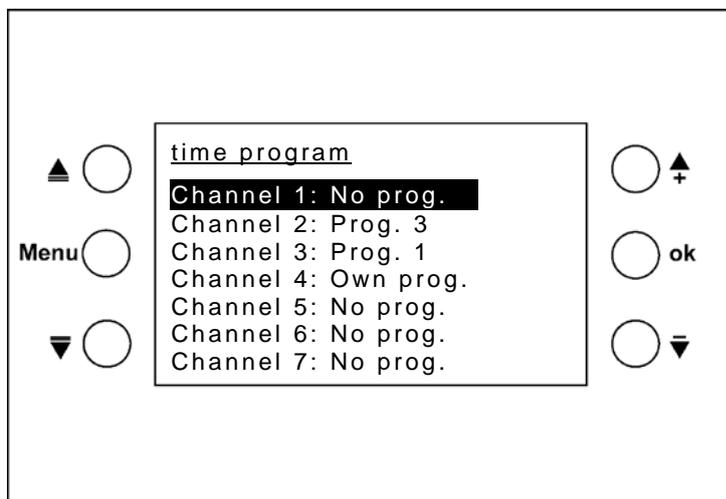

Programs 1-3 are fixed preset programs for heating applications.  
 Fixed means that they cannot be changed.  
 It is, however, possible to copy them on channels with an own program to use as a template.

The +/- buttons can be used in each channel to select from 5 program options:

- Program 1
- Program 2
- Program 3
- Own program
- No program

Depending on the ETS setting (*type of time program*) these programs function as

- 3 stage,
- 2 stage or
- HVAC programs.

For channel 1 the *type of time program = HVAC operating mode* is unchangeable

3-stage programs are possible with: percentage value, valuator, temperature in °C and temperature differential in K.

3 different values can be sent during the course of a day.

**Table 43: Program options depending on selected *type of time program* (ETS).**

	Switching times	<i>Type of switching program</i>		
		HVAC	On/Off	3 steps
Program 1	Mon-Fri: 06:00 - 22:00	Comfort	On	Stage 3
	Mon-Fri: 22:00 - 06:00	Night	Off	Stage 1
	Sat, Sun: 08:00 - 23:00	Comfort	On	Stage 3
	Sat, Sun: 23:00 - 08:00	Night	Off	Stage 1
Program 2	Mon-Fri: 6:00 – 8:00	Comfort	On	Stage 3
	Mon-Fri: 8:00 – 17:00	Night	Off	Stage 1
	Mon-Fri: 17:00– 22:00	Comfort	On	Stage 3
	Mon-Fri: 22:00 - 06:00	Night	Off	Stage 1
	Sat, Sun: 08:00 - 23:00	Comfort	On	Stage 3
	Sat, Sun: 23:00 - 08:00	Night	Off	Stage 1
Program 3	Mon-Fri: 06:00 – 08:00	Comfort	On	Stage 3
	Mon-Fri: 08:00 – 12:00	Standby	Off	Stage 2
	Mon-Fri: 12:00– 22:00	Comfort	On	Stage 3
	Mon-Fri: 22:00 - 06:00	Night	Off	Stage 1
	Sat, Sun: 08:00 - 23:00	Comfort	On	Stage 3
	Sat, Sun: 23:00 - 08:00	Night	Off	Stage 1
Own program	The programs entered on the device by the user are valid.*			
No program	Channel 1 is completely deactivated.			

\* If the own program is selected via the *time program after download* it is not lost but instead can be reactivated at any time.

**Special case:**

**Switch existing 3 stage *time program* with the ETS to On/Off program .**


The device has a time program with 3 stages and type of program is reconfigured to a 2 stage program.

Stages 1 and 2 are combined.

**Table 44: Conversion from 3 to 2 stages**

Before: 3-stage program	After: On/Off program
Stage 1	Off
Stage 2	
Stage 3	On

### 4.2.4.2 Display, enter or change programs

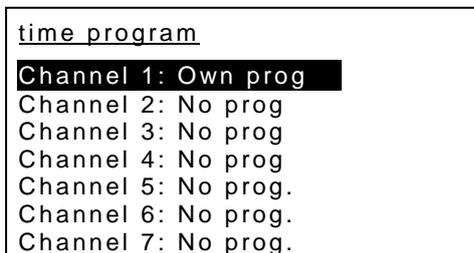

Use the buttons on the overview page to select channel and press OK  
 An overview page appears for the selected channel (except for "no program").

Set the day of the week with the +/- buttons.

The associated program is displayed on the screen.

By leafing through with +/- to the weekday you can get a quick overview of the whole week.


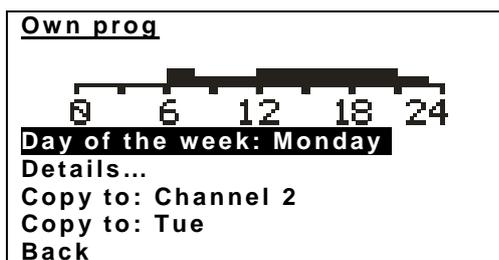



Table 45: Representation of switching statuses on the time bar

Time bar	Type of switching program		
	HVAC	On/Off	3 steps
	Night	Off	1
	Standby		2
	Comfort	On	3


For a more detailed view of the program or to change own program, select details and confirm with OK.

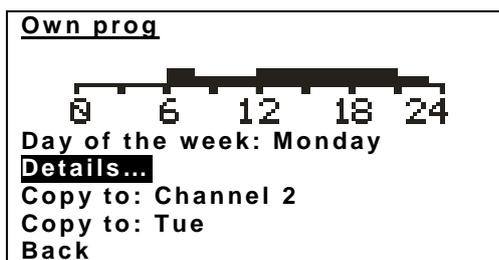


The buttons have new functions in the detailed view.  
 These are shown as symbols on the display next to the relevant buttons.  
 The cursor  $\blacktriangledown$  above the time bar points to the selected 15 minute segment.  
 The up arrow  $\blacktriangle$  shows the associated status.

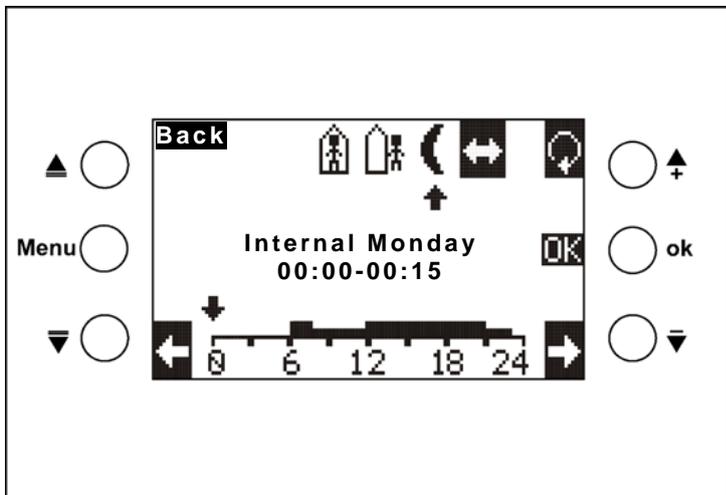

Type of time program: HVAC

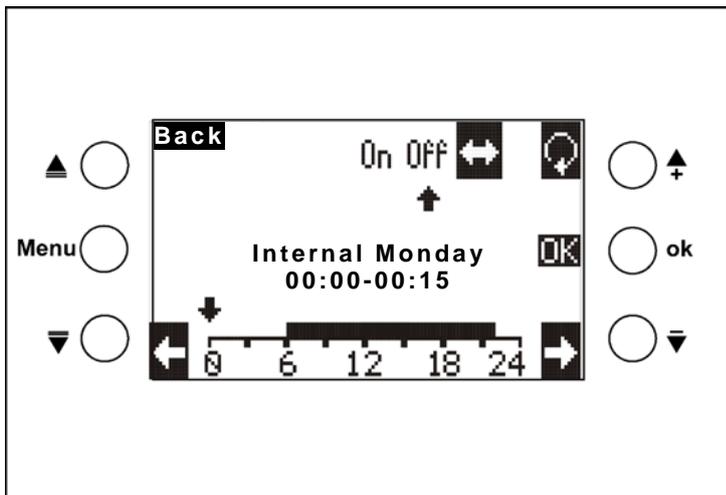

Type of switching program: On/Off

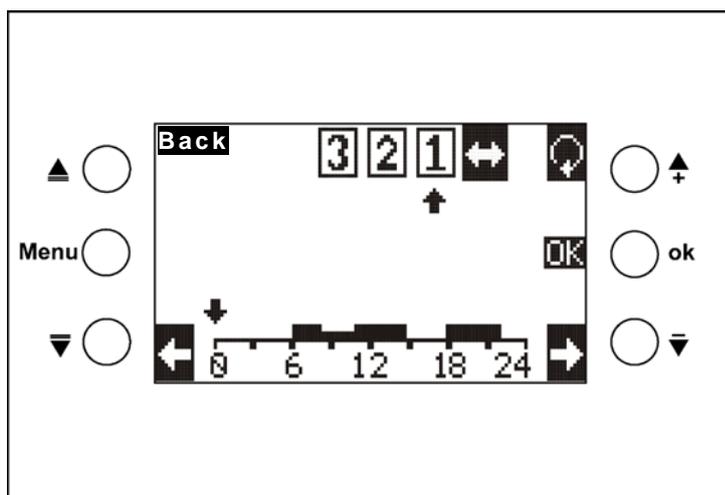

Type of time program: 3 stage

**Table 46: Button symbols**

Button	Symbol	Button function
+		Select operating mode: Current cursor function is displayed by the arrow : See next table.
		Move the program cursor left and program the desired status with the  button
-		Move the program cursor right and program the desired status with the  button
	<b>Back</b>	Leave detailed view

**Table 47: Select the cursor functions via the button.**

Button	Function	
	The cursor can be moved over the time bar without changing the program and the current status is shown by the arrow  on the top right. The corresponding time span is blended in above the time bar (e.g. 06:00 - 06:15).	
	The cursor  programs the "night" operating mode.	
	The cursor  programs the "standby" operating mode.	
	The cursor  programs the "comfort" operating mode.	
<b>On</b>	The cursor  programs the switch-on time	On/Off
<b>Off</b>	The cursor  programs the switch-off time	
<b>1</b>	The cursor  programs stage 1	Percentage value Valuator Temperature in °C Temperature difference in K See <a href="#">Time program channel 2..8 parameter pages</a>
<b>2</b>	The cursor  programs stage 2	
<b>3</b>	The cursor  programs stage 3	

### Program entry:


The symbol  is highlighted in black : With the help of the arrow buttons   the cursor can be moved to the desired position (time) for programming.

Select the desired status (or stage) via the  button, which will be highlighted in black.

Use the  button to move the cursor, the status is accepted.

The  button can be used at anytime to select another status or the  symbol used to deactivate the selection.

After programming is completed, press OK.

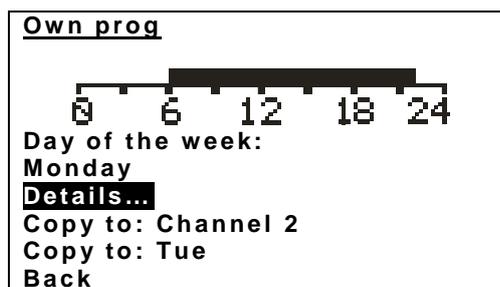

### The "Copy to weekday" function

Use +/- to select weekday and confirm with OK.

The daily program displayed in the graphics is copied to the selected weekday of the same channel

### The "Copy to channel n" function

Use +/- to select desired channel and confirm with OK.

All weekdays are copied to the selected channel.

## 4.2.5 Language

Use   buttons to select desired language for VARIA and confirm with OK.

Exit menu with **Back** and OK.

## 4.2.6 Display

Table 48

Menu item	Description
Button sound	What does a beep signify on pressing the buttons?
Button light	Should the display backlighting come on for 30 seconds when the buttons are pressed?
Max. brightness	Controls brightness if display lighting with push of a button. (0-100%)

## 4.2.7 System

Menu item	Description
Prog. mode	With this function, the programming LED can be switched on with the +/- buttons and the device programmed with the ETS.
Phys. address	The current physical address of the device is displayed
SW:	Data for diagnostic purposes
S/N:	
FD:	

### 4.3 Freely programmable display pages

VARIA has 5 freely programmable display pages with 8 independent, freely programmable lines that can be activated on the *select display pages* parameter pages (parameter *fade in page x for display objects*).

**Display page 1 can be used in conjunction with the weather data receiver Meteodata 139 EFR KNX to display weather forecasts directly.** See [Weather forecasts with Meteodata 139 EFR KNX](#)

Each line is divided up into 1 to 3 sections:

- A descriptive text (e.g. kitchen temperature)
- of a value or status display (= object value or status)
- if necessary, a unit display (e.g. °C)

Each line is assigned an object (see [Obj. 39](#)), with the dimmer or blinds control function there are two (see [Obj. 40](#)).

2 functions can be used according to the line format:

- Display value or status
- Display value or status and change using + and - buttons.

This is defined by the *permit change of object value?* parameter.

**Table 49: Overview of line formats**

Line format	Parameters	Length	Object type
Entered text	Line texts	22	-
Switch on object type	Line texts	14	1 bit
	Text at object value = 0 / 1	7	KNX 1.001
Percentage value object type	Line texts	14	1 byte
	Text at object value 0	7	KNX 5.001
HVAC operating mode object type	Line texts	14	1 byte KNX 6.010
Counter value 0..255 object type	Line texts	14	1 byte
	Unit for display object	3	KNX 6.010
Dimming object type	Line texts	14	4 bit
	Text at object value = 0 / 1	7	KNX 3.007
Temperature object type	Line texts	12	2 byte
	Unit for display object	3	KNX 9.001
EIS 5 object type	Line texts	11	2 byte
	Unit for display object	3	KNX 9.*
Counter value 0..65535 object type	Line texts	14	2 byte
	Unit for display object	3	KNX 8.*
Scene object type	Line texts	11	1 byte KNX 6.010
Blinds/shutters object type	Line texts	22	1 bit KNX 1.009 / 1.010
Priority object type	Line texts	12	2 bit KNX 2.001
	Text at "no priority "	7	
	Text at "priority Off "	7	
	Text at "priority On "	7	
Display text string object type	Bus telegrams	14	14 byte KNX 16.000

➔ See Example "[Maximum text length for the display page, according to line format](#)" and [Template](#) at the end of the manual.

### 4.3.1 Operation

The value or status can only be changed if the *changing the object value* parameter is set to *yes*.

Otherwise, values and statuses can only be displayed.

Only the amendable lines can be selected using the ▲▼ buttons; the others are missed out.

<i>Line format</i>	<i>Permit changing object value</i> parameter	
	yes	no
<i>entered text</i>	Does not require operation as only text is displayed.	
<i>Object type: switch</i>	The switching status is selected using the + / - buttons	Received switching status is displayed
<i>Object type: percentage value</i>	The percentage value is set using the + / - buttons and confirmed with OK	Received percentage value is displayed
<i>Object type: HVAC operating mode</i>	The desired operating mode is set using the + / - buttons and confirmed with OK	Received operating mode is displayed
<i>Object type: counter value 0..255</i>	The desired value is set using the + / - buttons and confirmed with OK	Received value is displayed
<i>Object type: dimming</i>	Briefly press button: + button = switch on - button = switch off The reaction if the button is pressed longer depends on setting of the <i>Dimming process is stopped by</i> parameter.	
<i>Object type: temperature</i>	The desired temperature (e.g. setpoint value for a thermostat) mode is set using the + / - buttons and confirmed with OK	Received temperature is displayed
<i>Object type: EIS 5</i>	The desired value is set using the + / - buttons and confirmed with OK	Received value is displayed
<i>Object type: counter value 0..65535</i>	The desired value is set using the + / - buttons and confirmed with OK	Received value is displayed
<i>Object type: scene</i>	The desired scene is set using the + / - buttons and confirmed with OK.	Received scene number or associated text is displayed

Continuation:

<i>Line format</i>	Permit <i>changing object value</i> parameter	
	yes	no
<i>Object type: Blinds/shutters</i>	Briefly press button: + button = step up or stop + button = step down or stop  The reaction if the button is pressed longer depends on setting of <i>the Movement is stopped</i> by stopping the dimmer process.	
<i>Object type: priority</i>	The desired priority is set using the + / - buttons and confirmed with OK.	Received priority mode is displayed
<i>Object type: show text string</i>	No operation required. A 14 character text is received and displayed from each line object.	
<i>Object type: valuator</i>	The +/- buttons can be used to select up to 8 predefined values or associated texts	Display value or associated text

### 4.3.2 Hints on setting up pages

The *line format = entered text*, i.e. pure text line, can prove helpful in different cases, e.g. as an empty line, as a supplementary line or provide assistance to the user:

#### Case 1: A maximum of 4 lines are required per page:

A clear and easy to read view can be achieved if functions are only configured for every second line and the remaining ones are configured as empty lines.

#### Example:

- Line 1: *Line format = entered text* with empty text field.
- Line 2: *Line format = Switching*
- Line 3: *Line format = entered text* with empty text field
- Line 4: *Line format = Switching*
- Etc.

<b>CONFERENCE ROOM 5</b>	
<b>Ceiling light</b>	<b>OFF</b>
<b>Right hand light</b>	
<b>Left hand light</b>	
<b>Path lighting</b>	<b>OFF</b>

#### Case 2: The required text is longer than the space available per line

In this case, an adjacent line (the previous or next) as a pure text line can form a heading for the next or a supplement to the preceding line.

#### Example:

<b>CONSERVATORY</b>	
<b>Skylight</b>	
- south	open
- west	closed
- east	closed
<b>Sun protection</b>	
- south	40%
- west	100%
- east	open

**Case 3: Display advice for user:**

A whole page can be used to provide brief operating advice

**Example:**

**INSTRUCTIONS**

**Page selection:**

**with <> arrow buttons**

**Line selection:**

**with ^v arrow buttons**

**Set values:**

**with the + - ok buttons**

**➔ For easy and clear text entry, see Template at the end of the manual.**

### 4.3.3 Favourite page

The favourite page is set on the select display pages parameter page.

It can be selected in 2 different ways:

Automatically or via object 121.

#### 4.3.3.1 Favourite page as standard display page

The *select favourite page* parameter on the *display page range* parameter page is set to: *Via object and after 3 minutes not in use.*

This page is then always displayed again 3 minutes after the last use of the device at the latest.

#### 4.3.3.2 Favourite page as alarm page

The *select favourite page* parameter on the *display page range* parameter page is set to: *Only via object.*

The occurrence of the monitored event is reported to object 121 by a telegram and VARIA displays the favourite page.

This page contains the reports or values set by the user.

This option was used in the example [Heating control with 6 heating circuits and window monitoring for caretakers](#).

A brief signal sounds every 2 seconds in the event of an alarm if the alarm telegram is linked to objects 120 and 121.

#### 4.4 Troubleshooting

<b>Response</b>	<b>Potential causes</b>	<b>Remedy</b>
Display backlighting flashes*, LCD display is empty.	Download was interrupted or not completed	<ol style="list-style-type: none"><li>1. Bus voltage interrupted</li><li>2. Press down and hold Menu and OK buttons simultaneously.</li><li>3. Reconnect bus voltage.</li><li>4. Release buttons</li><li>5. Download ETS application program again.</li></ol>

\*only flashes if mains supply available.

## 5 Typical applications

These typical applications are designed to aid planning.

Some individual functions or devices of an overall system are only shown for illustration purposes.

Therefore these examples have no claim to completeness and may be adjusted or extended arbitrarily.

### 5.1 Show weather predictions on the weather forecast page.

The weather predictions should be shown on the VARIA forecast page (page 1).

The desired 6 hr forecast period is selected on the Varia display with the ▲▼ buttons. This seamlessly covers all available periods (today, tomorrow, day after tomorrow, day 3).

**Table 50: Display assignment:**

Heading	Weather forecast
Line 1	Validity period: day.
Line 2	6 hr time interval.
Line 3	Weather scenario (e.g. "Slightly cloudy" etc.).
Line 4	Air temperature in °C
Line 5	Precipitation probability in %
Line 6	Rain amount in l/m <sup>2</sup> or mm
Line 7	Wind force in km/h
Line 8	Continue ▲▼

#### 5.1.1 Devices:

- Meteodata 139 (1399200)
- VARIA 826 S (8269210/8269211)

### 5.1.2 Overview

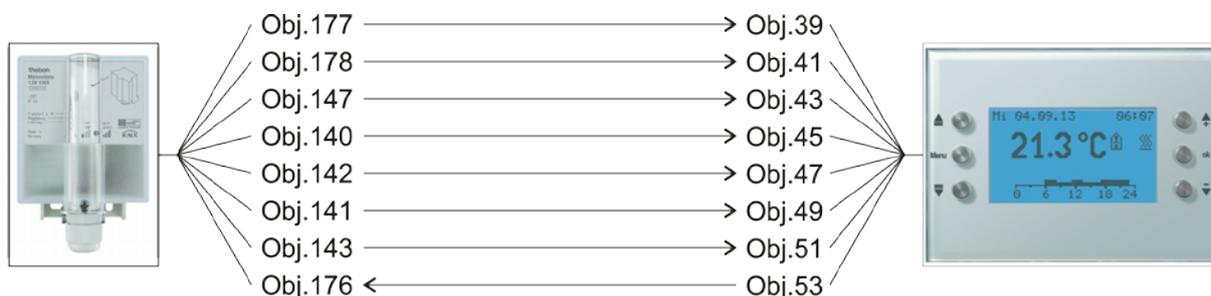


Figure 1

### 5.1.3 Objects and links

Table 51

No.	Meteodata 139 EFR	No.	VARIA 826 S		Comment
	Object name		Object name	Line	
177	<i>Text message in relation to index to day</i>	39	<i>Text in relation to index to day</i>	1	Today, tomorrow, the day after tomorrow, day 3
178	<i>Text message in relation to index to time interval</i>	41	<i>Text in relation to index to time</i>	2	00:00-06:00, 06:00-12:00 etc.
147	<i>Weather scenario as text</i>	43	<i>Weather scenario as text</i>	3	Sunny, cloudy, etc.
140	<i>Air temperature</i>	45	<i>Air temperature</i>	4	in °C
142	<i>Precipitation probability</i>	47	<i>Precipitation probability</i>	5	in %
141	<i>Precipitation amount</i>	49	<i>Precipitation amount</i>	6	in litres/m <sup>2</sup>
143	<i>Wind force (km/h)</i>	51	<i>Wind force (km/h)</i>	7	-
176	<i>Index to 6 hr forecast</i>	53	<i>Index to time</i>	(8)	Sends a number from 0-15 during activation of the ▲▼ buttons.(Endless loop).

### 5.1.4 Important parameter settings

Standard or customer-defined parameter settings apply for unlisted parameters.

**Table 52: Meteodata 139 EFR**

Parameter page	Parameter	Setting
<i>Weather forecast</i>	<i>User-specific period (from obj. 140)</i>	<i>Select 6 hr period via obj. 176</i>
	<i>Unit for the sent wind force</i>	<i>km/h</i>

**Table 53: VARIA 826 S**

Parameter page	Parameter	Setting
<i>Select screens</i>	<i>Show page 1 for display objects</i>	<i>yes</i>
	<i>Show weather forecast on page 1</i>	<i>yes</i>

## 5.2 Display weather data and air quality

### 5.2.1 Devices:

- VARIA 826 / 826 S KNX (8269200, 8269210, 8269211)
- Amun 716 (716 9 200)
- Weather station (132 9 201)

### 5.2.2 Overview

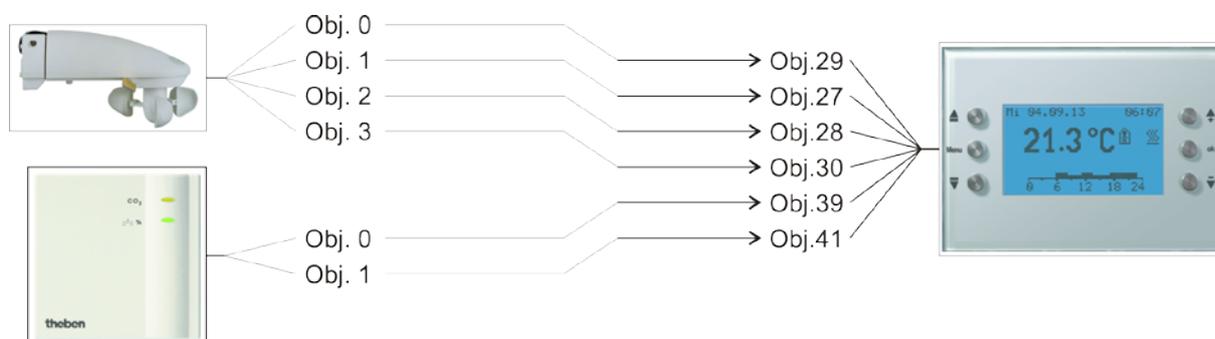


Figure 2

### 5.2.3 Objects and links

Table 54

No.	Weather station	No.	VARIA	Comment
	Object name		Object name	
0	<i>Brightness value</i>	29	<i>Brightness</i>	Display on the weather page
1	<i>Temperature value</i>	27	<i>Outside temperature</i>	Display on the weather page
2	<i>Wind speed</i>	28	<i>Wind speed</i>	Display on the weather page
3	<i>Rain sensor</i>	30	<i>Rain</i>	Display on the weather page

Table 55

No.	Amun 716	No.	VARIA	Comment
	Object name		Object name	
0	<i>CO2 value</i>	39	<i>Display page 1, line 1 - EIS 5 value</i>	Display on freely programmable pages
1	<i>relative humidity</i>	41	<i>Display page 1, line 2 - percentage value</i>	Display on freely programmable pages

### 5.2.4 Important parameter settings

The standard parameter settings apply for unlisted parameters.

Table 56: VARIA

Parameter page	Parameter	Setting
<i>Select screens</i>	<i>Show [weather data] page?</i>	<i>yes</i>
	<i>Show page 1 for display objects</i>	<i>yes</i>
<i>Weather data</i>	<i>Wind unit</i>	<i>km/h</i>
<i>Page 1 line 1</i>	<i>Line format</i>	<i>Object type: EIS 5</i>
	<i>Text for line 1 (11)</i>	<i>CO2 value</i>
	<i>Unit for display object (3)</i>	<i>ppm</i>
	<i>Authorise amendment of object value?</i>	<i>no</i>
<i>Page 1 line 2</i>	<i>Line format</i>	<i>Object type: percentage value</i>
	<i>Text for line 3 (14)</i>	<i>Relative humidity</i>
	<i>Authorise amendment of object value?</i>	<i>no</i>

**Table 57: Weather station**

Parameter page	Parameter	Setting
<i>Measured values</i>	<i>Send wind speed in the event of a change of</i>	<i>20 %, but at least 1 m/s</i>
	<i>Send wind speed in</i>	<i>km/h</i>
	<i>Send wind speed cyclically</i>	<i>every 10 minutes</i>
	<i>Send brightness value in the event of a change of</i>	<i>30 %, but at least 1 lx</i>
	<i>Send brightness value cyclically</i>	<i>every 10 minutes</i>
	<i>Transmit temperature in the event of change of</i>	<i>1 °C</i>
	<i>Send temperature cyclically</i>	<i>every 10 minutes</i>
	<i>Send rain in the event of change and</i>	<i>every 10 minutes</i>
	<i>Off-delay</i>	<i>none</i>

**Table 58: Amun 716**

Parameter page	Parameter	Setting
<i>Measured values</i>	<i>Send CO2 content on change of</i>	<i>200 ppm</i>
	<i>Send CO2 content cyclically</i>	<i>every 10 minutes</i>
	<i>Send humidity value in the event of a change of</i>	<i>2 %</i>
	<i>Send humidity value cyclically</i>	<i>every 10 minutes</i>

### 5.3 Blinds or shutter / awning control

Blinds, shutters or awnings are controlled via line 1 on display page 1 by pressing the +/- buttons.

The difference between blinds and shutter control is determined by the configuration of the blinds actuator.

#### 5.3.1 Devices:

- VARIA 826 / 826 S KNX (8269200, 8269210, 8269211)
- JMG 4 S (Order. no. 491 0 250)

#### 5.3.2 Overview

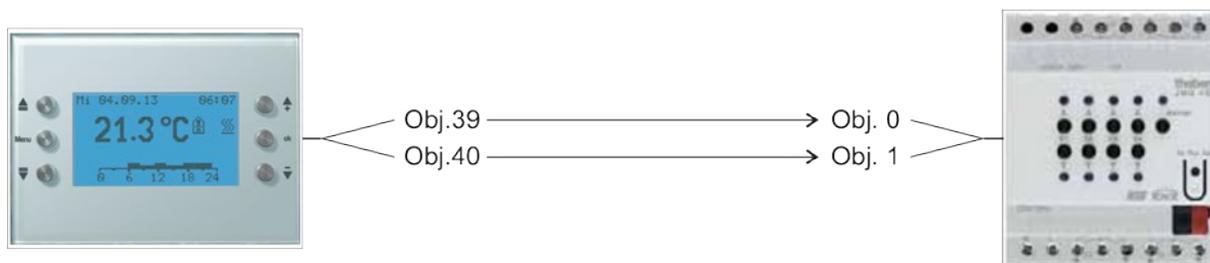


Figure 3

#### 5.3.3 Important parameter settings

Standard or customer-defined parameter settings apply for unlisted parameters.

##### 5.3.3.1 Varia

Table 59

Parameter page	Parameter	Setting
Select screens	Show page 1 for display objects	yes
Page 1, line 1	Line format	Blinds/shutter object type (DPT 1 .008..)

### 5.3.3.2 JMG 4S

Parameter page	Parameter	Setting
<i>GM JMG 4S</i>	<i>Type of curtain</i>	<i>Blinds or Shutter / awning / general drive</i>

### 5.3.4 Objects and links

Table 60: VARIA

No.	VARIA	No.	JMG 4S	Comment
	Object function		Object function	
39	<i>Blinds up/down</i>	0	<i>Up/down</i>	Prolonged pressing of the + button = Up Prolonged pressing of the - button = Down
40	<i>Blinds Step/Stop</i>	1	<i>Step / stop</i>	Briefly pressing the + / - button = Step Up/ Step Down or Stop

## 5.4 Conservatory control

### 5.4.1 Devices:

- VARIA 826 / 826 S KNX (8269200, 8269210, 8269211)
- Amun 716 (716 9 200)
- Weather station (132 9 201)

### 5.4.2 Overview

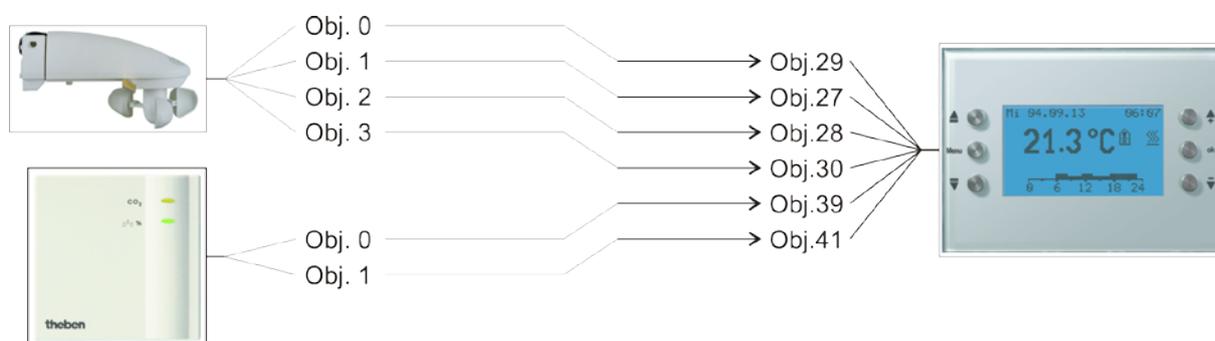


Figure 4

### 5.4.3 Objects and links

Table 61

No.	Weather station	No.	VARIA	Comment
	Object name		Object name	
0	<i>Brightness value</i>	29	<i>Brightness</i>	Display on the weather page
1	<i>Temperature value</i>	27	<i>Outside temperature</i>	Display on the weather page
2	<i>Wind speed</i>	28	<i>Wind speed</i>	Display on the weather page
3	<i>Rain sensor</i>	30	<i>Rain</i>	Display on the weather page

Table 62

No.	Amun 716	No.	VARIA	Comment
	Object name		Object name	
0	<i>CO2 value</i>	39	<i>Display page 1, line 1 - EIS 5 value</i>	Display on freely programmable pages
1	<i>relative humidity</i>	41	<i>Display page 1, line 2 - percentage value</i>	Display on freely programmable pages

### 5.4.4 Important parameter settings

The standard parameter settings apply for unlisted parameters.

**Table 63: VARIA**

Parameter page	Parameter	Setting
<i>Select screens</i>	<i>Show [weather data] page?</i>	<i>yes</i>
	<i>Show page 1 for display objects</i>	<i>yes</i>
<i>Weather data</i>	<i>Wind unit</i>	<i>km/h</i>
<i>Page 1 line 1</i>	<i>Line format</i>	<i>Object type: EIS 5</i>
	<i>Text for line 1 (11)</i>	<i>CO2 value</i>
	<i>Unit for display object (3)</i>	<i>ppm</i>
	<i>Authorise amendment of object value?</i>	<i>no</i>
<i>Page 1 line 2</i>	<i>Line format</i>	<i>Object type: percentage value</i>
	<i>Text for line 3 (14)</i>	<i>Relative humidity</i>
	<i>Authorise amendment of object value?</i>	<i>no</i>

**Table 64: Weather station**

Parameter page	Parameter	Setting
<i>Measured values</i>	<i>Send wind speed in the event of a change of</i>	<i>20 %, but at least 1 m/s</i>
	<i>Send wind speed in</i>	<i>km/h</i>
	<i>Send wind speed cyclically</i>	<i>every 10 minutes</i>
	<i>Send brightness value in the event of a change of</i>	<i>30 %, but at least 1 lx</i>
	<i>Send brightness value cyclically</i>	<i>every 10 minutes</i>
	<i>Transmit temperature in the event of change of</i>	<i>1 °C</i>
	<i>Send temperature cyclically</i>	<i>every 10 minutes</i>
	<i>Send rain in the event of change and</i>	<i>every 10 minutes</i>
	<i>Off-delay</i>	<i>none</i>

**Table 65: Amun 716**

Parameter page	Parameter	Setting
<i>Measured values</i>	<i>Send CO2 content on change of</i>	<i>200 ppm</i>
	<i>Send CO2 content cyclically</i>	<i>every 10 minutes</i>
	<i>Send humidity value in the event of a change of</i>	<i>2 %</i>
	<i>Send humidity value cyclically</i>	<i>every 10 minutes</i>

### 5.5 Heating control, basic configuration

Varia controls a Cheops actuator.

A window contact, on a TA 2 binary input sends the window status.

#### 5.5.1 Devices:

- VARIA 826 / 826 S KNX (8269200, 8269210, 8269211)
- Cheops drive (Order no. 731 9 200)
- TA 2 (order no. 496 9 202)

#### 5.5.2 Overview

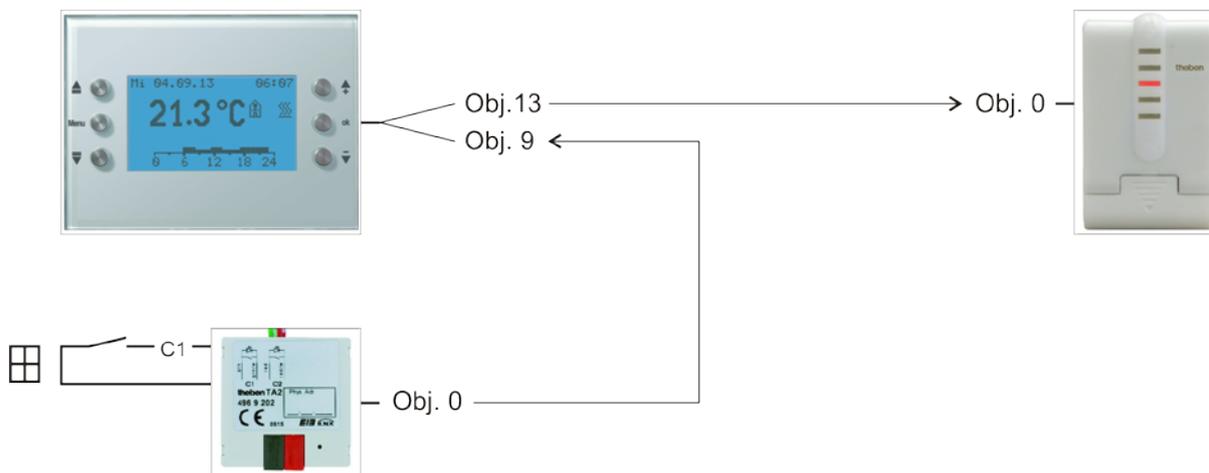


Figure 5

### 5.5.3 Objects and links

Table 66

No.	VARIA	No.	Cheops drive	Comment
	Object name		Object name	
13	<i>Heating actuating value %</i>	0	<i>Actuating value</i>	RTR output actuator

Table 67

No.	TA 2	No.	VARIA	Comment
	Object name		Object name	
0	<i>Channel 1 switching</i>	9	<i>Window position</i>	Input for window contact

### 5.5.4 Important parameter settings

Standard or customer-defined parameter settings apply to unlisted parameters.

#### 5.5.4.1 Varia

Table 68

Parameter page	Parameter	Setting
<i>RTR setting</i>	<i>CONTROL</i>	<i>Heating control only</i>
	<i>Objects for determining the operating mode</i>	<i>new: operating mode, presence, window status</i>

#### 5.5.4.2 TA 2

Table 69

Parameter page	Parameter	Setting
<i>Channel 2</i>	<i>Channel function</i>	<i>Switch/push button</i>
	<i>Debounce time</i>	<i>100 ms</i>
	<i>Object type</i>	<i>Switching (1-bit)</i>
	<i>Response to rising edge</i>	<i>ON (OFF*)</i>
	<i>Response to falling edge</i>	<i>OFF (ON*)</i>
	<i>Response after restoration of the bus supply</i>	<i>update</i>

\* Depending on type of window contact. The details in brackets refer to the following case:  
Window closed → contact closed

#### 5.5.4.3 Cheops drive


The standard parameter settings can be used here.

## 5.6 Fan coil actuator control

### 5.6.1 Devices:

- VARIA 826 / 826 S KNX (8269200, 8269210, 8269211)
- FCA 1 (Order no. 492 0 200)
- Presence detector (e.g. Theben HTS Eco-IR 180, 360 or Compact Office\*)

### 5.6.2 Overview

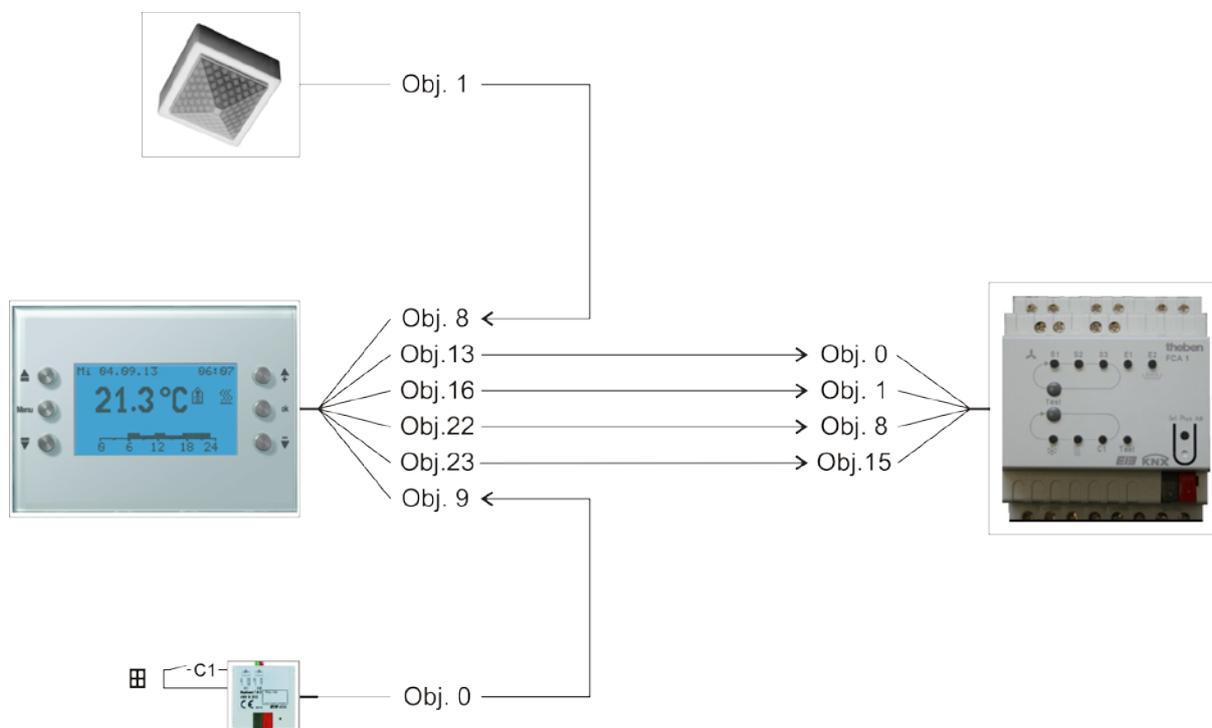

**Figure 6**

### 5.6.3 Important parameter settings

The standard parameter settings apply for unlisted parameters.

#### 5.6.3.1 Varia

Table 70

Parameter page	Parameter	Setting
<i>RTR setting</i>	<i>CONTROL</i>	<i>Heating and cooling</i>
	<i>Objects for determining the operating mode</i>	<i>new: operating mode, presence, window status</i>
	<i>Presence sensor type (to Obj. 8)</i>	<i>Presence detector</i>
	<i>Activate fan stage control</i>	<i>yes</i>
<i>Heating control</i>	<i>Number of heating stages</i>	<i>Only one heating stage</i>
	<i>Type of control</i>	<i>Continuous control</i>
<i>Cooling control</i>	<i>Type of control</i>	<i>Continuous control</i>
	<i>Setting the control parameters</i>	<i>Via system type</i>
	<i>System type</i>	<i>Fan coil unit</i>
	<i>Switching between heating and cooling</i>	<i>automatic</i>
<i>Fan stages</i>	<i>Number of fan stages</i>	<i>3 fan stages</i>
	<i>Value for fan stage 1</i>	<i>20 %</i>
	<i>Value for fan stage 2</i>	<i>50 %</i>
	<i>Value for fan stage 3</i>	<i>80 %</i>
	<i>Switch fan between auto and forced</i>	<i>via object forced/auto, forced = 1</i>

#### 5.6.3.2 FCA 1

Parameter page	Parameter	Setting
<i>General</i>	<i>Supported function</i>	<i>Heating and cooling</i>
	<i>Heating system</i>	<i>Fan coil</i>
	<i>Cooling system</i>	<i>Fan coil</i>
	<i>System type</i>	<i>4-pipe system</i>
	<i>Type of controller used</i>	<i>Remote controller</i>
<i>Fan</i>	<i>Switched threshold for fan step 1</i>	<i>10 %</i>
	<i>Switched threshold for fan step 2</i>	<i>40 %</i>
	<i>Switched threshold for fan step 3</i>	<i>70 %</i>
<i>Heating valve</i>	<i>Type of valve</i>	<i>2-point</i>
<i>Cooling valve</i>	<i>Type of valve</i>	<i>2-point</i>

### 5.6.3.3 Presence detector

**Table 71: Presence detector (e.g. Eco-IR 180, 360 or Compact Office\*)**

Parameter page	Parameter	Setting
<i>General data</i>	<i>Normal or test operation mode</i>	<i>Standard operation</i>
	<i>HVAC switch output*</i>	<i>Active</i>
<i>HVAC switch output</i>	<i>Response at start/end of HVAC requirement</i>	<i>Transmit On and Off telegram</i>

\* Presence output

### 5.6.3.4 TA 2

**Table 72**

Parameter page	Parameter	Setting
<i>Channel 1</i>	<i>Channel function</i>	<i>Switch/push button</i>
	<i>Debounce time</i>	<i>100 ms</i>
	<i>Object type</i>	<i>Switching (1-bit)</i>
	<i>Response to rising edge</i>	<i>ON (OFF*)</i>
	<i>Response to falling edge</i>	<i>OFF (ON*)</i>
	<i>Response after restoration of the bus supply</i>	<i>update</i>

\* Depending on type of window contact.

The details in brackets refer to the following case:

Window closed → contact closed

### 5.6.4 Objects and links

**Table 73: VARIA**

No.	VARIA Object name	No.	FCA 1 Object name	Comment
13	<i>Heating actuating value (%)</i>	0	<i>Heating actuating value</i>	FCA receives the actuating value heating from VARIA
14	<i>Cooling actuating value (%)</i>	1	<i>Cooling control variable</i>	FCA receives the actuating value cooling from VARIA
22	<i>Forced fan stage</i>	8	<i>Forced fan stage</i>	% value for forced mode
23	<i>Fan forced/auto mode</i>	15	<i>Fan forced/auto mode</i>	enables the manual selection of fan stage on VARIA

**Table 74: presence detector**

No.	ECO-IR Object name	No.	VARIA Object name	Comment
1	<i>HVAC switch output</i>	8	<i>Presence</i>	Presence signal for switch to comfort mode

**Table 75: TA 2 for window status**

No.	TA 2 Object name	No.	VARIA Object name	Comment
0	<i>Channel 1 switching</i>	9	<i>Window position</i>	Window status for the RTR (frost protection) 1 = window open

## **5.7 Heating control with 6 heating circuits and window monitoring for caretakers.**

Combined with 5 RAM 712 Varia controls 6 rooms (rooms 1-6), with window contacts and presence detectors, via a HMT 6 with thermal actuators.

In room 1 (monitoring room) the window contacts and the presence sensors are connected to a TA 2.

Here, VARIA controls the room temperature and monitors the window status in all rooms.

In each of the rooms 2 to 6, room temperature is controlled by a RAM 712.

The window contacts and presence sensors are connected to the binary inputs on the RAM 712.

All window objects send their status to a line on display page 1, which can be configured as a favourite page.

All window objects are also centrally linked to the *Varia favourite page* object.

If a window is opened in a room, the favourite page containing the window display status is displayed (only VARIA 826 S KNX).

Alternatively, a signal can be activated as soon as a window is opened.

The only other requirement is to connect object 120 with same group addresses as object 121.

### **5.7.1 Devices:**

- VARIA 826 / 826 S KNX (8269200, 8269210, 8269211)
- TA 2 (order no. 496 9 202)
- 5x RAM 712 (order no. 712 9 200)

### 5.7.2 Overview

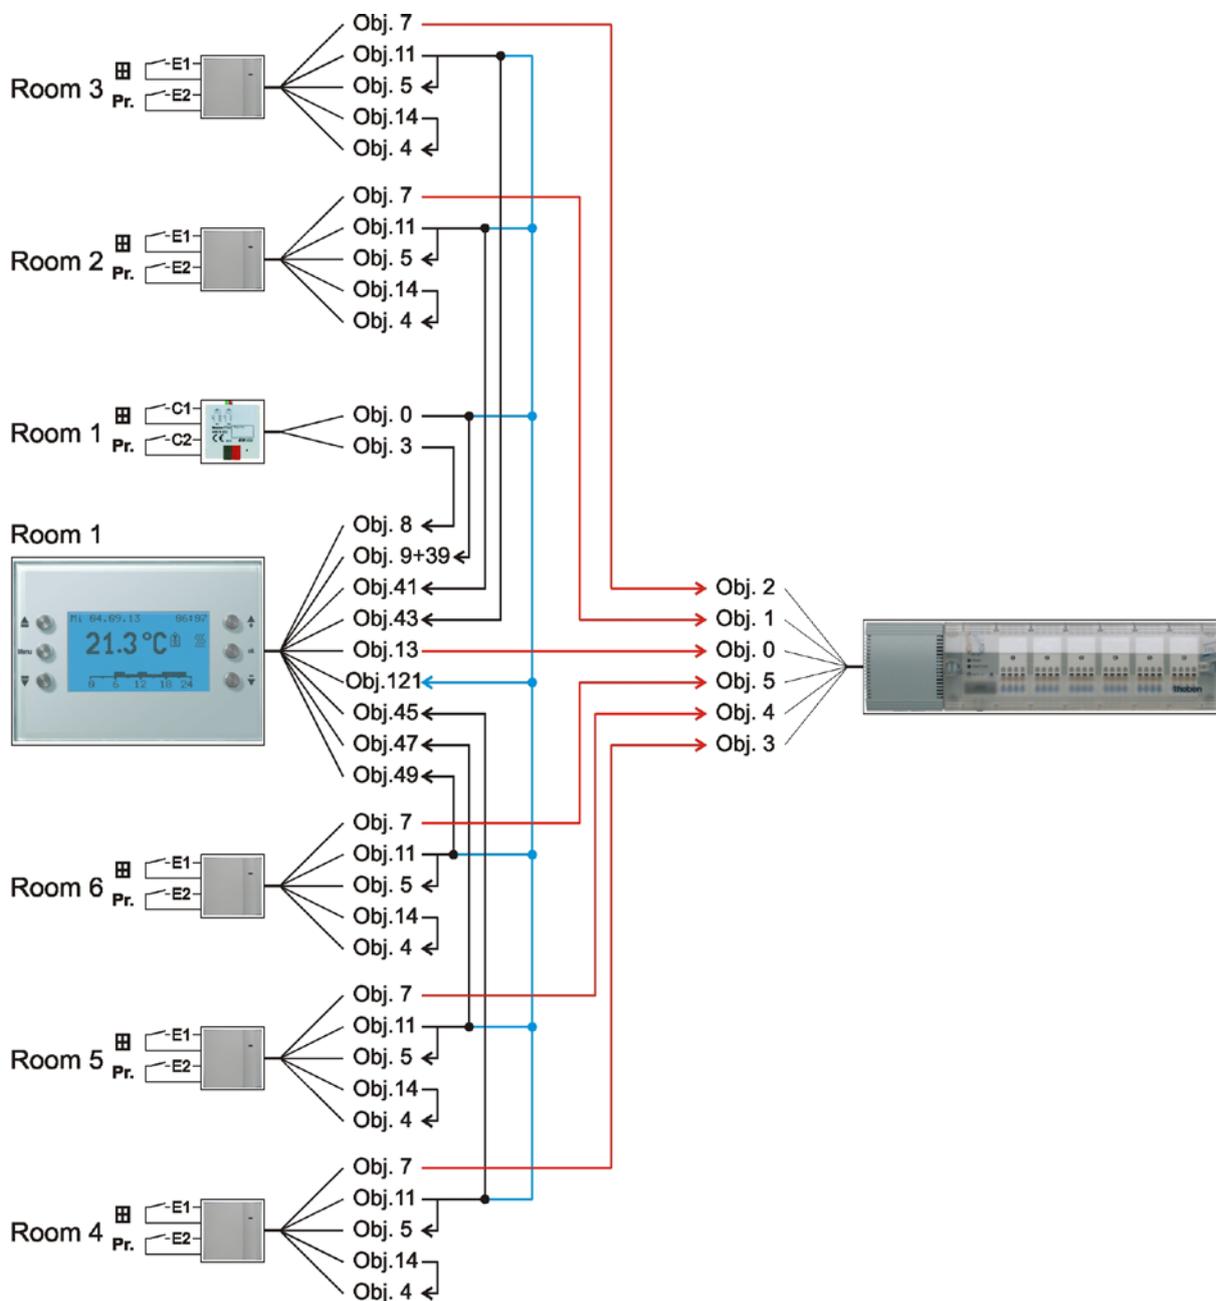


Figure 7

### 5.7.3 Important parameter settings

Standard or customer-defined parameter settings apply to unlisted parameters.

#### 5.7.3.1 Varia

Table 76

Parameter page	Parameter	Setting
<i>RTR setting</i>	<i>CONTROL</i>	<i>Heating control only</i>
	<i>Objects for determining the operating mode</i>	<i>new: operating mode, presence, window status</i>
<i>Heating control</i>	<i>Number of heating stages</i>	<i>Only one heating stage</i>
	<i>Type of control</i>	<i>Continuous control</i>
<i>Select screens</i>	<i>Show page 1 for display objects</i>	<i>yes</i>
	<i>Favourite page (Only Varia 826 S KNX)</i>	<i>Screen 1 if page available</i>
	<i>Select favourites page (Only Varia 826 S KNX)</i>	<i>Via object only</i>
<i>Display objects page 1</i>	<i>Page heading</i>	<b>Window status</b>
<i>Joint parameters for page 1</i>		
<i>Page 1, lines 1-6</i>	<i>Line format</i>	<i>Object type: switch</i>
	<i>Text at object value = 0</i>	<b>closed</b>
	<i>Text at object value = 1</i>	<b>open</b>
	<i>Authorise amendment of object value?</i>	<i>no</i>
<i>Own parameters for line descriptions</i>		
<i>Page 1, line 1</i>	<i>Text for line 1</i>	<b>Window room 1</b>
<i>Page 1, line 2</i>	<i>Text for line 2</i>	<b>Window room 2</b>
<i>Page 1, line 3</i>	<i>Text for line 3</i>	<b>Window room 3</b>
<i>Page 1, line 4</i>	<i>Text for line 4</i>	<b>Window room 4</b>
<i>Page 1, line 5</i>	<i>Text for line 5</i>	<b>Window room 5</b>
<i>Page 1, line 6</i>	<i>Text for line 6</i>	<b>Window room 6</b>

## 5.7.3.2 TA 2

Table 77

Parameter page	Parameter	Setting
<i>Channel 1</i>	<i>Channel function</i>	<i>Switch/push button</i>
	<i>Debounce time</i>	<i>100 ms</i>
	<i>Object type</i>	<i>Switching (1-bit)</i>
	<i>Response to rising edge</i>	<i>ON (OFF*)</i>
	<i>Response to falling edge</i>	<i>OFF (ON*)</i>
	<i>Response after restoration of the bus supply</i>	<i>update</i>
<i>Channel 2</i>	<i>Channel function</i>	<i>Switch/push button</i>
	<i>Debounce time</i>	<i>100 ms</i>
	<i>Object type</i>	<i>Switching (1-bit)</i>
	<i>Response to rising edge</i>	<i>ON</i>
	<i>Response to falling edge</i>	<i>none</i>
	<i>Response after restoration of the bus supply</i>	<i>none</i>

\* Depending on type of window contact. The details in brackets refer to the following case:  
Window closed → contact closed

### 5.7.3.3 RAM 712

Parameter page	Parameter	Setting
<i>Settings</i>	<i>CONTROL</i>	<i>standard</i>
	<i>Function of external interface</i>	<i>active</i>
<i>Operating mode</i>	<i>Objects for determining the operating mode</i>	<i>Operating mode, presence, window status</i>
	<i>Presence sensor type (to obj. 4)</i>	<i>Presence buttons</i>
<i>Input 1</i>	<i>Input function</i>	<i>Switch/push button</i>
	<i>Debounce time</i>	<i>100 ms</i>
	<i>Object type</i>	<i>Switching (1-bit)</i>
	<i>Response to rising edge</i>	<i>ON (OFF*)</i>
	<i>Response to falling edge</i>	<i>OFF (ON*)</i>
	<i>Response after restoration of the bus supply</i>	<i>update</i>
<i>Input 2</i>	<i>Input function</i>	<i>Switch/push button</i>
	<i>Debounce time</i>	<i>100 ms</i>
	<i>Object type</i>	<i>Switching (1-bit)</i>
	<i>Response to rising edge</i>	<i>ON</i>
	<i>Response to falling edge</i>	<i>none</i>
	<i>Response after restoration of the bus supply</i>	<i>none</i>

\* Depending on type of window contact. The details in brackets refer to the following case:  
 Window closed → contact closed

### 5.7.3.4 HMT 6

Parameter page	Parameter	Setting
<i>General</i>	<i>Which device is used</i>	<i>HMT 6</i>
<i>Channel 1.. 6</i>	<i>Type of actuating value</i>	<i>Continuous</i>
	<i>Monitoring the actuating value of the room thermostat</i>	<i>without monitoring</i>

### 5.7.4 Objects and links

Table 78: Varia window status and presence sensor feedback

	No.	Object name	VARIA		Comment
			No.	Object name	
TA2 room 1	0	<i>Channel 1 switching</i>	9	<i>Window position</i>	Window status for the RTR (frost protection) 1 = window open
			39	<i>Display page 1, line 1</i>	Window status for display (1 = window open)
			121	<i>Select favourites page</i>	Central address for all window contacts. 1 = window open = call up display page 1
	3	<i>Channel 2 switching</i>	8	<i>Presence</i>	Presence sensor for the RTR (comfort)
RAM 712 Room 2	11	<i>Input 1 switching</i>	41	<i>Display page 1, line 2</i>	Window status for display (1 = window open)
			121	<i>Select favourites page</i>	Central address for all window contacts. 1 = window open = call up display page 1
RAM 712 Room 3	11	<i>Input 1 switching</i>	43	<i>Display page 1, line 3</i>	Window status for display (1 = window open)
			121	<i>Select favourites page</i>	Central address for all window contacts. 1 = window open = call up display page 1
RAM 712 Room 4	11	<i>Input 1 switching</i>	45	<i>Display page 1, line 4</i>	Window status for display (1 = window open)
			121	<i>Select favourites page</i>	Central address for all window contacts. 1 = window open = call up display page 1

Continuation:

	No.	Object name	VARIA		Comment
			No.	Object name	
RAM 712 Room 5	11	<i>Input 1 switching</i>	47	<i>Display page 1, line 5</i>	Window status for display (1 = window open)
			121	<i>Select favourites page</i>	Central address for all window contacts. 1 = window open = call up display page 1
RAM 712 Room 6	11	<i>Input 1 switching</i>	49	<i>Display page 1, line 6</i>	Window status for display (1 = window open)
			121	<i>Select favourites page</i>	Central address for all window contacts. 1 = window open = call up display page 1

**Table 79: Actuating value for the heating actuator**

	No.	Object name	HMT 6		Comment
			No.	Object name	
VARIA	13	<i>Heating actuating value (%)</i>	0	<i>Actuating value channel 1</i>	Control of actuator room 1
RAM 712 Room 2	7	<i>Heating actuating value</i>	1	<i>Actuating value channel 2</i>	Control of actuator room 2
RAM 712 Room 3	7	<i>Heating actuating value</i>	2	<i>Actuating value channel 3</i>	Control of actuator room 3
RAM 712 Room 4	7	<i>Heating actuating value</i>	3	<i>Actuating value channel 4</i>	Control of actuator room 4
RAM 712 Room 5	7	<i>Heating actuating value</i>	4	<i>Actuating value channel 5</i>	Control of actuator room 5
RAM 712 Room 6	7	<i>Heating actuating value</i>	5	<i>Actuating value channel 6</i>	Control of actuator room 6

**Table 80: Own links for window and presence object with each RAM 712 (see Overview illustration)**

No.	RAM 712	No.	RAM 712	Comment
	Object name		Object name	
11	<i>Input 1 switching</i>	5	<i>Window position</i>	Link window status to own window object.
14	<i>Input 2 switching</i>	4	<i>Presence</i>	Link input for presence sensor with own presence object.

## 6 Appendix

### 6.1 Weather forecasts with Meteodata 139 EFR KNX

Display page 1 can be used in conjunction with the weather data receiver Meteodata 139 EFR KNX to display weather forecasts directly.

To do this, the *Show weather forecast on page 1* parameter is set to *yes*.

The following weather predictions will be blended in display page 1:

**Table 81: Preset weather forecast data.**

Category	Comm. object	Display line	Information
Validity period	39	1	Forecast day
	41	2	6 hr time interval
Forecast values	43	3	Weather
	45	4	Temperature (°C)
	47	5	Precipitation probability (%)
	49	6	Precipitation amount (mm or l/m <sup>2</sup> )
	51	7	Wind force (km/h)
Notice	53	8	Continue ▲▼

The complete forecast period is 96 hrs and is divided into 6 hr sections.

The required 6 hr period can be selected using the right arrow button.

In doing so, object 53 sends the so-called "Index to time" to the weather forecast receive.

The relevant time period, forecast day and weather prediction will then correspondingly be resent to VARIA and shown in the display.

See also the example of use: [Show weather predictions on the weather forecast page.](#)

## 6.2 Fan forced mode

This function enables the manual selection of fan stage on the RTR display page of the device. The fan coil actuator or the fan control is moved into forced mode.

Select fan symbol using the arrow buttons ▲▼ and use the +/- buttons to set desired fan stage.

**Table 82: Button operation (+/-)**

Button push	Function	Display
1	Fan off	<b>OFF</b>
2	Fan stage 1	<b>1</b>
3	Fan stage 2	<b>2</b>
4	Fan stage 3	<b>3</b>
5	Auto	<b>Auto</b>

**Important: Depending on the actuator used, either 1 or 0 is needed to trigger forced operation.**

This response is adjustable, see *switch fan between auto and forced* parameter on the *fan stages* parameter page.

**Send response in forced mode with fan coil actuator FCA 1 (forced = 1):**

Object 23 sends 1 to the fan coil actuator thereby triggering forced mode.

Object 22 sends the control variable for the selected fan stage in accordance with the set threshold value.

This control variable (in accordance with the set threshold value) is transferred to the fan coil actuator as a fan stage between 0 and 3.

**Important:** the sent forced control variable should always be higher than the threshold setting of the fan coil actuator.

**Example:**

Threshold value for Fan stage	Set values for VARIA	Recommended values for FCA 1
1	20 %	10 %
2	50 %	40 %
3	80 %	70 %

If fan stage 2 is selected using the button, object 22 sends control variable 50 %.

As the threshold value for stage 2 in the fan coil actuator is set at 40 % , the received control variable of 50 % is clearly allocated to fan stage 2 and accepted by the fan.

### 6.3 PWM cycle


#### 6.3.1 Basic principle

The 50% control variable is converted into switch-on/switch-off cycles in order to achieve a heating output of 50%.

The actuator is switched on for 50% of the time and switched off for 50% of the time over a fixed period (10 minutes in our example).

**Example:**

Two different switch-on times of 2 and 7 minutes indicate conversion of 2 different control variables, namely 20% and 70%, into a PWM period of 10 minutes.

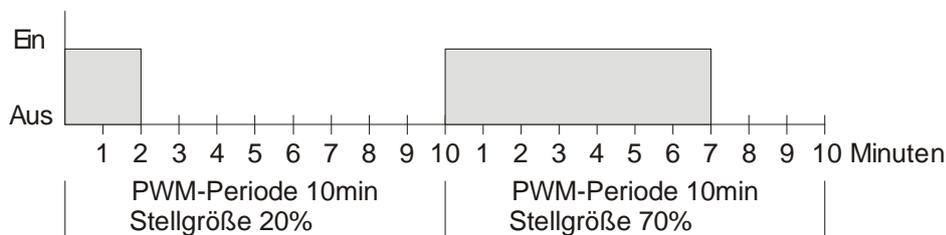


### 6.3.2 Response to changes in the control variable

Every change in the control variable is immediately transferred to the PWM cycle in order to respond to changes in the quickest possible time.


**Example 1:**

The last control variable was 20% (A).  
 A new control variable of 50% is received during the cycle (B).  
 The output is immediately switched on and the missing 30% switch-on time is added.  
 The next cycle is executed with 50% (C).

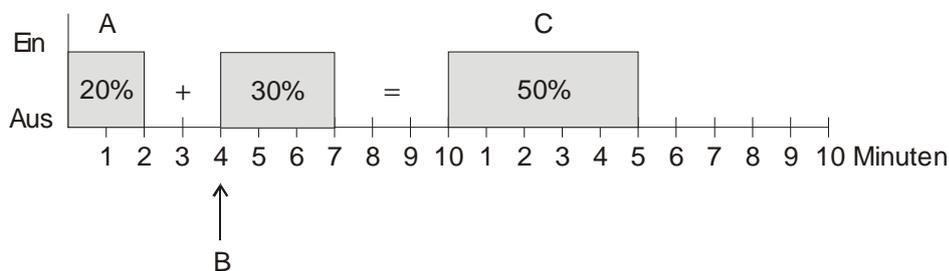

**Example 2:**

The last control variable was 50% (A).  
 A new control variable of 30% is received during the cycle (B).  
 The output is switched off after completing 30% of the PWM and thus the new control variable is executed.

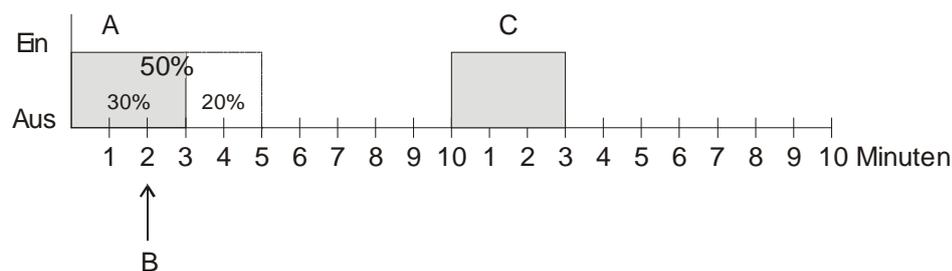

**Remarks:**

If the rated switch-on time for the current cycle has already been exceeded while receiving the new control variable, the output is immediately switched off and the new control variable is executed during the next cycle.

## 6.4 Operating mode scene

### 6.4.1 Principle

The current operating mode can be saved with the scene functions and restored later at any time.

The current operating mode is allocated to the appropriate scene number when a scene is saved.

The previously saved operating mode is reactivated when a scene number is called.

This allows VARIA to be easily associated to each chosen user scene.

VARIA can participate in up to 16 scenes.

The scenes are permanently stored and remain intact even after the application has been downloaded again.

### 6.4.2 Saving scenes:

The appropriate storage code is sent to Object 20 to save a scene.

Table 83

Scene no.	Storage code	
	Hex.	Dec.
1	\$80	128
2	\$81	129
3	\$82	130
4	\$83	131
5	\$84	132
6	\$85	133
7	\$86	134
8	\$87	135
9	\$88	136
10	\$89	137
11	\$8A	138
12	\$8B	139
13	\$8C	140
14	\$8D	141
15	\$8E	142
16	\$8F	143

Example:

Save current operating mode with scene 5:

→ Send \$84 to Obj. 20.

### 6.4.3 Calling scenes:

The appropriate retrieval code is sent to Object 20 to call a scene.

Table 84

Scene no.	Retrieval code	
	Hex.	Dec.
1	\$00	0
2	\$01	1
3	\$02	2
4	\$03	3
5	\$04	4
6	\$05	5
7	\$06	6
8	\$07	7
9	\$08	8
10	\$09	9
11	\$0A	10
12	\$0B	11
13	\$0C	12
14	\$0D	13
15	\$0E	14
16	\$0F	15

**Example:**

Call operating mode with scene 5:

→ Send \$04 to Obj. 20.

## 6.5 Create and display scene telegrams

Varia can send and display 1..5 scene telegrams on the user-specific display pages. These can also be sent, if necessary, by a common group address to Object 20 to control the operating mode with scenes (scenes 1-16)  
 See also [Operating mode scene](#) and [Priorities for operating mode selection](#).

Both access and learning telegram can be sent.  
 All scene numbers from 1 to 64 are possible.  
 The following parameters must be set here.

**Table 85: Parameters for scene telegrams**

Parameter page	Parameter name	Value
<b>Send and display scene access telegrams</b>		
<i>Page x, line y</i>	<i>Line format</i>	<i>Object type: scene</i>
	<i>Authorise amendment of object value?</i>	<i>yes</i>
<b>Send and display learning telegrams</b>		
<i>Page x, line y</i>	<i>Send [save scene] command</i>	<i>Yes, by pressing OK for more than 3 seconds</i>

### 6.5.1 Allot scene numbers text

An up to 10 character long text can be displayed in place of a scene number.

Configuration is completed on the page of the relevant line (e.g. *page 2, line 1*).

The texts are entered on the *text list* parameter page

Only the *name of the lowest scene* needs to be entered for the allocation of text numbers. The following scene numbers are automatically allocated for the subsequent text numbers.

#### 6.5.1.1 Examples:

Only scene numbers 1 to 10 are permitted in this example.

Scene no. 1 is allocated text 1, scene no. 2 text 2 etc.

If a scene number is sent or received, e.g. 10,

VARIA displays the entered name: Party.

**Table 86: Scenes 1..10 with texts 1..10**

Parameter page	Parameter name	Value
<i>Page 2, line 1</i>	<i>Line format</i>	<i>Object type: scene</i>
	<i>Allocate text to scene number</i>	<i>yes, display text instead of number</i>
	<i>lower adjustable scene number</i>	<i>1</i>
	<i>upper adjustable scene number</i>	<i>10</i>
	<i>Name of lower adjustable scene</i>	<i>see text list: text 1</i>
<i>Text list</i>	<i>Text 1 (10)</i>	<i>Party</i>
	<i>Text 2 (10)</i>	<i>TV</i>
	...	...
	<i>Text 9 (10)</i>	<i>Evening</i>
	<i>Text 10 (10)</i>	<i>Holidays</i>

**Table 87: Text allocation**

Scene		Text list	
1	_____	Text 1	Party
2	_____	Text 2	TV
...	_____	...	...
9	_____	Text 9	Evening
10	_____	Text 10	Holidays

Only scene numbers 20 to 29 are permitted in the following example.  
 That means the lower adjustable scene number = 20.  
 Texts 5..14 are allocated.

**Table 88: Scenes 20..29 with texts 5..14**

Parameter page	Parameter name	Value
<i>Page 2, line 1</i>	<i>Line format</i>	<i>Object type: scene</i>
	<i>Allocate text to scene number</i>	<i>yes, display text instead of number</i>
	<i>lower adjustable scene number</i>	20
	<i>upper adjustable scene number</i>	29
	<i>Name of lower adjustable scene</i>	<i>see text list: text 5</i>
<i>Text list</i>	<i>Text 5 (10)</i>	Work
	<i>Text 6 (10)</i>	Conference
	...	...
	<i>Text 13 (10)</i>	Presentation
	<i>Text 14 (10)</i>	Break

**Table 89: Text allocation**

Scene		Text list	
20	_____	Text 5	Work
21	_____	Text 6	Conference
22	_____	Text 7	...
23	_____	Text 8	...
24	_____	Text 9	...
25	_____	Text 10	...
26	_____	Text 11	...
27	_____	Text 12	...
28	_____	Text 13	Presentation
29	_____	Text 14	Break

## 6.6 Setpoint value adjustment

The setpoint adjustment enables a dynamic adjustment of the setpoint to the outdoor temperature when cooling.

This function prevents too great a temperature deviation between the outside area and the cooled interior with high outside temperatures.

If the outdoor temperature exceeds a set threshold, adjustment is activated and a relevant increase of the setpoint is calculated.

The current outside external temperature for calculating the adjustment is made via Object 27.

The setpoint adjustment is activated on the *RTR setting* parameter page via the *Use setpoint value adjustment with high temperatures* parameter and is set on the *Setpoint adjustment* parameter page.

The setpoint value adjustment is internally linked to the RTR so no bus connection is required.

The standard DIN1946 part 2 (Jan 94) recommends increasing the setpoint value proportionally from a certain outside temperature.

Recommendation:

*1 K per 3 K outdoor temperature*

### 6.6.1 Format of setpoint adjustment: Relative

Setpoint adjustment is sent from object 2 as a temperature differential. Under the setpoint adjustment threshold (*setpoint adjustment from*) the value 0 is sent.

If the set point value threshold is exceeded, the set point value is increased each time by 1 K if the outdoor temperature has risen above the configured value (*adjustment*).

#### Example: Calculated adjustment value

*Setpoint adjustment from: 25 °C*

Figure 8: Set point adjustment dependent on outdoor temperature

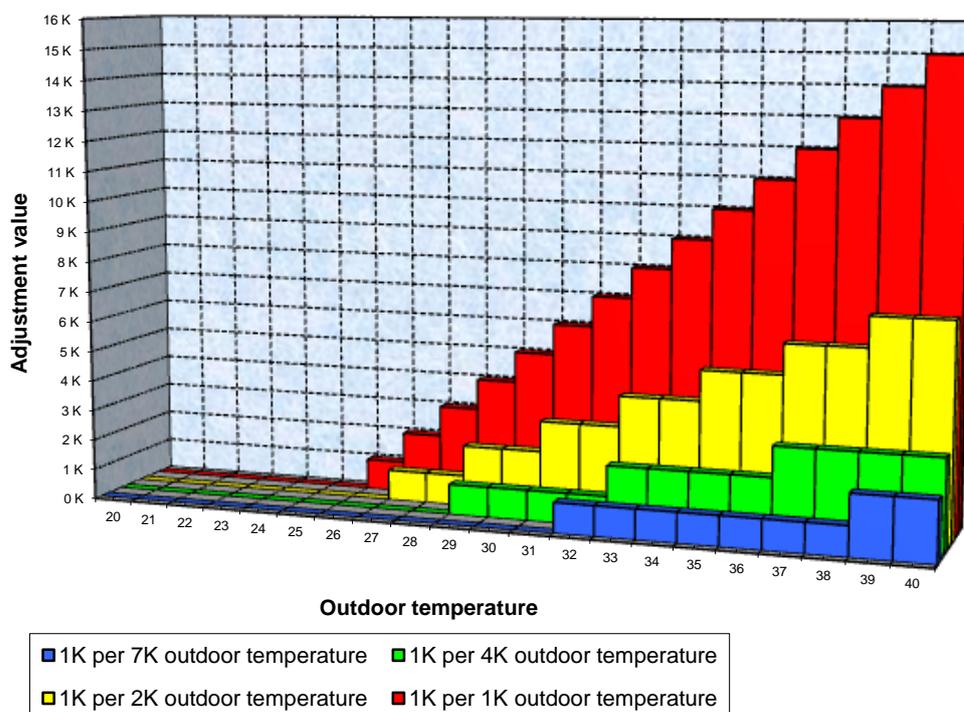


Table 90: Adjustment values

Outside temp.	1K/1K	1K/2K	1K/3K	1K/4K	1K/5K	1K/6K	1K/7K
20	0 K	0 K	0 K	0 K	0 K	0 K	0 K
21	0 K	0 K	0 K	0 K	0 K	0 K	0 K
22	0 K	0 K	0 K	0 K	0 K	0 K	0 K
23	0 K	0 K	0 K	0 K	0 K	0 K	0 K
24	0 K	0 K	0 K	0 K	0 K	0 K	0 K
25	0 K	0 K	0 K	0 K	0 K	0 K	0 K
26	1 K	0 K	0 K	0 K	0 K	0 K	0 K
27	2 K	1 K	0 K	0 K	0 K	0 K	0 K
28	3 K	1 K	1 K	0 K	0 K	0 K	0 K
29	4 K	2 K	1 K	1 K	0 K	0 K	0 K
30	5 K	2 K	1 K	1 K	1 K	0 K	0 K
31	6 K	3 K	2 K	1 K	1 K	1 K	0 K
32	7 K	3 K	2 K	1 K	1 K	1 K	1 K
33	8 K	4 K	2 K	2 K	1 K	1 K	1 K
34	9 K	4 K	3 K	2 K	1 K	1 K	1 K
35	10 K	5 K	3 K	2 K	2 K	1 K	1 K
36	11 K	5 K	3 K	2 K	2 K	1 K	1 K
37	12 K	6 K	4 K	3 K	2 K	2 K	1 K
38	13 K	6 K	4 K	3 K	2 K	2 K	1 K
39	14 K	7 K	4 K	3 K	2 K	2 K	2 K
40	15 K	7 K	5 K	3 K	3 K	2 K	2 K

### 6.6.2 Format of setpoint adjustment: Absolute

Object 2 sends the adjusted setpoint value to the bus for additional room thermostat.

This setpoint value consists of:

*Unadjusted base setpoint + dead zone + adjustment.*

**Example:**

*Set point adjustment from: 25 °C, base setpoint without adjustment: 21 °C, dead zone = 2 K*

**Figure 9: Setpoint adjustment dependent on outdoor temperature**

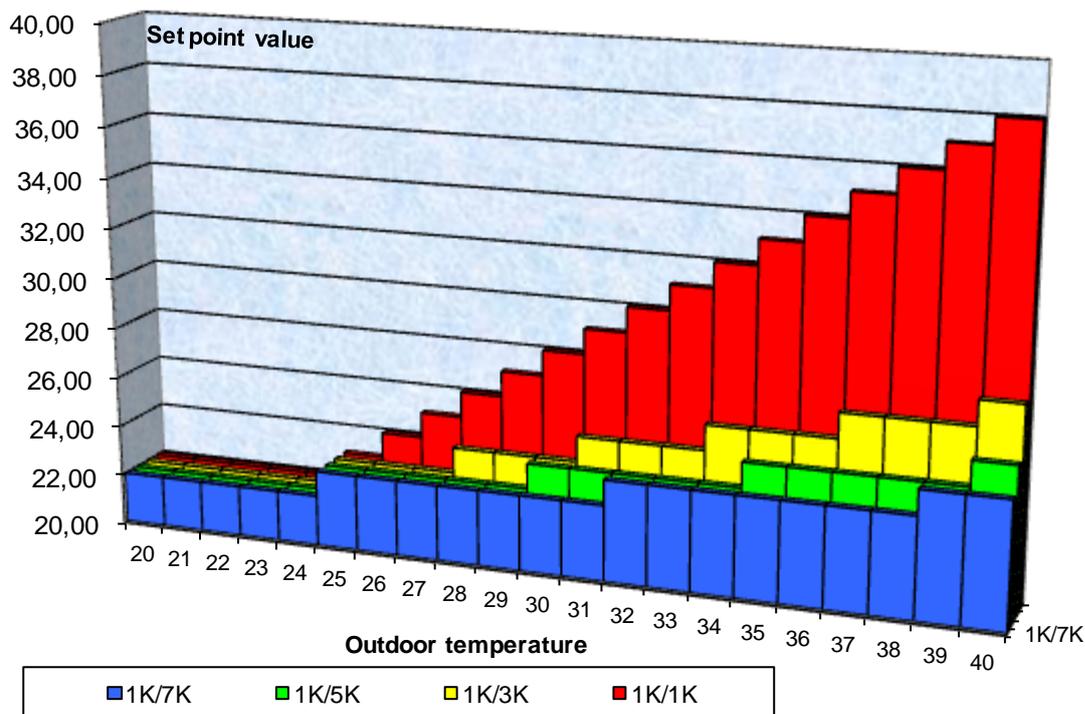


Table 91: Setpoint values

Outside temp.	1K/1K	1K/2K	1K/3K	1K/4K	1K/5K	1K/6K	1K/7K
20	22.00	22.00	22.00	22.00	22.00	22.00	22.00
21	22.00	22.00	22.00	22.00	22.00	22.00	22.00
22	22.00	22.00	22.00	22.00	22.00	22.00	22.00
23	22.00	22.00	22.00	22.00	22.00	22.00	22.00
24	22.00	22.00	22.00	22.00	22.00	22.00	22.00
25	23.00	23.00	23.00	23.00	23.00	23.00	23.00
26	24.00	23.00	23.00	23.00	23.00	23.00	23.00
27	25.00	24.00	23.00	23.00	23.00	23.00	23.00
28	26.00	24.00	24.00	23.00	23.00	23.00	23.00
29	27.00	25.00	24.00	24.00	23.00	23.00	23.00
30	28.00	25.00	24.00	24.00	24.00	23.00	23.00
31	29.00	26.00	25.00	24.00	24.00	24.00	23.00
32	30.00	26.00	25.00	24.00	24.00	24.00	24.00
33	31.00	27.00	25.00	25.00	24.00	24.00	24.00
34	32.00	27.00	26.00	25.00	24.00	24.00	24.00
35	33.00	28.00	26.00	25.00	25.00	24.00	24.00
36	34.00	28.00	26.00	25.00	25.00	24.00	24.00
37	35.00	29.00	27.00	26.00	25.00	25.00	24.00
38	36.00	29.00	27.00	26.00	25.00	25.00	24.00
39	37.00	30.00	27.00	26.00	25.00	25.00	25.00
40	38.00	30.00	28.00	26.00	26.00	25.00	25.00

## 6.7 Temperature control

### 6.7.1 Introduction

If the VARIA is not configured as a switching controller, it can alternatively be configured as a P or as a PI controller, whereby PI control is preferable.

With the proportional control (P control), the control variable is statically adjusted to the control deviation.

The proportional integral control (PI controller) is far more flexible, i.e. controls more quickly and more accurately.

To explain the function of both temperature controls, the following example compares the room to be heated with a vessel.

The filling level of the vessel denotes the room temperature.

The water supply denotes the radiator output.

The heat loss from the room is illustrated by a curve.

In our example, the maximum supply volume is 4 litres per minute and also denotes the maximum radiator output.

This maximum output is achieved with an actuating value of 100%.

Accordingly, with an actuating value of 50%, only half the water volume, i.e. 2 litres per minute, would flow into our vessel.


The bandwidth is 4l.

This means that the controller operates at 100% provided the actual value is smaller than, or equal, to  $(211 - 41) = 171$ .

#### Function:

- Desired filling volume:  
21 litres (= setpoint)
- From what point should the supply flow gradually be reduced to avoid an overflow? :  
4l below the desired filling volume, i.e. at  $211 - 41 = 171$  (=bandwidth)
- Original filling volume  
15l (=actual value)
- The loss amounts to 1l/minute

**6.7.2 Response of the P-control**

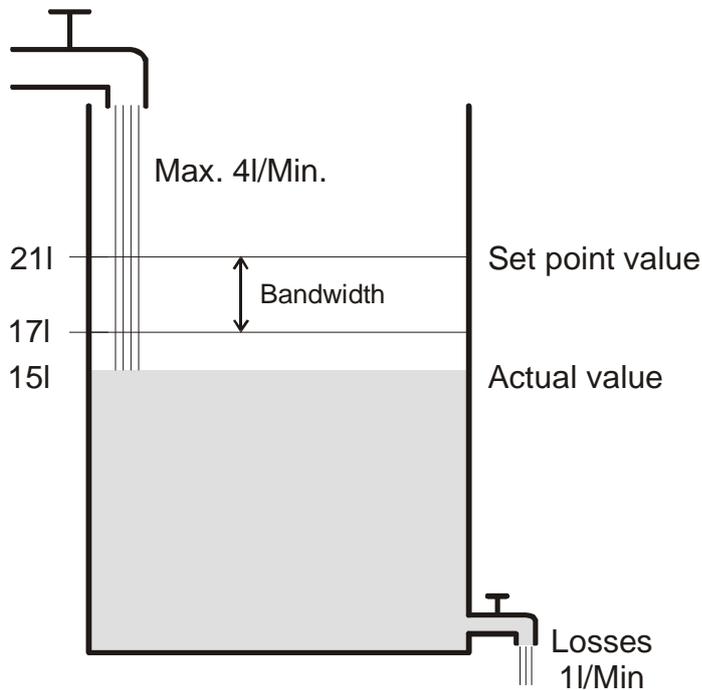

A filling volume of 15l gives rise to a control deviation of  $211 - 151 = 61$   
 As our actual value lies outside the bandwidth, the control will operate the flow rate at 100% i.e. at 4l / minute.

The supply quantity (control variable) is calculated from the control deviation (setpoint value – actual value) and the bandwidth.

Control variable = (control deviation / bandwidth) x 100

The table below shows the response and therefore also the limits of the P-control.

**Table 92**

Filling level	Actuating value	Feed	Loss	Increase in filling level
15l	100%	4 l/min	1 l/min	3 l/min
19l	50%	2 l/min		1 l/min
20l	25%	1 l/min		0 l/min

The last line indicates that the filling level cannot increase any further, because the inflow only allows the same amount of water to flow in as flows out through loss.

The result is a permanent control deviation of 1l and the setpoint value can never be reached. If the loss was 1l higher, the permanent control deviation would increase by the same amount and the filling level would never exceed the 19l mark.

In a room this would mean that the control deviation increases with a decreasing outside temperature.

### **P-control as temperature control**

The P-control response during heating control is as shown in the previous example. The setpoint temperature (21°C) can never quite be reached.

The permanent control deviation increases as the heat loss increases and decreases as the ambient temperature decreases.

### **6.7.3 Response of the PI controller**

Unlike the pure P-control, the PI controller works dynamically. With this type of controller, the actuating value remains unchanged, even at a constant deviation.

In the first instant, the PI controller sends the same actuating value as the P-control, although the longer the setpoint value is not reached, the more this value increases.

This increase is time-controlled over the so-called integrated time.

With this calculation method, the actuating value does not change if the setpoint value and the actual value are the same.

Our example, therefore, shows equivalent in and outflow.

#### **Notes on temperature control:**

Effective control depends on agreement of bandwidth and integrated time with the room to be heated.

The bandwidth influences the increment of the actuating value change:

Large bandwidth = finer increment on control variable change.

The integrated time influences the response time to temperature changes:

Long integrated time = slow response.

Poor agreement can result in either the setpoint value being exceeded (overshoot) or the control taking too long to reach the setpoint value.

Usually, the best results are achieved with the standard settings or the settings via system type.

## 6.8 Continuous and switching control

A switching (2 point) control recognises only 2 statuses, On or Off.

A continuous control works with a control variable between 0% and 100% and can thus exactly measure out the energy input. This achieves a pleasant and precise degree of control.

**Table 93: Summary of control functions**

Operating mode / stage	Type of control	Hysteresis
Heating	2-point / PI controller	positive
Cooling	2-point / PI controller	negative
Additional stage	2-point / P control	negative

## 6.9 Hysteresis

Hysteresis determines the difference between a controller's switching on and off temperature. It can be both positive and negative.

A combination of heating and cooling control influences the amount of the [Dead zone](#).

Without hysteresis, the control would activate and deactivate continuously provided the temperature is within the setpoint value range.

### 6.9.1 Negative hysteresis:

**Heating:** is provided until the setpoint value has been reached.

Afterwards, the heating is only switched on again when the temperature falls below the "Hysteresis setpoint value" threshold.

**Cooling:** lasts until the "Hysteresis setpoint value" threshold has been achieved.

Afterwards, it is only switched on again when the temperature rises above the setpoint value.

#### Example of additional heating stage

Additional stage with a setpoint value of 20 °C, hysteresis 0.5 K and starting temperature 19 °C.

The additional stage is switched on and does not switch off again until the setpoint value (20 °) is reached.

The temperature falls and the additional stage does not switch on again until  $20^{\circ}\text{C} - 0.5\text{K} = 19.5^{\circ}\text{C}$ .

#### Cooling example:

Cooling with setpoint value 25 °C, hysteresis = 1 °C and ambient temperature 27 °C.

The cooling is switched and only switched off again when a temperature of 24 °C ( $25^{\circ}\text{C} - 1^{\circ}\text{C}$ ) is achieved.

It switches on again when the temperature rises above 25 °C.

### 6.9.2 Positive hysteresis

Heating lasts until the temperature reaches "setpoint value + hysteresis " threshold has been achieved.

The heating is only switched on again when the temperature falls below the setpoint value.

**Heating example:**

Heating with setpoint value 20°C, hysteresis = 1°C and ambient temperature 19 °C.

The heating is switched on and only switches off again when a temperature of 21 °C (= 20 °C + 1 °C) is achieved.

It switches on again when the temperature falls below 20 °C.

### 6.10 Dead zone

The dead zone is a buffer area between the heating and cooling operation.


Neither heating nor cooling takes place within this dead zone.

Without this buffer zone, the system would switch continuously between heating and cooling.

As soon as the setpoint value has been under-run, the heating is activated and the setpoint value would not be achieved. If cooling were then to be started immediately, the temperature would fall below the setpoint value and switch on the heating again.


Depending on the type of control the dead zone can be extended by the value of the [Hysteresis](#).

#### 6.10.1 Case 1: Heating and cooling with continuous control

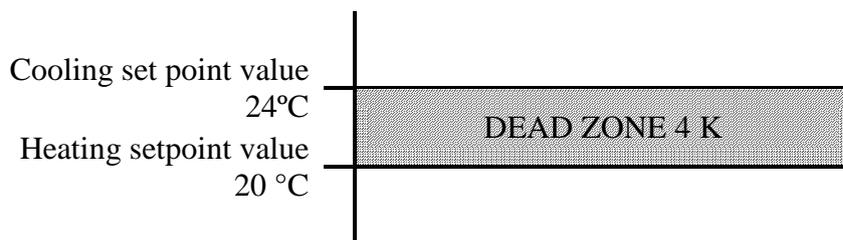


The dead zone (4 K) is not affected.

**6.10.2 Case 2: Heating with 2-point control and cooling with continuous control**

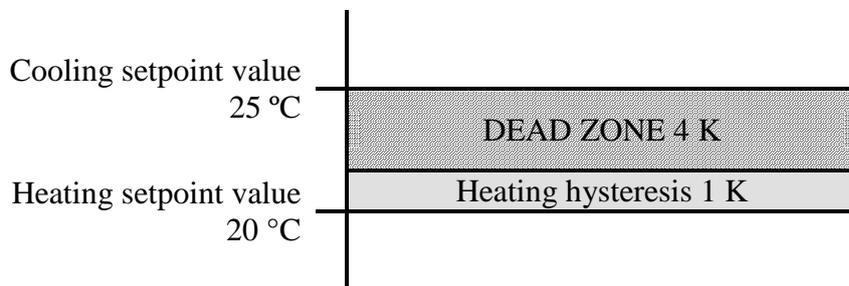


The dead zone (4 K) is increased by the value of the hysteresis (1K) and offsets the cooling setpoint value to 25 °C.

**6.10.3 Case 3: Heating with 2-point control and cooling with continuous control**

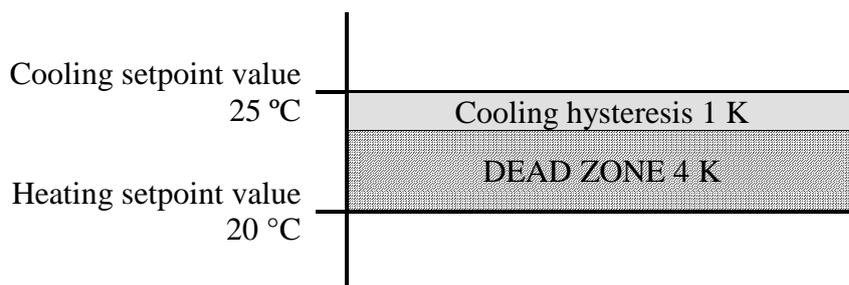

The dead zone (4 K) is increased by the value of the hysteresis (1K) and offsets the cooling setpoint value to 25 °C.

**6.10.4 Case 4: Heating and cooling with 2-point control**

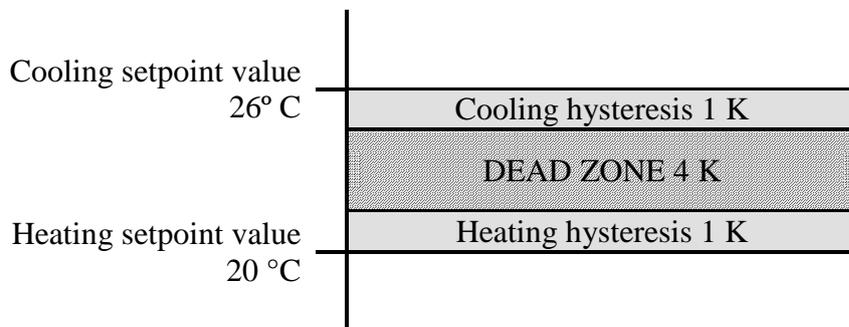

The dead zone (4 K) is increased by the value of both hysteresis (2K) and offsets the cooling setpoint value to 26 °C.

## 6.11 Operating mode selection

### 6.11.1 Priorities for operating mode selection

The operation mode selection between comfort, standby, night operation and frost protection can

happen in 4 different ways:

- Via object 7 *operating mode selection*
- Manually on device on RTR page
- Via the time program
- Via scene control

All 4 possibilities are all on the same priority level.

**In principle the following applies: The last instruction overwrites the previous one.**

**Exception:** Frost mode via window contact (Obj. 9) has priority over all other operating modes.

Upon selection of the *presence sensor* parameter, the following also applies:

1. If a new operation mode is received on object 7 with the presence object set (*operation mode preset*), then it is accepted and the presence object is reset (only with presence sensor).
2. Reception of the same operating mode prior to the presence status (e.g. via cyclical sending) is ignored.
3. If the presence object is set during night / frost operation, it is reset after the configured comfort extension finishes (see below).
4. If the presence object is set during standby mode, the comfort operating mode is accepted without time restriction.

## 6.11.2 Determining the current operation mode

The current setpoint value can be adjusted to the relevant requirements via the choice of operation mode.

The operating mode can be specified by objects 7..9.

There are two methods available:

### 6.11.2.1 New operating modes

If "*objects for determining the operating mode*" = *new*:... selected on the RTR setting parameter page then the current operating mode is set out as follows:

**Table 94**

Operating mode preset Object 7	Presence Object 8	Window position Object 9	Current operating mode (object 12)
any	any	1	Frost / heat protection
any	1	0	Comfort
Comfort	0	0	Comfort
Standby	0	0	Standby
Night	0	0	Night
Frost / heat protection	0	0	Frost / heat protection

#### Typical application:

In the mornings, Object 7 activates “standby” or “comfort” operating mode and in the evenings “night” operating mode via a time switch (e.g. TR 648).

During holiday periods, object 7 also selects frost / heat protection via another channel on the timer.

Object 8 is connected to a presence detector. If a presence is detected VARIA switches to comfort operating mode (see table).

Object 9 is connected to a window contact via the bus (binary inputs).

As soon as a window is opened, VARIA switches to frost protection operating mode.

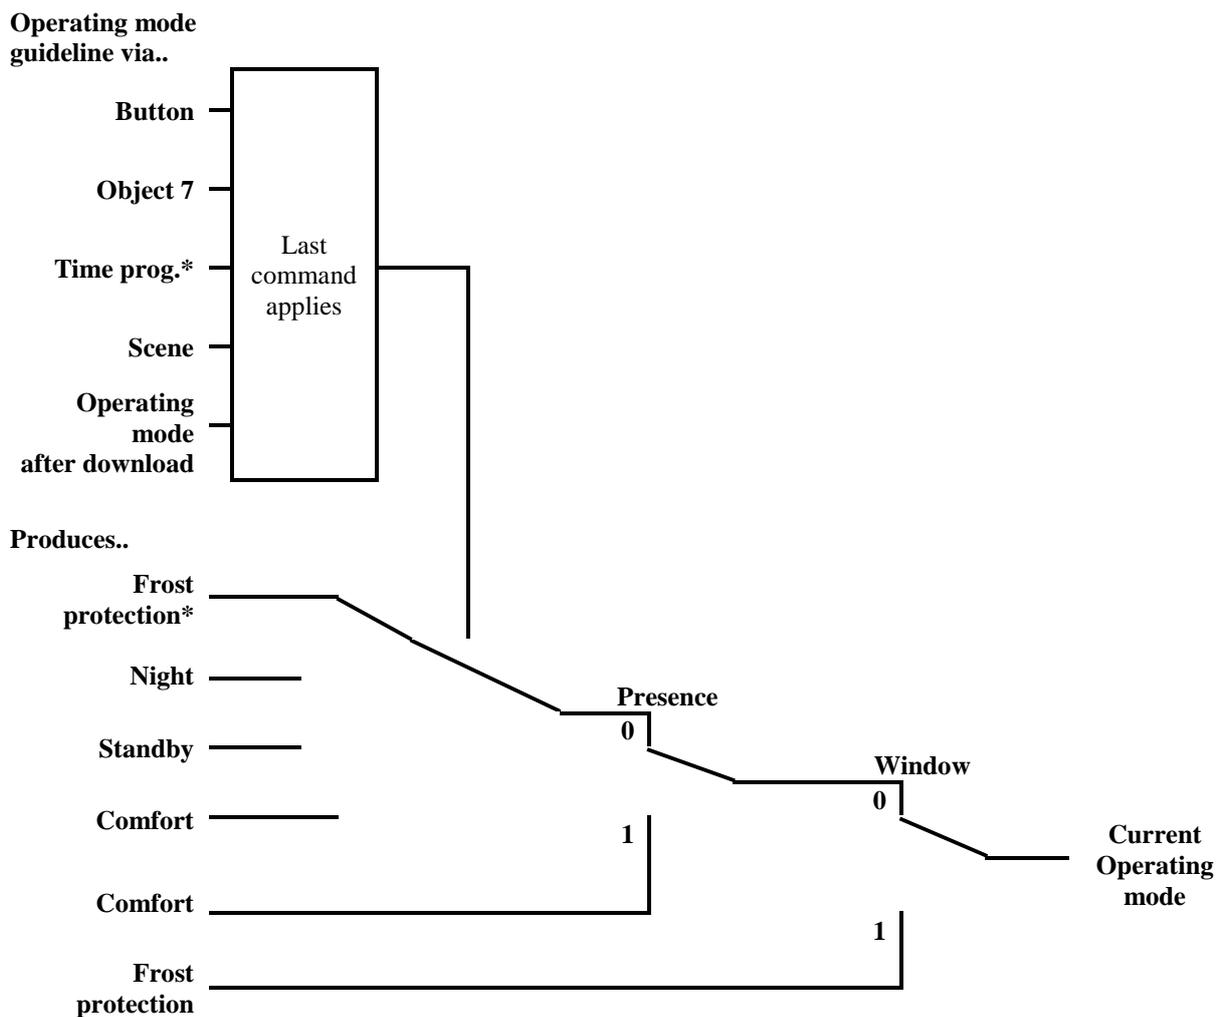


Figure 10

\* No frost protection possible with switching program

### 6.11.2.2 Old operating modes

If *objects for determining the operating mode = old:...* selected on the RTR setting parameter page then the current operating mode is set out as follows:

**Table 95**

Night Object 7	Comfort Object 8	Object 9 frost/heat protection	Current operating mode Object 12
any	any	1	Frost / heat protection
any	1	0	Comfort
Standby	0	0	Standby
Night	0	0	Night


**Typical application:**

In the mornings, "standby" operation mode, and in the evenings "night" operation mode are activated via a time switch via Object 7.

In holiday periods, frost/heat protection is selected on another channel via Object 9.

Object 8 (comfort) is connected to a presence detector. If a presence is detected, VARIA switches to comfort operating mode (see table).

Object 9 is linked to a window contact: As soon as a window is opened, VARIA switches to frost protection operating mode.

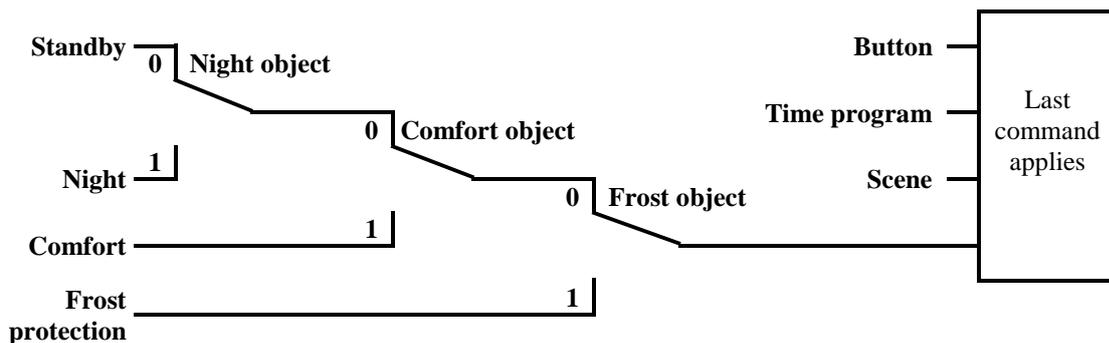

**Figure 11**

The old method has 2 disadvantages over the new method:

1. To switch from comfort to night operating mode, 2 telegrams (2 time switch channels if necessary) are required:  
Object 8 must be set to "0" and Object 7 to "1".
2. If during periods when "frost / heat protection" is selected via the timer, the window is opened and then closed again, the "frost / heat protection" operating mode is cleared.

### 6.11.2.3 Determining the setpoint value

#### 6.11.2.3.1 Calculating the setpoint value in heating operation

See also: [Base setpoint value and current setpoint value](#)

**Table 96: Current set point value during heating**

Operating mode	Current setpoint value
<i>Comfort</i>	Base setpoint value +/- setpoint value offset
Standby	<i>Base setpoint value +/- setpoint adjustment – reduction in standby mode</i>
Night	<i>Base setpoint value +/- setpoint adjustment – reduction in standby mode</i>
Frost / heat protection	configured <i>setpoint value for frost protection mode</i>

**Example:**

Heating in comfort operating mode.

Parameter page	Parameter	Setting
<i>Setpoint values</i>	<i>Base setpoint after reset</i>	21 °C
	<i>Reduction in standby mode (during heating)</i>	2 K
<i>Operation</i>	<i>Maximum valid setpoint value offset</i>	+/- 2 K

The setpoint value was previously increased by 1 K using the + button.

**Calculation:**

$$\begin{aligned}
 \text{Current setpoint value} &= \text{base setpoint value} + \text{manual setpoint value offset} \\
 &= 21^{\circ}\text{C} + 1\text{K} \\
 &= 22^{\circ}\text{C}
 \end{aligned}$$

If operation is switched to standby mode, the current setpoint value is calculated as follows:

$$\begin{aligned}
 \text{Current setpoint} &= \text{base setpoint} + \text{setpoint value offset} - \text{reduction in standby mode} \\
 &= 21^{\circ}\text{C} + 1\text{K} - 2\text{K} \\
 &= 20^{\circ}\text{C}
 \end{aligned}$$

**6.11.2.3.2 Calculating the setpoint value in cooling operation**

**Table 97: current setpoint value during cooling**

Operating mode	Current setpoint value
Comfort	Base setpoint value + <i>Setpoint value offset + dead zone</i>
Standby	Base setpoint value + <i>setpoint value offset + dead zone + increase in standby mode</i>
Night	<i>Base setpoint value + setpoint offset + dead zone + increase in night mode</i>
Frost / heat protection	configured <i>setpoint value for heat protection mode</i>

**Example:** Cooling in comfort operating mode.

The room temperature is too high and VARIA has switched to cooling operation

**Table 98**

Parameter page	Parameter	Setting
<i>RTR setting</i>	<i>Maximum valid setpoint value offset</i>	+/- 2 K
<i>Heating setpoint values</i>	<i>Base setpoint value after loading the application</i>	21 °C
<i>Cooling setpoint values</i>	<i>Dead zone between heating and cooling</i>	2 K
	<i>Increasing in standby mode (during cooling)</i>	2 K

The setpoint value was previously lowered by 1 K on the device.

**Calculation:**

$$\begin{aligned}
 \text{Current setpoint value} &= \text{base setpoint value} + \text{manual setpoint value offset} + \text{dead zone} \\
 &= 21^{\circ}\text{C} - 1\text{K} + 2\text{K} \\
 &= 22^{\circ}\text{C}
 \end{aligned}$$

Changing to standby mode causes a further increase in the setpoint value (energy saving) and gives rise to the following setpoint value.

$$\begin{aligned}
 \text{Setpoint value} &= \text{base setpoint value} + \text{setpoint value offset} + \text{dead zone} + \text{increase in standby mode} \\
 &= 21^{\circ}\text{C} - 1\text{K} + 2\text{K} + 2\text{K} \\
 &= 24^{\circ}\text{C}
 \end{aligned}$$

## 6.12 Setpoint offset

For VARIA, the [current setpoint value](#) can be adjusted in 2 ways.

- step by step with the + and – buttons on the RTR page
- via Object 1 "Manual setpoint value offset"

The differential between the setpoint value offset and the Base setpoint value is sent by object 1 at each change (e.g. -1.00).

The offset limits are specified on the *RTR setting* parameter page by the *maximum setpoint value offset on the rotary control* parameter and apply to both types of setpoint value offset.

**Table 99: Example of temperature offset with base setpoint value = 20 °C**

<i>Maximum valid setpoint value offset</i>	<i>Setting range</i>	
	<i>From</i>	<i>to</i>
+/- 1 K	19 °C	21 °C
+/- 2 K	18 °C	22 °C
+/- 5 K	15 °C	25 °C

### 6.12.1 Setpoint temperature offset via the + and - buttons

- Select temperature display using ▲▼.
- Use + or – to set desired setpoint value.
- Confirm by pressing OK.

If the hotkey function is deactivated selection with the ▲▼ button can be omitted:

Every setpoint value offset via the +/- buttons (confirmed with OK) is sent to object 1.

If a 0 is received by object 1, a previously entered setpoint value offset is reset to 0 K.

### 6.12.2 Setpoint temperature offset via object 1

In this case, the setpoint value is changed by sending the desired offset to object 1. This involves the differential to the base setpoint value (may be preceded by a minus sign) being sent to object 1 in EIS5 format.

**Example** Base setpoint value of 21°C:

If Obj. 1 receives a value of 2.00, the new setpoint value is calculated as follows:

$$21^{\circ}\text{C} + 2.00\text{K} = 23.00^{\circ}\text{C}.$$

To then bring the setpoint value to 22°C, the differential is resent to the programmed base setpoint value (here 21°C) to Obj. 1, in this case 1.00K ( $21^{\circ}\text{C} + 1.00\text{K} = 22^{\circ}\text{C}$ )

**The offset always relates to the Base setpoint value (as configured) and not to the current setpoint value.**

### 6.13 Base setpoint value and current setpoint value

The **base setpoint value** is the standard temperature for the comfort mode and the reference temperature for reduction in standby and night modes.

The programmed basic setpoint value (see “Base setpoint value after loading the application”) is stored in Object 0 and can be changed at all times via the bus by sending a new value to [Object 0](#).

After reset (bus returned), the last used base setpoint value is restored.

The **current setpoint value** is the value that actually determines the control. It is the result of all the operating mode reductions or increases depending on the control function.

#### Example:

At a base setpoint value of 22°C and a reduction in night mode of 4K, the current setpoint value (in night mode) is:  $22^{\circ}\text{C} - 4\text{K} = 18^{\circ}\text{C}$ . During the day (in comfort mode) the current setpoint value is 22°C (in heating mode).

The formation of the current setpoint value due to the basic setpoint value can be observed in the block diagram on the next page:

The base setpoint value on the left is specified via object 0 or set on the device.

The current setpoint value is on the right, i.e. the value upon which the room temperature is effectively controlled.

As you can see in the block diagram, the current setpoint value depends on the operating mode (5) and the control function (4) selected.


The base setpoint value limits (2) prevent an incorrect base setpoint value from being specified to

Object 0. These are the following parameters:

- *minimum valid base setpoint value*
- *maximum valid base setpoint value*

Should the setpoint value lie outside the parameter values for frost and heat protection due to a setpoint value offset, it shall be limited to these values by the safety limits (11).

### 6.13.1 Setpoint value calculation

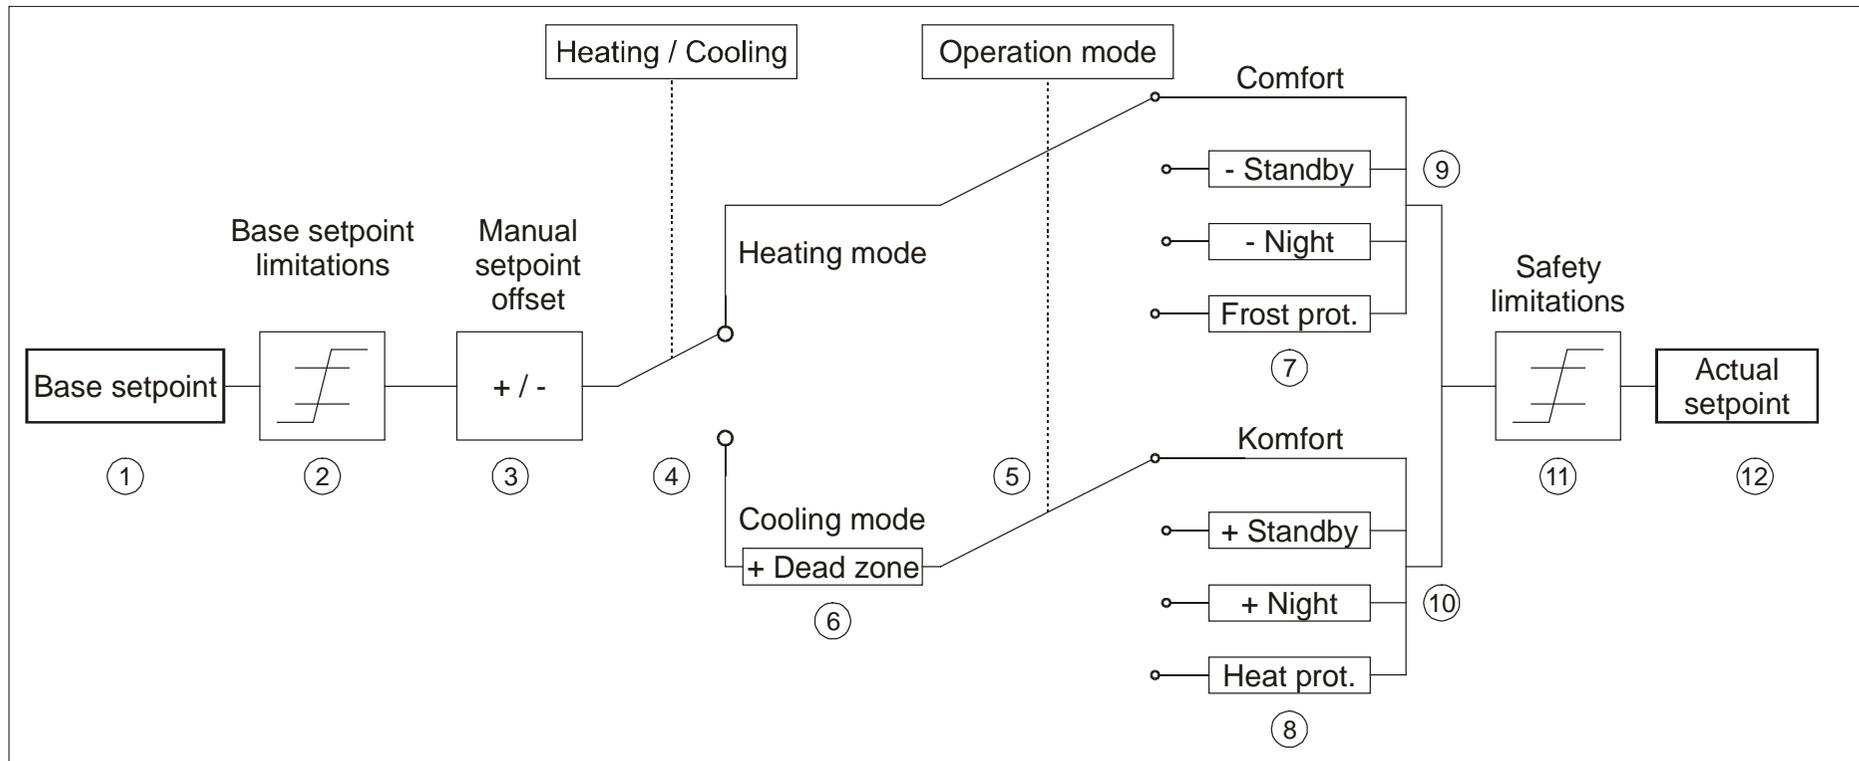

- |  |  |
|--|--|
| <p>1 Specified base setpoint value from Object 0 or user input</p> <p>2 Max. and min. valid base setpoint values</p> <p>3 Manual setpoint offset</p> <p>4 Switches between heating and cooling: Automatically or via object 6</p> <p>5 Selection of operating mode, by operator, object, switching program or scene.</p> <p>6 The setpoint value is increased in cooling mode by the amount of the dead zone</p> | <p>7 The setpoint value is replaced by the setpoint value for frost protection mode</p> <p>8 The setpoint value is replaced by the setpoint value for heat protection mode</p> <p>9 Setpoint value after reductions conditional to the operating mode</p> <p>10 Setpoint value after increases conditional to the operating mode</p> <p>11 The limits for frost and heat protection must be adhered to.</p> <p>12 Current setpoint value according to increases, reductions and limits conditional to the operation.</p> |
|--|--|

## 6.14 Maximum text length according to line format

Text elements		Max. length	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	Object type		
Page heading			L	I	V	I	N	G		R	O	O	M														
Object type	Parameter																										
Entered text	Line texts		C	O	N	T	R	O	L		W	I	N	T	E	R		G	A	R	D	E	N				
Switching	Line texts		C	E	I	L	I	N	G		L	I	G	H	T										1 bit DPT 1.001		
	Text with Obj. value = 0																						O	N			
	Text with Obj. value = 1																						O	F		F	
percentage value	Line texts		S	K	Y	L	I	G	H	T															1 byte DPT 5.001		
	Text at object value = 0																										
	Text with Value = 1																										
HVAC	Line texts		H	E	A	T	I	N	G																1 byte DPT 6.010		
Counter value 0..255	Line texts		C	O	U	N	T	E	R																1 byte DPT 6.010		
	Unit for Obj. no.																										
Dimming	Line texts		L	I	G	H	T																		4 bit DPT 3.007		
	Text at object value = 0																						O	F		F	
	Text at object value = 1																							O		N	
Temperature	Line texts		T	E	M	P	E	R	A	T	U	R	E												2 byte DPT 9.001		
	Unit for Obj. no.																						°	C			
EIS 5	Line texts		B	R	I	G	H	T	N	E	S	S													2 byte DPT 9.*		
	Unit for Obj. no.																						L	U		X	
Counter value 0..65535	Line texts		V	I	S	I	T	O	R	S															2 byte DPT 8.*		
	Unit for Obj. no.																						P				
Scene	Line texts		S	C	E	N	E																		1 byte DPT 6.010		
	Scene text															H	O	L	I	D	A	Y	S				
Blinds/ Shutter	Line texts		B	L	I	N	D	S		L	I	V	I	N	G		R	O	O	M					1 bit KNX 1,009 / 1,010		
Priority	Line texts		P	R	I	O	R	I	T	Y															2 bit DPT 2.001		
	Text at "priority Off, On, none"																										
Valuator	Line texts		V	O	L	U	M	E																	1 byte DPT 5.001		
Floating-point number	Line texts		P	O	W	E	R																		4 Byte DPT 14.xxx		



## **7 Operating instructions**

**theben**

**VARIA**  
 VARIA 826 S WH KNX  
 VARIA 826 S BK KNX

8269210  
 8269211

**Installation and operating instructions**  
 Room thermostat

D
GB
F

I
E
nL

309604

GB



VARIA 826 S KNX

## Contents

Basic safety instructions	3
Display and push buttons	4
Overview	5
Connection	6
Installation/Dismantling	7
Programming physical address, bus connection	8
<b>User operation</b>	
– Start-up	9
– Hotkey function/operating modes	10
– Menu <b>Room temp. controller</b>	11
– <b>Weather</b> menu	14
<b>Professional electrician operation</b>	
– <b>Weather forecast</b> menu (6 h)	16
– Page freely programmable via ETS	17
– <b>SETTINGS</b> menu	20
PIN, date and time, setpoint values, time program, language, display, system	
Technical date	29
Service address/Hotline	29
Table : Set program	
2	

## Basic safety instructions

GB



**WARNING**

**Danger of death through electric shock or fire!**

➤ Installation should only be carried out by a professional electrician!

- The device can be installed in flush-mounted sockets in walls and is designed for use in a normal environment; device complies with EN 60669-2-1
- Professional installation of bus lines and commissioning of devices requires compliance with the provisions of EN 50428 for switches or similar installation equipment for use in building systems technology! Tampering with, or making modifications to, the device will invalidate the guarantee

### Designated use



- VARIA controls all room functions such as heating, air conditioning, ventilation, lighting and sun protection
- Only to be used in closed, dry rooms (house, office, conservatory etc.)

### Disposal

Dispose of device in environmentally sound manner

3

## Screen and keys

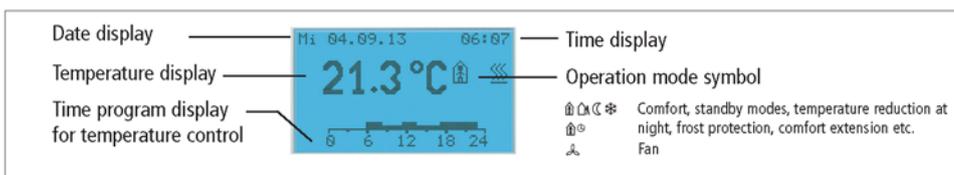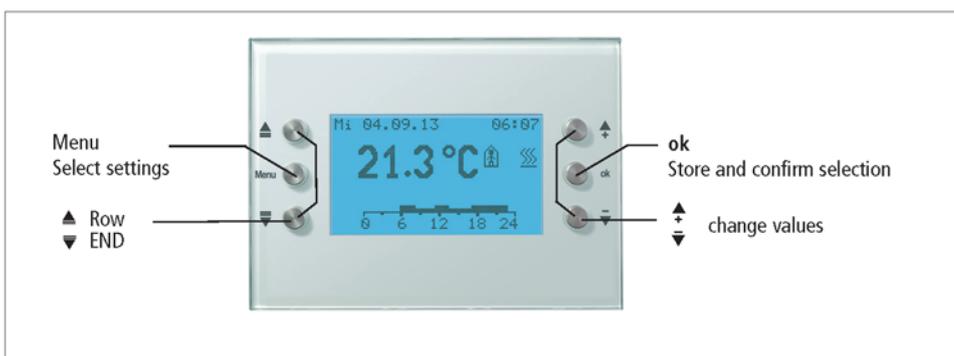

4

GB

## Overview

### For daily use ...

Room thermo controller

Setpoint value: 21.0°C

Operation mode: Comfort

Fan step: auto

Overview ..

→

**Room temp. controller**

- Set point value
- Operation mode
- Fan level
- Overview ..

Weather

Temperature: 21.0 °C

Wind: 7.3 km/h

Brightness: 200 Lux

Rain: no

Min/Max values ..

→

**Weather**

- Temperature
- Wind
- Brightness
- Rain
- Min/Max values ..

Weather forecast (6h)

Temperature

Precipitation

Rain amount

Wind force

Continue ↑↓

→

**Weather forecast (6h)**

- Temperature
- Precipitation
- Rain amount
- Wind force
- Continue ↑↓

### For occasional use ...

SETTINGS

Temperature

Switching program ..

Language

Display ..

System ..

End settings

↓

**Settings**

- Date and time
- Temperature
- Switching program
- Language
- Display
- System
- Close settings

5

## Connection



**WARNING**

**Danger of death through electric shock!**

- Must only be installed by professional electrician!
- Disconnect power source!
- Cover or shield any adjacent live components.
- Ensure device cannot be switched on again!
- Check power supply is disconnected!
- Earth and bypass!
- Ensure installation height of 1.5 m.

### Installation



All 3 lugs on the device (top and bottom) must be firmly clicked into place.

- Remove protective film.

GB

### Dismantling

- Press down on the top of the device with a screwdriver to release the device from the wall.

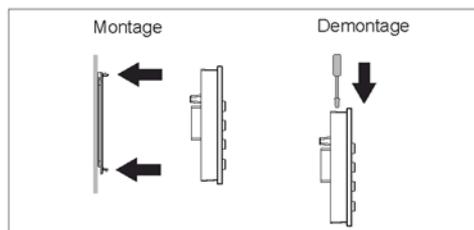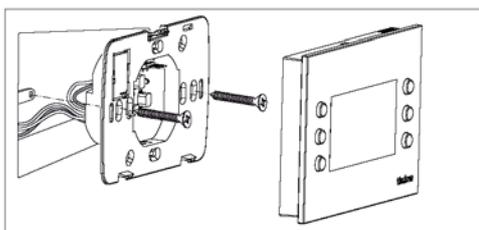

7

### Program physical address

- Move a magnet along the right upper side of the device.
    - The programming LED lights up
    - VARIA is in program mode
- The program mode can also be set using the settings menu under system.




Start-up, diagnostics and configuration are handled by ETS (KNX tool software).

8

### Bus connection/mains connection

- Open cover.
- Plug bus line into bus terminals. Ensure correct polarity.
- Plug bus terminal into the device.
- Close flap.
- Power connection (optional)

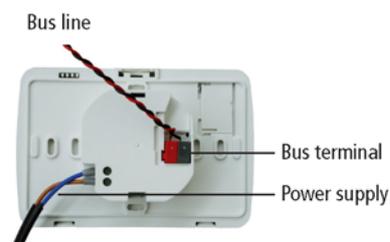


## User operation

GB

### Start-up

Date and time are preset ex works. Different pages can be displayed. The pages displayed depends on the programming by a professional electrician. Please refer to the Product Handbook for detailed functional descriptions (at [www.theben.de](http://www.theben.de)).

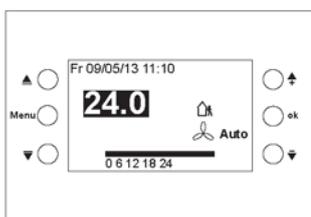


### Quick access – Room temperature control

Example for a Favorites/Overview page

➤ With the keys  $\uparrow$   $\downarrow$  set desired room temperature.

9

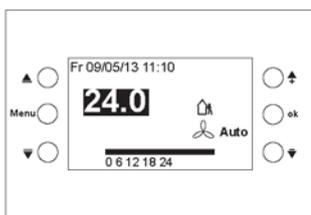


### Hot key function

Special function for easy switch on/off (e.g. lighting).

**Function:** The light can be switched on or off by pressing the buttons  $\uparrow$  /ok or  $\downarrow$  .

This function must be activated by a professional electrician.

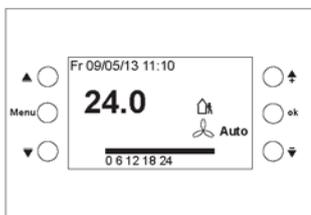


### Operation modes/fan levels

You can choose between 5 operation modes:

- $\hat{H}$  Comfort mode
- $\hat{H}$  Standby mode
- $\text{C}$  Temperature reduction at night
- $\text{F}$  Frost protection
- $\hat{H}$   $\text{C}$  Comfort extension
- $\text{F}$  Fan: You can choose Auto, On/Off or the fan levels 1, 2, 3.

10

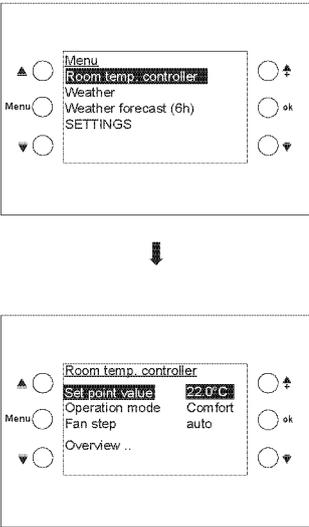


### Room temp. controller menu

**GB**

#### Room temperature/change setpoint value

- Press Menu button.
- Confirm room temperature controller with ok.
- With ▲ ▼ set the desired set point.
- Confirm with ok.

11


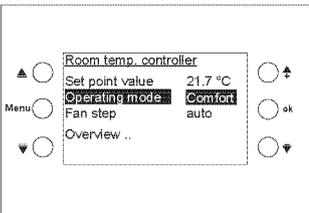


### Change operation mode

- Press Menu button.
- Confirm room temperature controller with ok.
- With the keys ▲ ▼ select operating mode.
- With ▲ ▼ set the desired operating (page 10) mode.
- Confirm with ok.

Comfort extension is not possible if presence detectors are used.

12
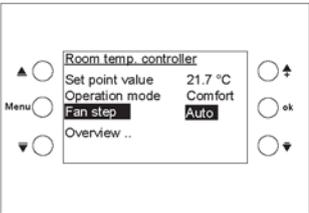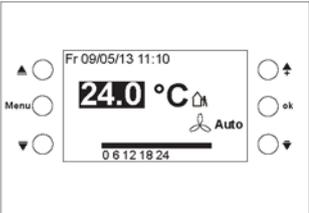
### Change fan stage

**GB**


- Press Menu button.
- Confirm room temperature controller with ok.
- With the keys ▲ ▼ select fan level.
- With ▲ ▼ set the desired fan level.

The following appears in the display when a fan coil actuator is connected . You can choose from Auto, On/Off or fan levels 1, 2, 3.


### Overview ..

- Press Menu button.
- Confirm room temperature controller with ok.
- With the keys ▲ ▼ select overview.
- Confirm with ok. The overview page appears.

13

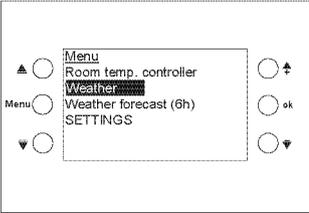

↓

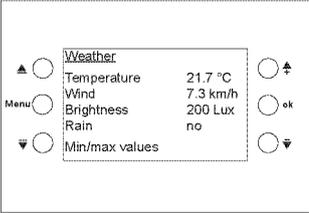

### Weather menu


Display for temperature, wind speed, brightness and rain values (from a weather station)

### Query weather data


- Press Menu button.
- With the keys ▲ ▼ select weather.
- Confirm with ok.

The weather data appears in the display.

14

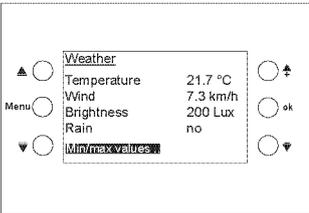

↓

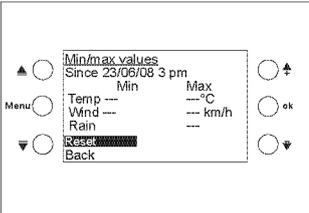

**GB**

### Query min/max values

- Press Menu button.
- With the keys ▲ ▼ select weather.
- Confirm with ok.
- Confirm min/max values with ok.

The minimum and maximum temperature, wind and rain values are displayed from the start of the recording operations.

### Rest min/max values


- With ▲ ▼ Reset.
- Confirm with ok.

The record is deleted and restarted.


The min/max values function only appears if it is selected by the professional electrician.

15

## Professional electrician operation

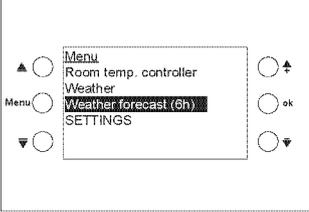

↓

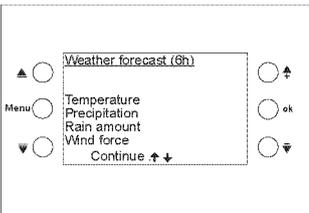


### Weather forecast menu (6h)

(the menu only appears when it was set by the electrician)

- Press Menu button.
- With the keys ▲ ▼ select Weather forecast (6h).
- Confirm with ok.

The weather data appears in the display.

16

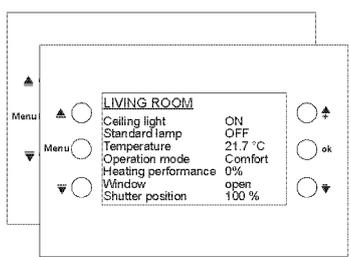


### Pages freely programmable via ETS GB

Display of values and control of different functions in 8 lines: light scenes, sun protection systems, etc. (up to 40 values/functions).

The texts are set by the professional electrician and appear automatically in the display.


- Press Menu button.
- With the keys ▲ ▼ select e.g. living room.
- Confirm with ok.

17

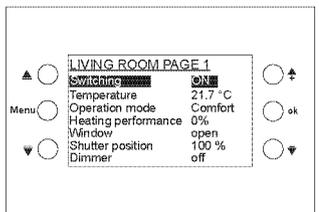

### 1. "Switching" example



- With ▲ ▼ select **Switching**
- Press ▲ ▼ push button. The displayed value changes, a telegram is sent.
- Press ok. The displayed value is sent.

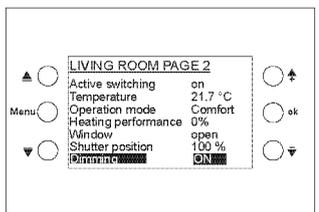

### 2. "Dimming" example

- With ▲ ▼ select **Dimming**
- Press push button ▲ ▼ briefly. The light is switched **On/Off**
- Press push button ▲ ▼ and hold for some time. This appears ↑ ↓: The dimming telegram is sent.
- Press ok. The displayed value is sent.

18
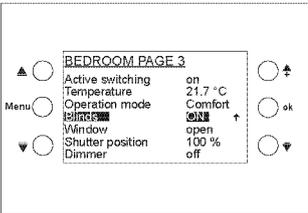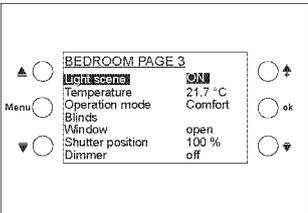
### 3. "Blinds" example

- With ▲ ▼ select **Blinds**
- Press push button ▲ ▼ briefly. The blinds slat position is changed.
- Press push button ▲ and hold for some time. This appears ↑ ±: The corresponding value is sent.

A professional electrician can adjust the setting so that the blinds stop once the button is released or when ok is pressed.


### 4. Example: "Temperature", "Light scenes", "Percentage values" etc.

- With ▲ ▼ e.g. select **Light scene**
- Press push button ▲ ▼ briefly.
- Press ok. The displayed value is sent.

GB

19


## Professional electrician operation

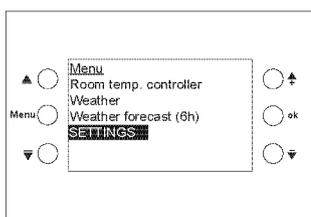


### SETTINGS menu

The PIN code appears first (if set by professional electrician).

- Press Menu button.
- Using the push buttons ▲ ▼ select SETTINGS.
- Enter the figures with ▲ ▼ and confirm with ok.

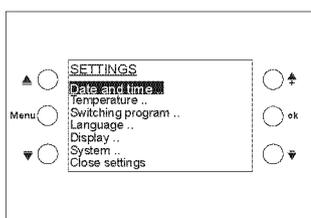

- Afterwards using ▲ ▼ select desired line.
- Confirm with ok.
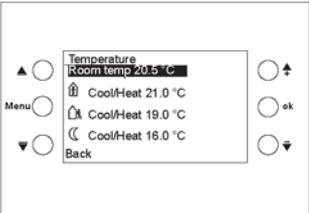
### Setting date and time..

**GB**

- With ▲ ▼ select desired line.
- Confirm with ok.
- With ▲ ▼ change the value.
- Confirm with ok.

### Set temperature

#### Set room temperature: Comparison with the existing room temperature

- With ▲ ▼ select desired line.
- With ▲ ▼ change the value.
- Confirm with ok.


Each value can be set separately. There are, however, minimum/maximum permitted differences between the values, which are automatically adjusted if necessary.

21

### Set time program

There are 8 channels with weekly programs (minimum switching interval of 15 min.) (see table on page 30).

- Channel 1 is allocated to the room thermostat (RTR) and has the following operation modes:  
Temperature reduction at night, standby and comfort
- For every channel can – no program can be selected among:
  - the fixed programs (Prog 1–3)
  - a freely programmable program (own program)

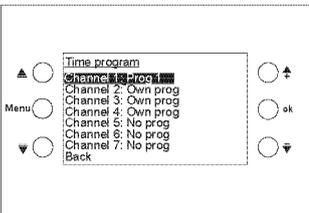


↓


- With ▲ ▼ select desired channel.
- Using ▲ ▼ select program.
- Confirm with ok.

If no prog. or prog. 1–3 is selected, a previously programmed internal program is faded out rather than deleted.

22

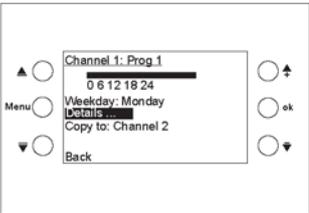

↓

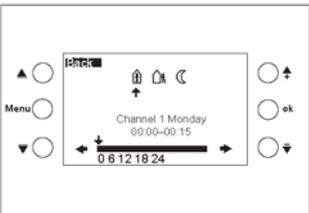

### Set time program

**GB**

You can now select between various functions:  
Weekday, Details .., Copy to ..

Using the Details .. menu, you can see all the programs in detail.


The buttons on the VARIA device are given a different function. Example:

▲ End time program	Back
▼ Move left in time bar	←
↕ Move right in time bar	→
↕ Select operation mode	↻


Arrow ↓ in display points to current time in time bar 0-24 hrs

Arrow ↑ shows the relevant operation mode

23

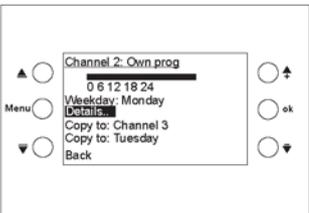

↓

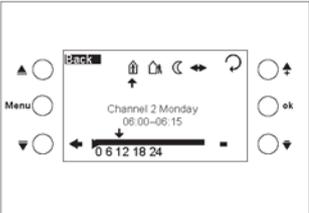

### Set time program

### Set own program


The buttons now have a different function (see p. 23).

### Details


Using the Details .. menu, you can change the operation mode or switching status or time.

- With ↕ select the operating mode or with ↕ or ↕ set the desired time.
- Confirm with ok.

24

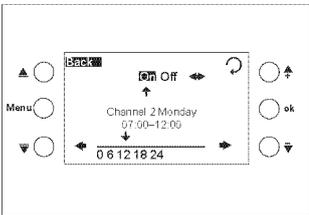

↓

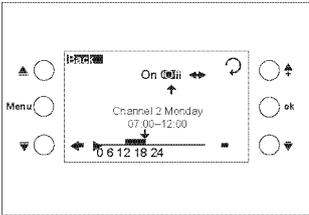


### Set specific times


e.g. set time from 7:00–12:00 (ON) GB

- With ▾ set the arrow to 7:00 am.
- With ▲ select **On**.
- With ▾ set the arrow to 12:00 am.
- Confirm with ok.

25

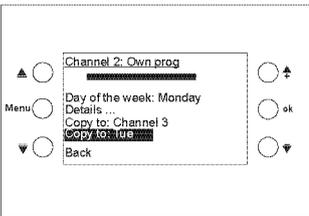

↓

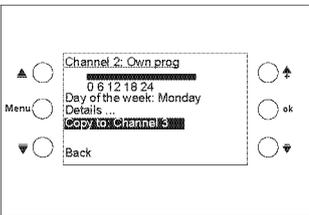

### Copy to: Tuesday (example)


- With the push buttons ▲ ▾ select **Copy to: Tuesday**
- With ▲ ▾ set the day of the week.
- Confirm with ok.

### Copy to: Channel 3 (example)

- With the push buttons ▲ ▾ select **Copy to: Channel 3**
- With ▲ ▾ set the channel.
- Confirm with ok.

The whole weekly program is copied.

26

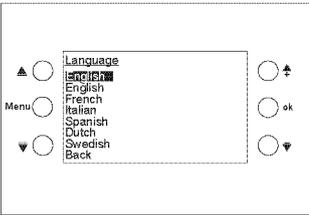


### Setting the language

**GB**

- With ▲ ▼ select desired line.
- Confirm with ok.


  

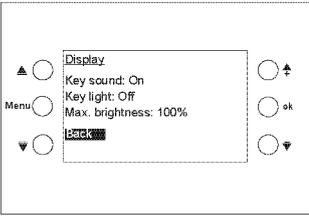

### Setting the display

- With ▲ ▼ select desired line.
- With ▲ ▼ change the value.
- Confirm with ok.

27

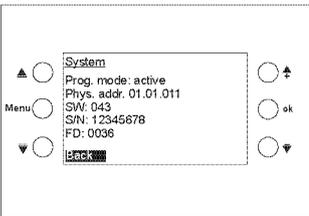

### System

Professional electrician operation only!

- Prog. mode: with ▲ ▼ change.
- Phys. add. (physical address)
- SW (Software version)
- S/N (Serial number)
- FD (Finishing date)

28

### Technical data

#### Mains power supply (optional)

- Rated voltage: 230 V AC, +10 % -10 %
- Frequency: 50 Hz
- Current consumption: <1.5 VA

#### Bus power supply

- Operating voltage: Bus voltage
- Current consumption: <10 mA  
<20 mA (without mains power supply)
- Bus terminal: bus connection
- Power reserve: 1.5 years
- Permissible ambient temperature: 0 °C ... +45 °C
- Protection class: II in accordance with EN 60669 subject to correct installation
- Protection rating: IP 20 in accordance with EN 60529

The ETS database is available at [www.theben.de](http://www.theben.de)  
Please refer to the KNX Handbook for detailed functional descriptions.



### Service address/Hotline

#### Service address

Theben AG  
Hohenbergstr. 32  
72401 Haigerloch  
DEUTSCHLAND  
Tel. +49 7474 692-0  
Fax +49 7474 692-150

#### Hotline

Tel. +49 7474 692-369  
Fax +49 7474 692-207  
hotline@theben.de  
Addresses, telephone numbers etc.  
[www.theben.de](http://www.theben.de)

**Table 1: Set program**

Pro-gramm	Zeit	00:00-01:00	01:00-02:00	02:00-03:00	03:00-04:00	04:00-05:00	05:00-06:00	06:00-07:00	07:00-08:00	08:00-09:00	09:00-10:00	10:00-11:00	11:00-12:00	12:00-13:00	13:00-14:00	14:00-15:00	15:00-16:00	16:00-17:00	17:00-18:00	18:00-19:00	19:00-20:00	20:00-20:00	21:00-22:00	22:00-23:00	23:00-24:00	
		Prog 1 Mo-Fr	Komfort																							
	Standby																									
	Nacht																									
Prog 1 Sa, So	Komfort																									
	Standby																									
	Nacht																									
Prog 2 Mo-Fr	Komfort																									
	Standby																									
	Nacht																									
Prog 2 Sa, So	Komfort																									
	Standby																									
	Nacht																									
Prog 3 Mo-Fr	Komfort																									
	Standby																									
	Nacht																									
Prog 3 Sa, So	Komfort																									
	Standby																									
	Nacht																									